

DVP-S335/S336/S345/ S535D/S735D

RMT-D115E/D115P/D116P/D120E/D1200/D120P

SERVICE MANUAL

Self Diagnosis
Supported model

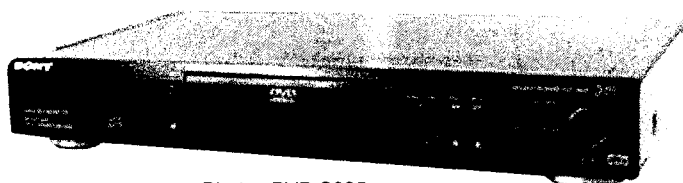


Photo: DVP-S335

AEP Model

UK Model

DVP-S335/S336/S535D/S735D

Russian Model

Saudi Arabia Model

DVP-S335/S735D

E Model

DVP-S335/S345/S735D

Australian Model

DVP-S336/S735D

SPECIFICATIONS

CD/DVD player

Laser Semiconductor laser
Signal format system
PAL/(NTSC)

Audio characteristics

Frequency response

DVD (PCM 96 kHz): 2 Hz to 44 kHz
(± 1 dB)*
DVD (PCM 48 kHz): 2 Hz to 22 kHz
(± 0.5 dB)
CD: 2 Hz to 20 kHz (± 0.5 dB)

Signal-to-noise ratio

More than 110 dB (AUDIO OUT connectors only) (EXCEPT S735D: E, EA, AUS)
More than 115 dB (AUDIO OUT connectors only) (S735D: E, EA, AUS)

Harmonic distortion

Less than 0.003 % (EXCEPT S735D)
Less than 0.0025 % (S735D)

Dynamic range

More than 100 dB (DVD)
More than 97 dB (CD) (EXCEPT S735D)
More than 98 dB (CD) (S735D)

Wow and flutter

Less than detected value
(± 0.001 % W PEAK)

Outputs

| | Jack type | Output level | Load impedance |
|--|--------------------------|--|--|
| AUDIO OUT | Phono jacks | 2 Vrms (at 50 kilohms) | Over 10 kilohms |
| DIGITAL OUT (OPTICAL) | Optical output connector | -18 dBm | Wave length: 660 nm |
| DIGITAL OUT (COAXIAL) | Phono jack | 0.5 Vp-p | 75 ohms terminated |
| VIDEO OUT | Phono jacks | 1.0 Vp-p | 75 ohms, sync negative |
| S VIDEO OUT | 4-pin mini DIN | Y: 1.0 Vp-p C: 0.3 Vp-p (PAL) C: 0.286 Vp-p (NTSC) | 75 ohms, sync negative 75 ohms terminated |
| 5.1CH OUTPUT (S535D/S735D) | Phono jack | 2 Vrms (at 50 kilohms) | Over 10 kilohms |
| PHONES (S535D/S735D) | Phone jack | 12 mW | 32 ohms |
| COMPONENT VIDEO OUT (Y, Cb/B-Y, Cr/R-Y) (S335: E, EA/S336: AUS/S345/S735D) | Phono jacks | Y: 1.0 Vp-p Cb/B-Y Cr/R-Y 0.7 Vp-p | 75 ohms, sync negative 75 ohms |
| AUDIO OUT (WOOFER) (S335/S336/S345) | Phono jack | 2 Vrms (at 50 kilohms) | Over 10 kilohms |

— Continued on next page —



CD/DVD PLAYER

MC-Service

SONY®

General

Power requirements

220 – 240 V AC, 50/60 Hz

Power consumption

15 W (S335/S336/S345)

16 W (S735D: E, EA, AUS)

17 W (S535D/S735D: AEP, UK, RU)

Dimensions (approx.)

430 × 69 × 252 mm (17 × 2³/₄ × 10 in.)

(S335/S336/S345)

430 × 69 × 260 mm (17 × 2³/₄ × 10¹/₄ in.) (S535D)

430 × 74 × 260 mm (17 × 3 × 10¹/₄ in.) (S735D)

(w/h/d) incl. projecting parts

Mass (approx.)

2.8 kg (6 lb 3 oz) (S335/S336/S345)

2.9 kg (6 lb 6 oz) (S535D)

3.1 kg (6 lb 13 oz) (S735D)

Operating temperature

5 °C to 35 °C

Operating humidity

25 % to 80 %

Supplied accessories

- Audio/video connecting cord (1)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)
- S video cord (1) (S535D/S735D)

* The signals from AUDIO OUT connectors are measured. When you play PCM sound tracks with a 96 kHz sampling frequency, the output signals from the DIGITAL OUT (OPTICAL, COAXIAL) are converted to 48 kHz (sampling frequency).
(S335/S336/S345)

Design and specifications are subject to change without notice.

WARNING!!

 


WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 25 cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

CAUTION:

The use of optical instrument with this product will increase eye hazard.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

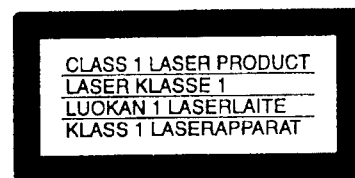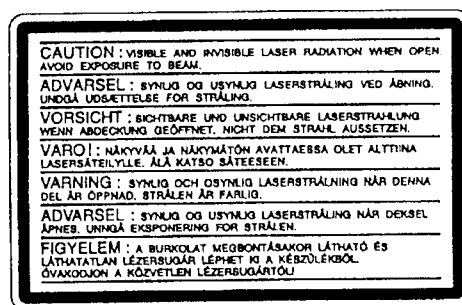

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


TABLE OF CONTENTS

| <u>Section</u> | <u>Title</u> | <u>Page</u> | <u>Section</u> | <u>Title</u> | <u>Page</u> |
|---|--------------|-------------|---|--------------|-------------|
| Service Note | | 4 | HS16S9E Printed Wiring Board | | 4-59 |
| | | | HS16S9E Schematic Diagram | | 4-61 |
| 1. GENERAL | | | 5. IC PIN FUNCTION DESCRIPTION | | |
| Getting Started | | 1-1 | 5-1. System Control Pin Function | | |
| Playing Discs | | 1-4 | (MB-86 Board IC102) | | 5-1 |
| Using Various Functions with the Control Menu | | 1-6 | 6. TEST MODE | | |
| Settings and Adjustments | | 1-11 | 6-1. General Description | | 6-1 |
| 2. DISASSEMBLY | | | 6-2. Starting Test Mode | | 6-1 |
| 2-1. Case Removal | | 2-1 | 6-3. Syscon Diagnosis | | 6-1 |
| 2-2. Rear Panel Removal | | 2-1 | 6-4. Drive Auto Adjustment | | 6-5 |
| 2-3. Tray Cover Removal | | 2-1 | 6-5. Drive Manual Operation | | 6-7 |
| 2-4. Front Panel Removal | | 2-1 | 6-6. Mecha Aging | | 6-9 |
| 2-5. Power Block Removal | | 2-2 | 6-7. Emergency History | | 6-9 |
| 2-6. Mechanism Deck Removal | | 2-2 | 6-8. Version Information | | 6-10 |
| 2-7. Tray Removal | | 2-2 | 6-9. Video Level Adjustment | | 6-10 |
| 2-8. Optical Pick-up Removal | | 2-2 | 6-10. If Con Self Diagnostic Function | | 6-11 |
| 2-9. Belt, MB-86 Board, Loading Motor (M001), | | | | | |
| MS-48 Board Removal | | 2-3 | 7. ELECTRICAL ADJUSTMENT | | |
| 2-10. AI-17 Board Removal | | 2-3 | 7-1. Power Supply Adjustment | | 7-1 |
| 2-11. Internal Views | | 2-4 | 1. HS16S9E Board | | 7-1 |
| 2-12. Circuit Boards Location | | 2-5 | 7-2. Adjustment of Video System | | 7-2 |
| 3. BLOCK DIAGRAMS | | | 1. Video Level Adjustment | | 7-2 |
| 3-1. Overall Block Diagram | | 3-1 | 2. S-terminal Output Check | | 7-2 |
| 3-2. RF/Servo Block Diagram | | 3-3 | 3. Checking Component Video Output B-Y | | 7-2 |
| 3-3. Signal Processor Block Diagram | | 3-5 | 4. Checking Component Video Output R-Y | | 7-2 |
| 3-4. System Control Block Diagram | | 3-7 | 5. Checking Component Video Output Y | | 7-3 |
| 3-5. Audio (1) Block Diagram | | 3-9 | 6. Checking RGB Output R | | 7-3 |
| 3-6. Video/Audio (2) Block Diagram | | 3-11 | 7. Checking RGB Output G | | 7-3 |
| 3-7. Interface Control Block Diagram | | 3-13 | 8. Checking RGB Output B | | 7-3 |
| 3-8. Power Block Diagram | | 3-15 | 9. Checking S Video output S-C | | 7-4 |
| 4. PRINTED WIRING BOARDS AND SCHEMATIC | | | 7-3. Adjustment Related Parts Arrangement | | 7-6 |
| DIAGRAMS | | | 8. REPAIR PARTS LIST | | |
| 4-1. Frame Schematic Diagrams | | 4-3 | 8-1. Exploded Views | | 8-1 |
| 4-2. Printed Wiring Boards and Schematic Diagrams | | 4-5 | 8-1-1. Case Assembly (S335/S336/S345/S535D) | | 8-1 |
| MS-48 Printed Wiring Board and | | | 8-1-2. Case Assembly (S735D) | | 8-2 |
| Schematic Diagram | | 4-5 | 8-1-3. Chassis Assembly | | 8-3 |
| MB-86 Printed Wiring Board | | 4-7 | 8-1-4. Mechanism Deck Section | | 8-5 |
| MB-86 (RF AMP, SERVO) Schematic Diagram | | 4-11 | 8-2. Electrical Parts List | | 8-6 |
| MB-86 (ARP) Schematic Diagram | | 4-13 | | | |
| MB-86 (AV DECODER) Schematic Diagram | | 4-15 | | | |
| MB-86 (SDRAM) Schematic Diagram | | 4-17 | | | |
| MB-86 (VGA) Schematic Diagram | | 4-19 | | | |
| MB-86 (DRIVE) Schematic Diagram | | 4-21 | | | |
| MB-86 (SERVO DSP) Schematic Diagram | | 4-22 | | | |
| MB-86 (SYSTEM CONTROL) | | | | | |
| Schematic Diagram | | 4-25 | | | |
| MB-86 (MEMORY, CLOCK GENERATOR) | | | | | |
| Schematic Diagram | | 4-27 | | | |
| MB-86 (FGA) Schematic Diagram | | 4-29 | | | |
| MB-86 (AUDIO DSP) Schematic Diagram | | 4-31 | | | |
| AI-17 Printed Wiring Board | | 4-33 | | | |
| AI-17 (VIDEO BUFFER) Schematic Diagram | | 4-35 | | | |
| AI-17 (D/A CONVERTER, DSP) | | | | | |
| Schematic Diagram | | 4-37 | | | |
| AI-17 (AMP, LPF) Schematic Diagram | | 4-39 | | | |
| AI-17 (D/A CONVERTER) Schematic Diagram | | 4-41 | | | |
| AI-17 (MODE CONTROL, POWER SUPPLY) | | | | | |
| Schematic Diagram | | 4-43 | | | |
| AI-17 (IF CON) Schematic Diagram | | 4-45 | | | |
| ER-9 Printed Wiring Board | | 4-47 | | | |
| ER-9 (EURO AV1) Schematic Diagram | | 4-51 | | | |
| ER-9 (EURO AV2) Schematic Diagram | | 4-53 | | | |
| HP-127 Printed Wiring Board | | 4-56 | | | |
| HP-127 Schematic Diagram | | 4-57 | | | |

SERVICE NOTE

1. DISASSEMBLY

- This set can be disassembled in the order shown below.

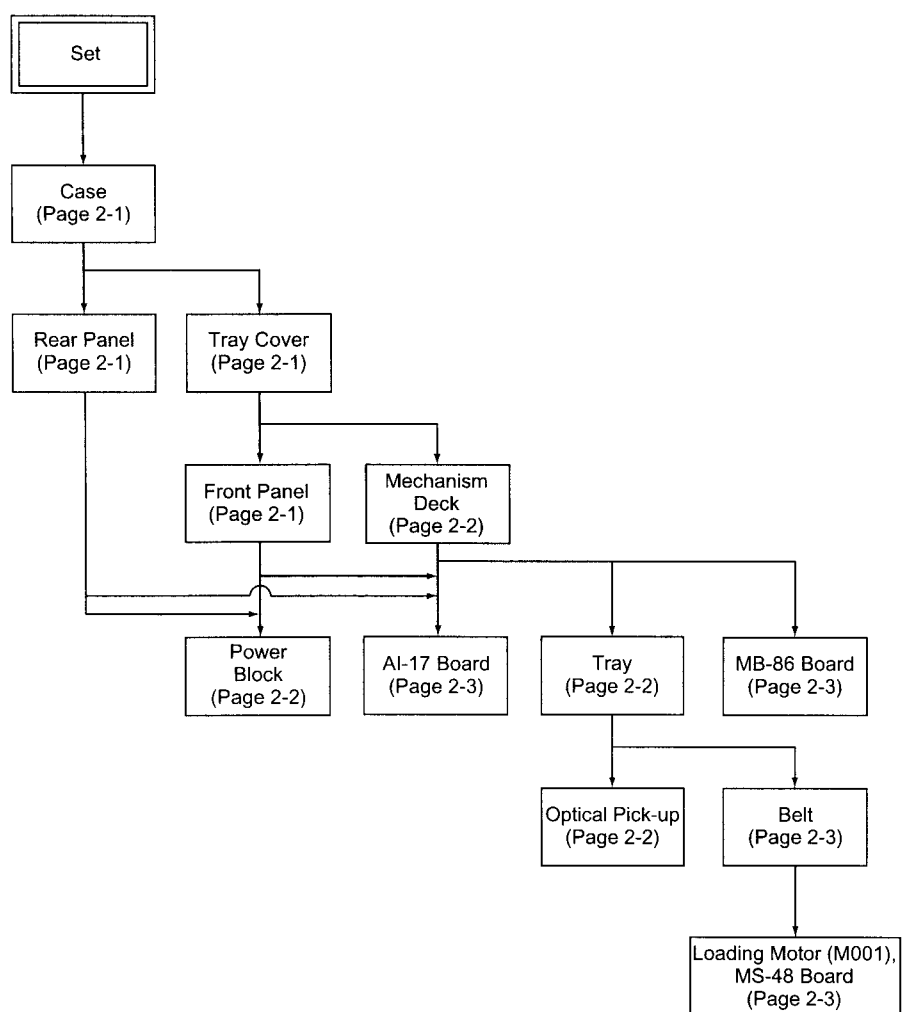

2. DISC REMOVAL PROCEDURE (at POWER OFF)

- 1) Insert a tapering driver into the aperture of the unit bottom, and move the lever of chuck cam in the direction of the arrow (A). (See Fig. 1)
- 2) Draw out the tray in the direction of the arrow (B), and remove a disc. (See Fig. 1)

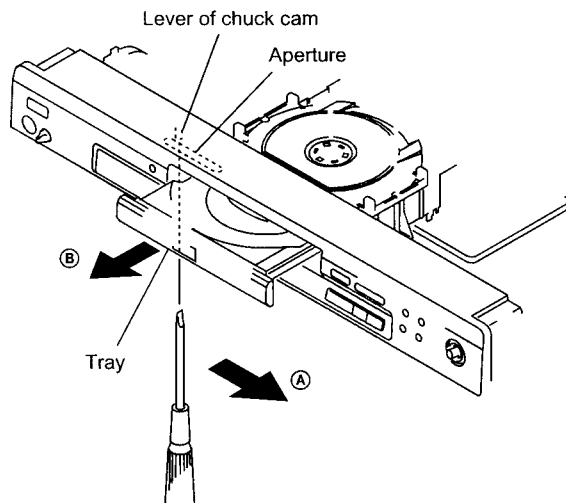


Fig. 1

3. HOW TO SERVICE MB-86 BOARD

- 1) Remove the case from the set. (Refer to 2-1)
- 2) Remove the mechanism deck. (Refer to 2-6)
- 3) Remove the MB-86 board. (Refer to 2-9)
- 4) Set the CK-MD board as shown in Fig. 2.

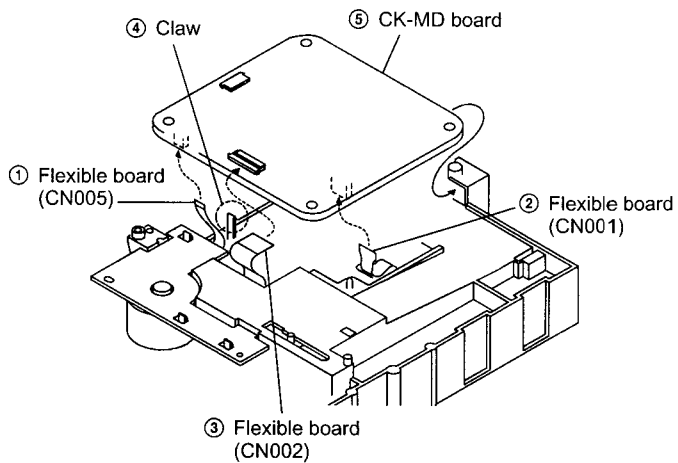


Fig. 2

- 5) Set the MB-86 board as shown in Fig. 3.

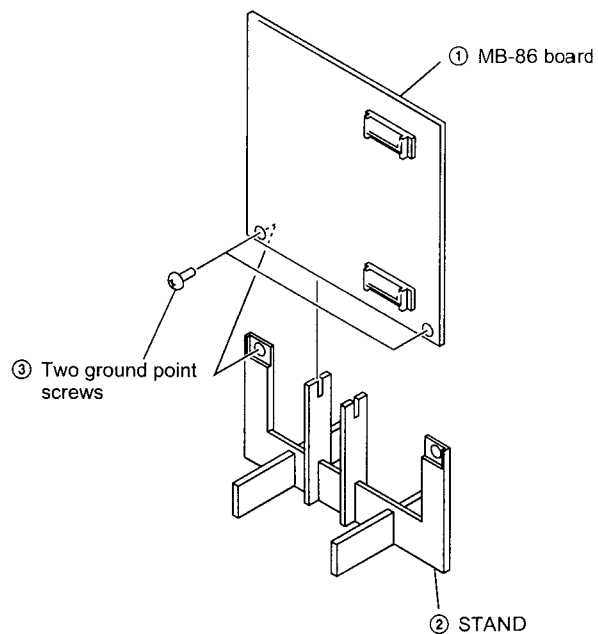


Fig. 3

6) Set the CK-MB board as shown in Fig. 4.

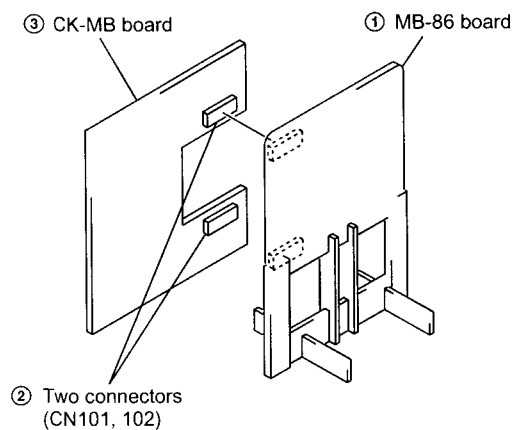


Fig. 4

8) Set the mechanism deck as shown in Fig. 6.

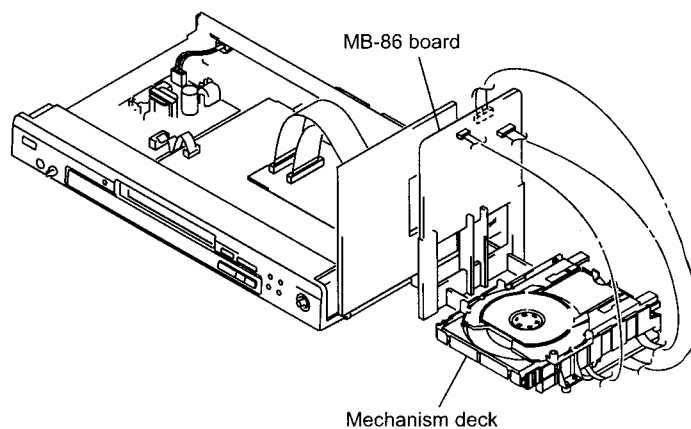


Fig. 6

7) Set the CK-AI board as shown in Fig. 5.

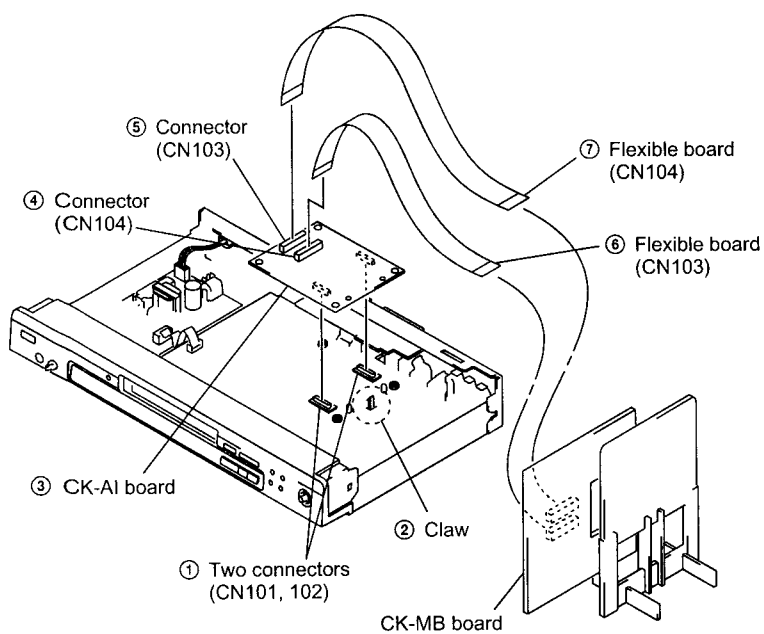


Fig. 5

SECTION 1 GENERAL

This section is extracted from DVP-S335/
S336 instruction manual (3-059-581-11).

About This Manual

Conventions

- Instructions in this manual describe the controls on the player.
- You can also use the controls on the remote if they have the same or similar names as those on the player.
- The icons on the right are used in this manual.

| Icon | Meaning |
|------|--|
| | Indicates that you can use only the remote to do the task. |
| | Indicates tips and hints for making the task easier. |
| | Indicates that the function is for DVD VIDEOs. |
| | Indicates that the function is for VIDEO CDs. |
| | Indicates that the function is for Audio CDs. |

This Player Can Play the Following Discs

| | DVD VIDEOs | | VIDEO CDs | | Audio CDs | |
|-----------|---|--|---------------|---------|-----------|------------------|
| Disc logo | | | | | | |
| Contents | Audio + Video | | Audio + Video | | Audio | |
| Disc size | 12 cm | 8 cm | 12 cm | 8 cm | 12 cm | 8 cm (CD single) |
| Play time | About 4 h (for single-sided DVD)/ about 8 h (for double-sided DVD) | About 80 min. (for single-sided DVD)/ about 160 min. (for double-sided DVD) | 74 min. | 20 min. | 74 min. | 20 min. |

The "DVD VIDEO" logo is a trademark.

When you play an NTSC disc, this player outputs the video signal in the NTSC system only. In this case, if your TV uses the PAL system, the picture becomes noisy.

Region code of DVD-Vs you can play on this unit

Your DVD player has a region code printed on the back of the unit and will only play DVD-Vs that are labeled with identical region codes.

DVDs labeled will also play on this unit.

If you try to play any other DVD, the message "Playback prohibited by area limitations" will appear on the TV screen.

Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.

Note on playback operations of DVD-Vs and VIDEO CDs

Some playback operations of DVD-Vs and VIDEO CDs may be intentionally fixed by software producers. Since this player plays DVD-Vs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the DVD-Vs or VIDEO CDs.


4

Terms for discs

- Title**
The longest section of a picture or music feature on a DVD, the movie, etc. in video software, or the name of an album in audio software.

- Chapter**
Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

- Track**
Sections of a picture or a music feature on a VIDEO CD or a CD. Each track is assigned a track number enabling you to locate the track you want.

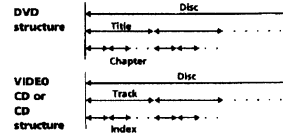

- Index (CD) / Video Index (VIDEO CD)**

A number that divides a track into sections to easily locate the point you want on a VIDEO CD or a CD. Depending on the disc, no indexes may be recorded.

- Scene**

On a VIDEO CD with PBC (playback control) functions, the menu screens, moving pictures and still pictures are divided into sections called "scenes." Each scene is assigned a scene number enabling you to locate the scene you want.

Note on PBC (Playback Control) (VIDEO CDs)

This player conforms to Ver. 1.1 and Ver. 2.0 of VIDEO CD standards. You can enjoy two kinds of playback according to the disc type.

| Disc type | You can |
|--|--|
| VIDEO CDs without PBC functions (Ver. 1.1 discs) | Enjoy video playback (moving pictures) as well as music. |
| VIDEO CDs with PBC functions (Ver. 2.0 discs) | Play interactive software using menu screens displayed on the TV screen (PBC Playback), in addition to the video playback functions of Ver. 1.1 discs. Moreover, you can play high-resolution still pictures if they are included on the disc. |

Discs that the player cannot play

The player cannot play discs other than the ones listed in the table on page 4. CD-Rs, CD-ROMs including PHOTO CDs, data sections in CD-EXTRA, DVD-ROMs, DVD-audio, HD (high density) layer of Super Audio CD etc., cannot be played.

When playing DTS-encoded CDs, excessive noise will be heard from the analog stereo outputs. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo outputs of the DVD player are connected to an amplification system. To enjoy DTS Digital Surround playback, an external 5.1-channel DTS Digital Surround™ decoder system must be connected to the digital output of the DVD player.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

* "DTS" is a trademark of Digital Theater Systems, Inc.

5

Precautions

On safety

- Caution** - The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- Should the AC power cord (mains lead) need to be changed, have it done at a qualified service shop only.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

On adjusting volume

- Do not turn up the volume while listening to a portion with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level portion is played.

On cleaning

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

IMPORTANT NOTICE

Caution: The enclosed DVD player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

Notes About the Discs

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.
- If there is glue (or a similar substance) on the disc, remove the glue completely before using the disc.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

On novelty discs

- Do not use irregularly shaped CDs such as heart- or star-shaped CDs as they may cause the player to malfunction.

Getting Started


This section describes how to hook up the CD/DVD player to a TV (with audio/video input jacks) and/or an AV receiver (amplifier). You cannot connect this player to a TV which does not have a video input connector. Be sure to turn off the power of each component before making the connections.

Unpacking

- Check that you have the following items:
- Audio/video connecting cord (1)
 - Remote commander (remote) RMT-D115P (1)
 - R6 (size AA) batteries (2)

Inserting batteries into the remote

You can control the player using the supplied remote. Insert two R6 (size AA) batteries by matching the + and - ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor on the player.

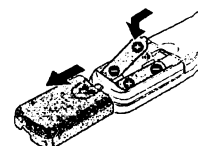

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote case, particularly when replacing the batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

6

7

TV Hookups

This connection is for listening to the sound through TV speakers (L, left, R, right). Refer to the instructions supplied with the component to be connected. You cannot connect this player to a TV without a SCART (EURO AV) connector or a video input connector.


You can enjoy surround sound with built-in TV speakers only
You can use 3D sound imaging to create virtual rear speakers from the sound of built-in TV speakers without using actual rear speakers (VES Virtual Enhanced Surround TV). For details, see page 36.

Required cords


SCART (EURO AV) connecting cord (not supplied) (1)
Be sure to make connections firmly to avoid hum and noise. Refer to the instructions supplied with the TV to be connected.

Notes

- When you set "LINE" to "S VIDEO" or "RGB" under "CUSTOM SETUP" in the setup display, use a SCART (EURO AV) connecting cord that conforms to each signal.
- When you connect using the SCART (EURO AV) connecting cord, confirm that the TV corresponds to S VIDEO or RGB. Refer to the instructions supplied with the TV to be connected as well.

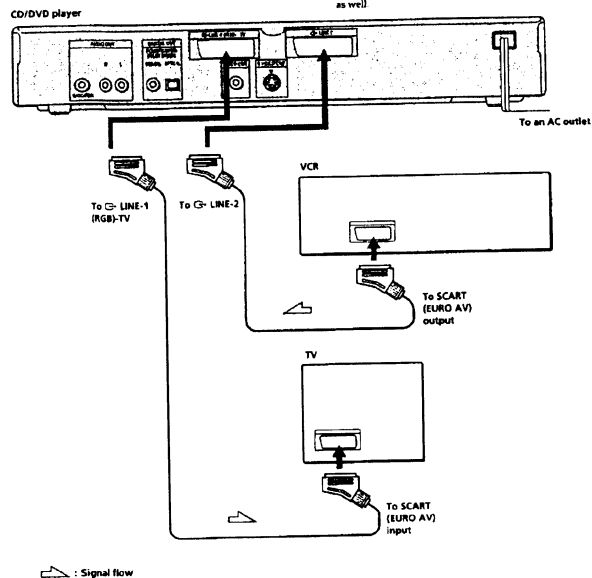

If your TV has two SCART (EURO AV) connectors

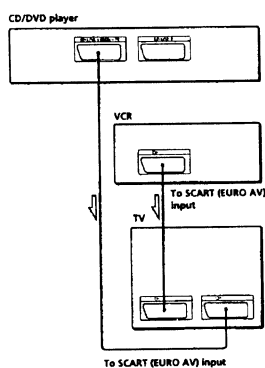


If your TV has no SCART (EURO AV) connectors

You can connect the player to a TV (with audio/video input jacks) using the supplied audio/video connecting cord. If your TV has an S video input connector, connect the component via the S VIDEO OUT connector using an S video cord (not supplied) instead of the video connecting cord. You will get a better picture. When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Yellow (video) to Yellow, Red (right) to Red and White (left) to White.

Audio/video connecting cord (supplied) (1)


Yellow (video) to Yellow
White (L) to White (L)
Red (R) to Red (R)

 To listen to the sound through TV speakers



If your TV has an S video input connector

S video cord (not supplied) (1)

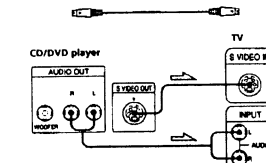


8

9

TV Hookups

Notes

 - Refer to the instructions supplied with the component to be connected.
- Do not connect this player to a video deck. If you do, noise may appear in the picture.



- Depending on the TV or receiver (amplifier), sound distortion may occur because the audio output level is high. In this case, set "AUDIO ATT" in "AUDIO SETUP" to "ON" in the setup display. For details, see page 55.
- If you cannot view the pictures from a VCR through this player which is connected to a TV with RGB component connectors, set "G1" to "S (Audio/Video)" on your TV. When you select "RGB", the TV cannot receive the signal from the VCR.
- If you want to use your VCR's SmartLink function, connect the VCR to your TV's SmartLink connector and connect the CD/DVD player to the TV with another connector.
- When you connect the player to your TV via the SCART (EURO AV) connectors, the TV's input source is set to the player automatically when you start playback or press any button except for (D) on the player or (I/O) on the remote. In this case, press TV/DVD on the remote to return the input to the TV.

Setups for the player

Some setup adjustments are necessary for the player depending on the TV or other components to be connected.

Use the setup display to change the various settings. For details on using the setup display, see page 46.

- To connect the player to a wide-screen TV
In the setup display, set "TV TYPE" in "SCREEN SETUP" to "16:9" (default setting). For details, see page 50.
- To connect the player to a normal TV
In the setup display, set "TV TYPE" in "SCREEN SETUP" to "4:3 LETTER BOX" or "4:3 PAN SCAN". For details, see page 50.
- To connect the player to a TV or VCR via a SCART (EURO AV) connector that conforms to the S video signals or RGB signals
In the setup display, set "LINE" in "CUSTOM SETUP" to "S VIDEO" or "RGB." For details, see page 51.

When you play a disc recorded in the NTSC color system, the player outputs the video signal or the setup display etc. in the NTSC color system and the picture may not appear on PAL color system televisions. In this case, open the disc tray and remove the disc.

Receiver (Amplifier) Hookups

This connection is for listening to the sound through speakers connected to a receiver lacking a built-in DTS, Dolby® Digital or MPEG decoder. Refer to the instructions supplied with the component to be connected as well.

You can enjoy surround sounds even if you connect front speakers only
You can use 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (VES Virtual Enhanced Surround). For details, see page 36.

If you have a digital component with a built-in DTS, Dolby Digital or MPEG decoder
You can enjoy multi-channel surround sound by connecting the component via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord (not supplied). For details on hookups and settings, see page 14.

If you have a digital component with a built-in DTS, Dolby Digital or MPEG decoder
You can enjoy multi-channel surround sound by connecting the component via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord (not supplied). For details on hookups and settings, see page 14.

Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories. All rights reserved.

Required cords

Audio connecting cord (not supplied) (1)

White (L) to White (L)
Red (R) to Red (R)


S video cord (not supplied) (1)

When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Red (right) to Red and White (left) to White. Be sure to make connections firmly to avoid hum and noise.

If you have a digital component such as a receiver (amplifier) with a digital connector, DAT or MD, connect the component via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord (not supplied).

Optical digital connecting cord (not supplied) (1)

Coaxial digital connecting cord (not supplied) (1)

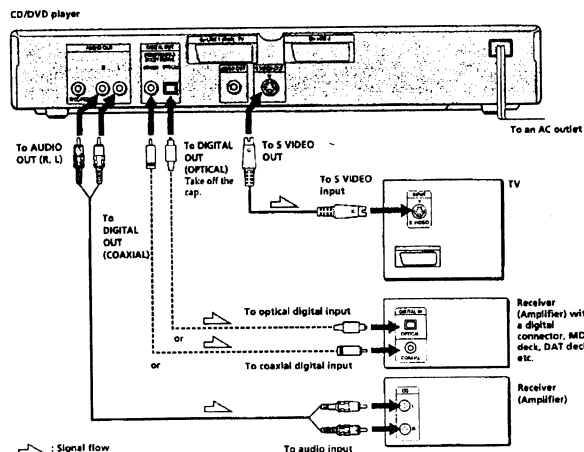

10

MC-Service

1-2

11

Receiver (Amplifier) Hookups

Notes

- You cannot enjoy a picture with an S video signal if your TV does not conform to the S video signal. When your TV does not have an S VIDEO input, connect the component via the VIDEO INPUT connector using the video connecting cord (not supplied) instead of the S video cord. For details, see page 9.
- Refer to the instructions supplied with your TV.
- Refer to the instructions supplied with the component to be connected.
- You cannot make digital audio recordings of disc recorded in multi-channel surround format directly using an MD deck or DAT deck.
- When you connect the component via the DIGITAL OUT OPTICAL or COAXIAL connector, set Virtual Enhanced Surround (VES) to "OFF." Otherwise, the player will not output signals from the DIGITAL OUT OPTICAL or COAXIAL connector.


When you have made the connections using an optical or coaxial digital connecting cord, do not set "DOLBY DIGITAL" to "DOLBY DIGITAL," "MPEG" to "MPEG" and "DTS" to "ON." If you do, a loud noise will suddenly come out from the speakers, affecting your ears or causing the speakers to be damaged.

Setups for the player

Some setup adjustments are necessary for the player depending on the components to be connected. Use the setup display to change the various settings. For details on using the setup display, see page 46.

- To listen to the sound through speakers connected to a receiver (amplifier) which has a digital connector and lacks a built-in DTS, Dolby Digital or MPEG decoder, or to output the sound to a digital component such as a DAT or MD deck.

Set the "AUDIO SETUP" items in the setup display (page 55) as shown in the illustration below. These are the default settings.

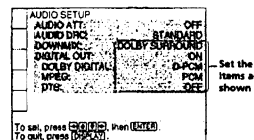

Set "VES" to "OFF" in the Control Menu display (page 36). When you select the VES mode other than "OFF," the Virtual Enhanced Surround (VES) effect cannot be heard.

Note

When you output the signals which do not reproduce the Dolby Surround (Pro Logic) effect from the DIGITAL OUT OPTICAL or COAXIAL connector, set "DOWNDRC" to "NORMAL" in "AUDIO SETUP" in the setup display (page 56).

2+1 Channel Surround Hookups

 
This connection is for listening to the sound through the left and right speakers of the TV, or speakers connected to a receiver and the subwoofer. You can enjoy rich bass frequencies by connecting a subwoofer. Refer to the instructions supplied with the component to be connected.

Set "SUBWOOFER" in "SPEAKER SETUP" to "YES" in the setup display (page 57). Then set "FRONT SPEAKER SIZE" to "TV" when you use the TV's speakers, or to "LARGE," "MIDDLE" or "SMALL" when you use the speakers connected to the receiver.


You can enjoy surround sound with front speakers only. You can use 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (Virtual Enhanced Surround). For details, see page 36.

Required cords

Audio connecting cord (not supplied) (1)




S video cord (not supplied) (1)

 

When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Red (right) to Red and White (left) to White. Be sure to make connections firmly to avoid hum and noise.

Monaural audio cord (not supplied) (1)

One for a subwoofer

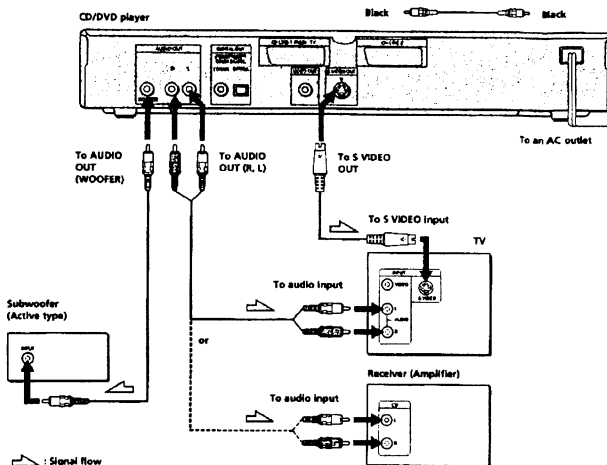

Note
You cannot enjoy a picture with an S video signal if your TV does not conform to the S video signal. When your TV does not have an S VIDEO input, connect the component via the VIDEO INPUT connector using the video connecting cord (not supplied) instead of the S video cord. For details, see page 9. Refer to the instructions supplied with your TV.

12

13

5.1 Channel Surround Hookups

With DVDs which contain DTS, Dolby Digital or MPEG AUDIO sound, you can enjoy the surround sound while producing the effect of being in a movie theater or a concert hall using a digital component with a built-in DTS, Dolby Digital or MPEG decoder (not supplied). The player outputs the surround sound signals from the DIGITAL OUT OPTICAL and COAXIAL connectors. Using a receiver (amplifier) having the OPTICAL or COAXIAL connector and 6 speakers, you can enjoy even greater real audio presence in the comfort of your own home.

Note

When a DVD has a sound track with 7.1 channels recorded in MPEG AUDIO format, the output audio signals are mixed down to 5.1 channels.

Required cords

Optical digital connecting cord* (not supplied) (1)



Coaxial digital connecting cord* (not supplied) (1)



S video cord (not supplied) (1)



- Connect the component via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord (not supplied). You do not need to connect both of these cords. See the figure on the next page.

Notes

- Do not connect the power cord to an AC outlet or press the POWER switch before completing all connections.
- Refer to the instructions supplied with the component to be connected.
- The cord connectors should be fully inserted into the jacks. Loose connection may cause hum and noise.


Setups for the player

Some setup adjustments are necessary for the player depending on the components to be connected. Use the setup display to change the various settings. For details on using the setup display, see page 46.

- When you connect an audio component with a built-in Dolby Digital decoder ①
Set "DIGITAL OUT" in "AUDIO SETUP" to "ON" and then set "DOLBY DIGITAL" to "DOLBY DIGITAL" in the setup display. (page 56)


- When you connect an audio component with a built-in MPEG decoder ②
Set "DIGITAL OUT" in "AUDIO SETUP" to "ON" and then set "MPEG" to "MPEG" in the setup display. (page 56)

- When you connect an audio component with a built-in DTS decoder ③
Set "DIGITAL OUT" in "AUDIO SETUP" to "ON" and then set "DTS" to "ON" in the setup display. (page 56)

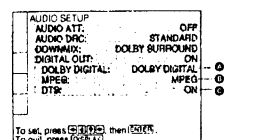

Notes

- When you do not connect an audio component with a built-in Dolby Digital decoder do not set "DOLBY DIGITAL" to "DOLBY DIGITAL."
- When you do not connect an audio component with a built-in MPEG decoder do not set "MPEG" to "MPEG."
- When you do not connect an audio component with a built-in DTS decoder do not set "DTS" to "ON."

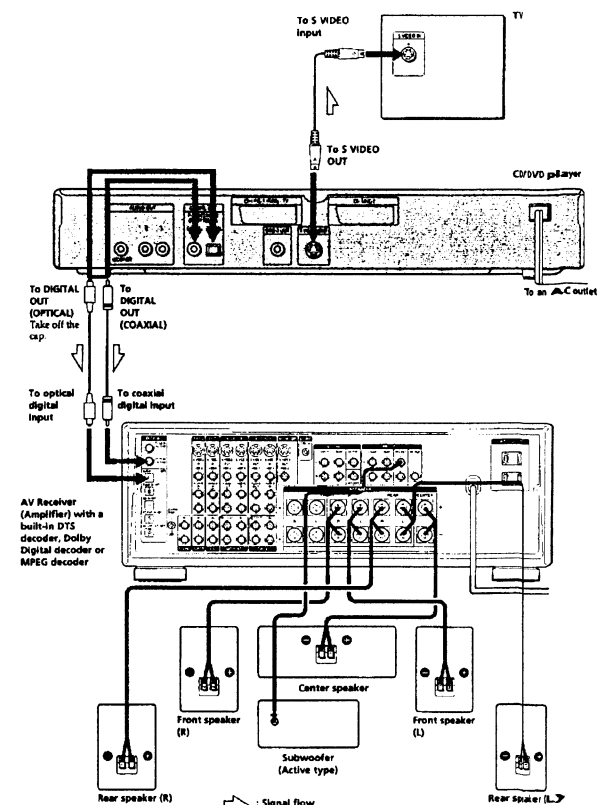


14


15

Selecting the Language for the On-Screen Display


You can select the language for the setup display, the Control Menu display or the messages displayed on the screen. The default setting is "ENGLISH."

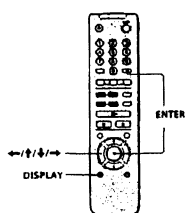


- When the player is in stop mode, press DISPLAY and select "SETUP" using the directional pad. The on-screen menu items are different depending on whether there is a disc in the player or not.

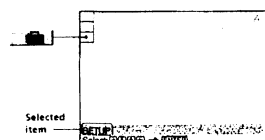


- Press ENTER. The setup display appears on the TV screen.

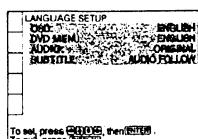


- Select "LANGUAGE SETUP" using the directional pad, then press ENTER.

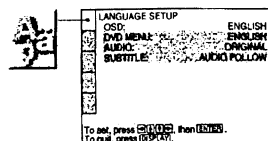

- Select "OSD" using the directional pad, then press ENTER. The languages you can select are displayed. These languages are different depending on the player model.

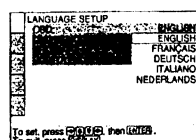

- Select the desired language using the directional pad, then press ENTER.

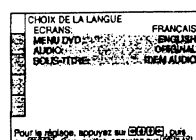

- Press DISPLAY. The setup display disappears.

- Press DISPLAY repeatedly to turn off the on-screen menu.

To return to the previous screen Press RETURN.


To quit while making a selection Press DISPLAY.

Note
The languages you can select are the ones displayed in step 4. For details, see page 49.

Operation Sound Effects (Sound Feedback)

The player beeps when the following operations are performed. The default setting of the Sound Feedback function is set to off.

| Operation | Operation sound |
|---------------------------|-----------------|
| Power is turned on | One beep |
| Power is turned off | Two beeps |
| [>] is pressed | One beep |
| [II] is pressed | Two beeps |
| Playback is stopped | One long beep |
| Operation is not possible | Three beeps |

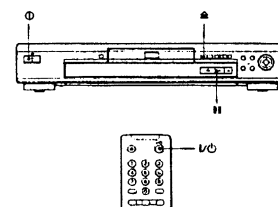

- Press ① on the player then press I/O on the remote. The power indicator lights up in green. When there is a disc in the player, press II and remove the disc. Then press II again to close the disc tray.
- Press and hold II on the player for more than two seconds. You will hear one beep and the Sound Feedback function is turned on.

To turn off the Sound Feedback Function
When there is no disc in the player, press and hold II on the player for more than two seconds. You will hear two beeps and the Sound Feedback function is turned off.

16

17


Playing Discs

This chapter describes how to play a DVD/CD/VIDEO CD.

When you play a disc recorded in the NTSC color system, the player outputs the video signal or the setup display etc. in the NTSC color system and the picture may not appear on PAL color system televisions. In this case, open the disc tray and remove the disc.


Playing Discs DVD VIDEO CD

Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the instructions supplied with your disc.

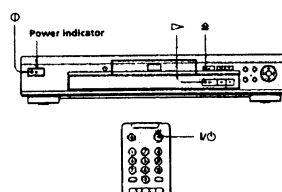

- Turn on your TV. Turn on the TV and select the video input so that you can view the pictures from this player.
When using a receiver (amplifier) Turn on the receiver (amplifier) and select the appropriate position so that you can listen to the sound from this player.

 - Press ① on the player. The player enters standby mode and the power indicator lights up in red.
- Press II on the player, and place a disc on the disc tray. The player automatically turns on and the power indicator lights up in green.



- Press >. The disc tray closes and the player starts playback (continuous play). Adjust the volume on the TV or the receiver (amplifier).

After following Step 4
■ When playing a DVD
A DVD menu or title menu may appear on the TV screen (see page 22).
■ When playing a VIDEO CD
A menu may appear on the TV screen depending on the VIDEO CD. You can play the disc interactively, following the instructions on the menu. (PBC Playback, see page 23.)

To turn on the player
Press ① on the player. The player enters standby mode and the power indicator lights up in red. Then press I/O on the remote. The player turns on and the power indicator lights up in green. In standby mode, the player also turns on by pressing II on the player or by pressing >.


 
To turn off the player
Press I/O on the remote. The player enters standby mode and the power indicator lights up in red. To disconnect the power of the player, press ① on the player.

Notes on playing DTS sound tracks on a CD
• Do not play DTS sound tracks without first connecting the player to an audio component having a built-in DTS decoder. The player outputs the DTS signal via the DIGITAL OUT OPTICAL and COAXIAL connectors even if "DTS" in "AUDIO SETUP" is set to "OFF". In the setup display, and may affect your ears or cause your speakers to be damaged.
• Set the sound to "STEREO" when you play DTS sound tracks on a CD. (See "Changing the Sounds" on page 32.) If you set the sound to "L/R" or "2/R", no sound will come from the DIGITAL OUT OPTICAL and COAXIAL connectors.
• If you play a CD with a DTS sound track, a loud noise may come out from the AUDIO OUT connectors, affecting your ears or causing the speakers to be damaged.

Notes on playing DTS sound tracks on a DVD
The signals of the DTS sound tracks are output from the DIGITAL OUT OPTICAL and COAXIAL connectors only. No sound will output from the AUDIO OUT connectors.
• If the player is connected to an audio component lacking a built-in DTS decoder, do not set "DTS" in "DIGITAL OUT" to "ON" in the setup display. Otherwise, when you play the DTS sound track, a loud noise will come out from the speakers, affecting your ears or causing the speakers to be damaged.
• When you set "DTS" in "AUDIO SETUP" to "OFF", no sound will come out from the DIGITAL OUT OPTICAL and COAXIAL connectors even if you play DTS sound tracks on DVDs.

Notes
• If you leave the player or the remote in pause or stop mode for 15 minutes, the screen saver image appears automatically. To make the screen saver image go away, press >. (If you want to set the screen saver function to off, see page 50.)
• If you don't operate the player or the remote for more than 30 minutes when a disc is not being played, the power is automatically turned off. (Auto Power Off function)
• While playing a disc, do not turn off the player by pressing ①. Doing so may cancel the settings of the menu. When you turn off the player, press II first to stop playback and then press I/O on the remote. After the power indicator lights up in red and the player enters standby mode, press ① on the player.

Additional operations

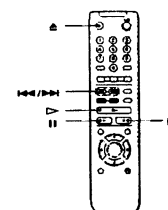

| To | Operation |
|--|---------------|
| Stop | Press II |
| Pause | Press II |
| Resume play after pause | Press II or > |
| Go to the next chapter, track or scene in continuous play mode | Press II |
| Go back to the preceding chapter, track or scene in continuous play mode | Press II |
| Stop play and remove the disc | Press II |


You can play discs in various modes such as Program Play using the on-screen menu (Control Menu). For Control Menu operations, see page 26.

18

19


 
 

 
Searching for a Particular Point on a Disc

You can locate a particular point on a disc quickly by monitoring the picture or playing back slowly.

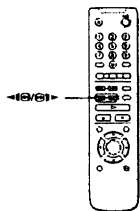

Note
Depending on the DVD/VIDEO CD, you may not be able to do some of the operations described.

Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)

 
 
 
 
 
Press  or  while playing a disc. When you find the point you want, press  to return to normal speed. Each time you press the  or  button during Speed scan, the playback speed changes. Three speeds are available. With each press, the indication changes as follows:

Playback direction
x2 (DVD/CD only) → 1 → 2

Opposite direction
x2 (DVD only) → 1 ← 2 ←

The playback speed of x2 is about twice the normal speed.
The playback speed of x2 is faster than 1.

Locating a point slowly by watching the screen (Slow-motion play)


You can use this function only for DVDs or VIDEO CDs. Press  or  when the player is in the pause mode. When you find the point you want, press  to return to the normal speed. Each time you press the  or  button during Slow-motion play, the playback speed changes. Two speeds are available. With each press, the indication changes as follows:


 
Playback direction
1 → 2

Opposite direction (DVD only)
1 ← 2 ←


The playback speed of 2 is slower than 1.


 
Resuming Playback from the Point Where You Stopped the Disc (Resume Play)


The player remembers the point where you stopped the disc, and when "RESUME" appears on the front panel display, you can resume playback from that point. As long as you do not open the disc tray, Resume Play will work even if the player enters standby mode by pressing  on the remote.

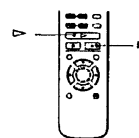
 



Notes

- Resume Play may not be available on some DVDs.
- Resume Play is not available in Shuffle or Program Play mode.
- Depending on where you stopped the disc, the player may resume playback from a different point.
- The point where you stopped playing is cleared when:
 - you open or close the disc tray
 - you turn the power off by pressing  on the player
 - you change the play mode
 - you start playback after selecting a title, chapter or track
 - you change the settings in the setup display

1 While playing a disc, press  to stop playback. "RESUME" appears on the front panel display and "Disc will restart from current point. To start from beginning, press  again." appears on the TV screen. If "RESUME" does not appear, Resume Play is not available.

2 Press .
The player starts playback from the point where you stopped the disc in Step 1.

 To play from the beginning of the disc
When the playing time appears on the front panel display before you start playing, press  to reset the playing time, then press .

20



21


Using the DVD's Menu

Some DVDs have a title menu or a DVD menu that is provided with DVDs only.

Using the title menu

A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the title menu.

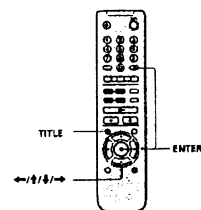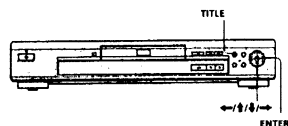



- 1 Press TITLE.
The title menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2 Press  to select the title you want to play.
Depending on the disc, you can use the number buttons to select the title.
- 3 Press ENTER.
The player starts playing the selected title.


Notes


- On some DVDs, you may not be able to select the title.
- On some DVDs, a "title menu" may simply be called a "menu" or "title" in the instructions supplied with the disc. "Press ENTER" may also be expressed as "Press SELECT."

Using the DVD menu

Some DVDs allow you to select the disc contents using a menu. When you play these DVDs, you can select the language for the subtitles, the language for the sound, etc., using the DVD menu.

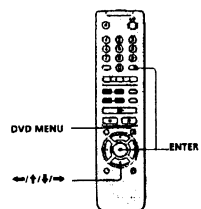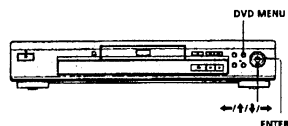





- 1 Press DVD MENU.
The DVD menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2 Press  to select the item you want to change.
Depending on the disc, you can use the number buttons to select the item.
- 3 To change other items, repeat Step 2.
- 4 Press ENTER.


 
 If you want to select the language for the DVD menu
Change the setting using "DVD MENU" in "LANGUAGE SETUP" in the setup display. For details, see page 49.


Note

Depending on the DVD, a "DVD menu" may simply be called a "menu" in the instructions supplied with the disc.

Playing VIDEO CDs with PBC Functions (PBC Playback)





When playing VIDEO CDs with PBC (Play Back Control) functions (Ver. 2.0 discs), you can enjoy simple interactive operations, search functions, and other such operations. PBC Playback allows you to play VIDEO CDs interactively by following the menu on the TV screen. On this player, you can use the number buttons, ENTER, , , , and  during PBC Playback.

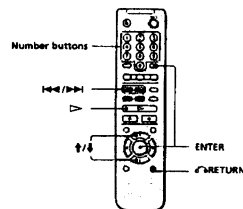

- 1 Start playing a VIDEO CD with PBC functions by following Steps 1 to 4 in "Playing Discs" on page 18.
- 2 Select the item number you want.
Press  to select the item number.
You can also select the item number with the number buttons on the remote.
- 3 Press ENTER.
- 4 Follow the instructions in the menu for interactive operations.
Refer to the instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

To go back to the menu
Press , , or .

     To cancel PBC playback of a VIDEO CD with PBC functions and play the disc in continuous play mode

- There are two ways.
- Before you start playing, select the track you want using  or , then press ENTER or .
 - Before you start playing, select the track number using the number buttons on the remote, then press ENTER or .
- "Play without PBC" appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.

To return to PBC playback, press  twice then press .

Note


Depending on the VIDEO CD, "Press ENTER" in Step 3 may be expressed as "Press SELECT" in the instructions supplied with the disc.

22

23


Using the Front Panel Display

You can check information about the disc, such as the total number of titles or tracks or remaining time, using the front panel display.

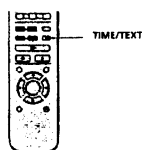


When playing back a DVD

Displaying information while playing the disc

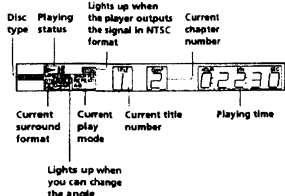

Checking the remaining time

Press TIME/TEXT.
Each time you press TIME/TEXT while playing the disc, the display changes as shown in the following chart.

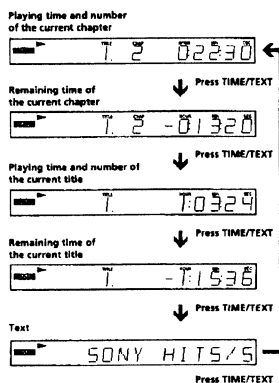


Notes

- On some DVDs, the chapter number or time may not appear or you may not be able to change the front panel display.
- While you are doing Shuffle Play or Program Play, the playing time of the title and the remaining time of the title are not displayed.

When playing back a CD/VIDEO CD

Displaying information while playing a disc

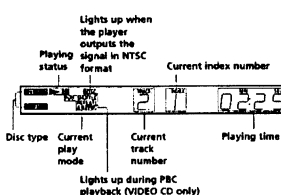


When playing VIDEO CDs with PBC functions

The current scene number is displayed instead of the current track number and the current index number. In this case, the front panel display does not change when you press TIME/TEXT. If TEXT is recorded on the disc, the front panel display changes to Text display when you press TIME/TEXT (see page 31).

Checking the remaining time

Press TIME/TEXT.
Each time you press TIME/TEXT while playing a disc, the display changes as shown in the following chart.

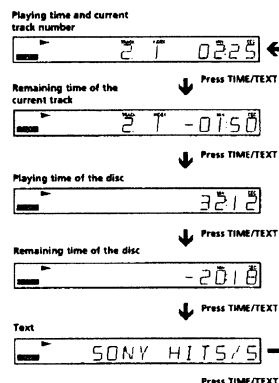

Note

While you are doing Shuffle Play, or Program Play, the playing time of the disc and the remaining time of the disc are not displayed.

24


25

Using Various Functions with the Control Menu


This chapter describes how to play discs in various modes and how to use the convenient features of the on-screen menu (Control Menu).

Using the Control Menu Display


Using the Control Menu display, you can select the start point, play in any order you like, change the angles, make Digital Cinema Sound settings, and other such operations. The possible operations are different depending on the kind of disc.
For details on each Control Menu display item, see pages 28 to 45.

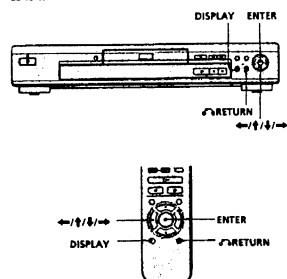


1 Press DISPLAY to show the Control Menu display on the TV screen.

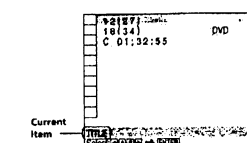


2 Select the item you want using the arrow keys.

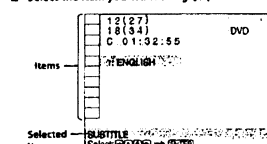


3 Press ENTER.

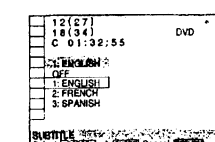

4 Select the item you want using the arrow keys.

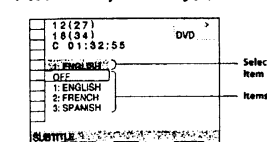


5 Press ENTER.

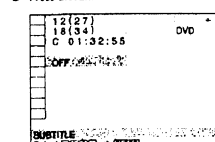

To cancel while making a selection
Press \leftarrow RETURN.

To display other items
Each time you press DISPLAY, the Control Menu display changes as follows:

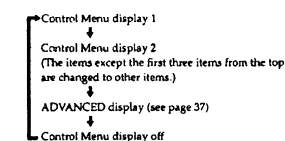

The Control Menu display items are different depending on the disc.

You can select some items directly.
Some items can be selected by pressing the corresponding button on the remote. In this case, only the item you selected is displayed. For instructions on using the remote, see the pages of each relevant item.

Note
Some Control Menu display items require operations other than selecting the setting. For details on these items, see the relevant pages.

26

27

Control Menu Item List

- TITLE (DVD only) (page 29)**
- SCENE (VIDEO CD during PBC playback only) (page 29)**
- TRACK (VIDEO CD only) (page 29)**
- CHAPTER (DVD only) (page 29)**
- INDEX (VIDEO CD only) (page 29)**
- TRACK (CD only) (page 29)**
- INDEX (CD only) (page 29)**

You can search for a point on the DVD by selecting the title, chapter, track, index or scene.

TIME/TEXT (pages 30, 31)
You can check the playing time and remaining time of the current title, chapter, track and the total playing time or remaining time of the disc.
You can also search by inputting the time code.
You can check the DVD TEXT or CD TEXT of the disc on the TV screen and the front panel display.

AUDIO (page 32)
If the DVD is recorded with multilingual tracks, you can select the language you want while playing the DVD.
If the DVD is recorded in multiple audio formats (PCM, Dolby Digital, MPEG or DTS), you can select the audio format you want while playing the DVD.
With multiplex CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

SUBTITLE (DVD only) (page 34)
With DVDs on which multilingual subtitles are recorded, you can change the subtitle language whenever you want while playing the DVD, and turn it on or off whenever you want.

ANGLE (DVD only) (page 35)
With DVDs on which various angles (multi-angles) are recorded, you can change the angle of the scene.

VES (DVD only) (page 36)
Select a mode to enjoy multichannel surround sound such as Dolby Digital and MPEG.
Even if you connect only front speakers, Virtual Enhanced Surround (VES) lets you enjoy 3D sound by using 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers.

ADVANCED (DVD only) (page 37)
You can check the play information about the bit rate or the position where the disc is played (layer).

CUSTOM PARENTAL CONTROL (page 38)
Using the registered password, you can set playback restrictions for desired disc.
The same password is used for both Parental Control (page 52) and Custom Parental Control.

SETUP (page 46)
Using the setup display, you can do the initial setup, adjust the picture and sound and set the various outputs. You can also set a language for the subtitles and the setup display, limit playback by children, and so on. For details about the setup display, see page 46.

PROGRAM (page 48)
You can play the contents of the disc in the order you want by arranging the order of the titles, chapters or tracks on the disc to create your own program.

SHUFFLE (page 42)
You can have the player "shuffle" titles, chapters or tracks and play them in a random order. Subsequent "shuffling" may produce a different playing order.

REPEAT (page 43)
You can play all the titles/tracks on a disc or a single title/chapter/track repeatedly.


A-B REPEAT (page 44)
You can play a specific portion of a title, chapter, or track repeatedly.

Searching for a Title/Chapter/Track/Index/Scene


DVD **VCD** **CD**

You can search by selecting the title, chapter, track, index or scene.


Select "TITLE," "CHAPTER," "TRACK," "INDEX" or "SCENE" after pressing DISPLAY.
When you play back a DVD, "TITLE" and "CHAPTER" are displayed.
When you play back a VIDEO CD/CD, "TRACK" and "INDEX" are displayed. When you play back a VIDEO CD with PBC functions, "SCENE" is displayed.

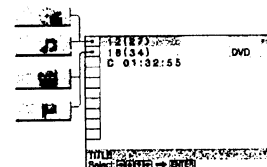

1 Select "TITLE," "CHAPTER," "TRACK," "INDEX" or "SCENE" using .
"*** (**)" is highlighted. (** refers to a number).
The number in parentheses indicates the total number of titles, chapters, tracks, indexes or scenes.

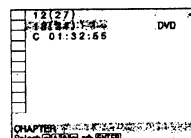

2 Press or ENTER.
"*** (**)" changes to "--- (**)".

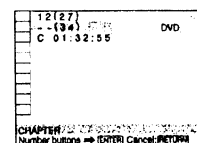

3 Select the number of the title, chapter, track, index or scene you want to search for using the number buttons, then press ENTER.
The player starts searching.
To cancel the number, press CLEAR before pressing ENTER.

To cancel while making a selection
Press /RETURN.

Notes
• The title, chapter or track number displayed is the same number recorded on the disc.
• The index numbers are not displayed during PBC playback of VIDEO CDs.


28

Checking the Playing Time and Remaining Time

DVD **VCD** **CD**

You can check the playing time and remaining time of the current title, chapter or track and the total playing time or remaining time of the disc.

Press DISPLAY. Then press TIME/TEXT on the remote to change the time information.
You can also check the DVD TEXT or CD TEXT. See page 31.

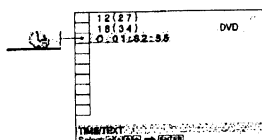

When playing a DVD

■ TIME/TEXT

- C-***:***: Playing time of the current chapter
- C-***:***: Remaining time of the current chapter
- T-***:***: Playing time of the current title
- T-***:***: Remaining time of the current title

When playing a VIDEO CD (during PBC playback)

■ TIME/TEXT

- ***:***: Playing time of the current scene

When playing a VIDEO CD (in continuous play) or CD

■ TIME/TEXT

- T-***:***: Playing time of the current track
- T-***:***: Remaining time of the current track
- D-***:***: Playing time of the current disc
- D-***:***: Remaining time of the current disc


You can select "TIME/TEXT" directly.
Press TIME/TEXT on the remote. Each time you press the button, the time information changes.

Selecting a Starting Point Using the Time Code


DVD

You can search by inputting the time code.


Select "TIME/TEXT" after pressing DISPLAY.
The time code corresponds to the approximate actual playing time. For example, to search for a scene 2 hours 10 minutes 20 seconds past the beginning, input 2:10:20.

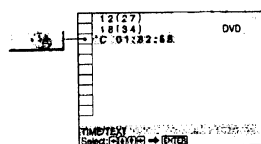

1 Select "C-***:***:" (playing time of the current chapter) when playing a DVD.

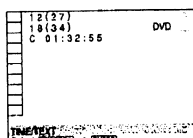

2 Press or ENTER.
Time code changes to "T-***:***:".

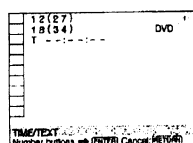

3 Input the time code using the number buttons, then press ENTER.
The player starts searching.
To cancel the number, press CLEAR before pressing ENTER.

To cancel while making a selection
Press /RETURN.


Note
When you input the time code, input the playing time of the title not the chapter or track time.

Viewing the Disc Information

DVD **VCD** **CD**

You can check the DVD TEXT or CD TEXT of the disc on the TV screen and the front panel display.
DVD TEXT and CD TEXT are information recorded on the disc which you cannot change.

Press DISPLAY. Then press TIME/TEXT on the remote until DVD/CD TEXT is displayed.
The information is displayed at the bottom of the display.

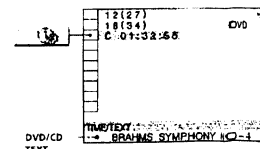

You can select "TIME/TEXT" directly.
Press TIME/TEXT on the remote. To display DVD/CD TEXT, press TIME/TEXT until DVD/CD TEXT is displayed.

You can view the entire DVD/CD TEXT recorded on the disc.
DVD/CD TEXT is scrolled on the front panel display.

Notes
• DVD TEXT is displayed only in English.
• "NO TEXT" appears when the DVD/CD TEXT is not recorded on the disc.
• This player can only display the first level of DVD/CD TEXT information.


30

31

Changing the Sounds DVD VHS CD

If the DVD is recorded with multilingual tracks, you can select the language you want while playing the DVD. If the DVD is recorded in multiple audio formats (PCM, Dolby Digital, MPEG or DTS), you can select the audio format you want while playing the DVD. With multiple CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. In this case, the sound loses its stereo effect. For example, with a disc containing a song, the right channel may output the vocals and the left channel may output the instrumental. If you only want to hear the instrumental, you can select the left channel and hear it from both speakers.

Select "AUDIO" after pressing DISPLAY.

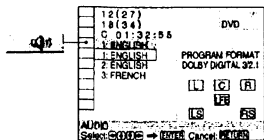

AUDIO

When playing a DVD

Select the language. The languages you can select are different depending on the DVD. When 4 digits are displayed, they represent the language code. Select the language code from the list on page 66. When the same language is displayed two or more times, the DVD is recorded in multiple audio formats. The current audio format is shown on the "PROGRAM FORMAT" display.

When playing a VIDEO CD or a CD

The default setting is underlined.

- **STEREO**: The standard stereo sound
- **1/L**: The sound of the left channel (monaural)
- **2/R**: The sound of the right channel (monaural)


You can select "AUDIO" directly. Press AUDIO on the remote. Each time you press the button, the item changes.

Notes

- Depending on the DVD, you may not be able to change the languages even if multilingual tracks are recorded on the DVD.
- While playing the CD/VIDEO CD, standard stereo playback will be resumed when:
 - you open or close the disc tray
 - the player enters standby mode by pressing I/O on the remote
 - you turn the power off by pressing 0 on the player
- While playing the DVD, the sound may be changed when:
 - you open or close the disc tray
 - you change the title


Displaying the audio information of the disc DVD

When you select "AUDIO," the channels being played are displayed on the screen. In Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD. Depending on the DVD, the number of the recorded channels may be different.

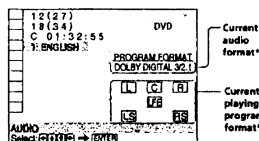


"PCM," "DTS," "DOLBY DIGITAL" or "MPEG" is displayed. In case of "DOLBY DIGITAL," the channels in the playing track are displayed by numbers as follows:

 The case of Dolby Digital 5.1 ch:



** The letters in the program format display mean the following:
 L: Front (left)
 R: Front (right)
 C: Center (monaural)
 LS: Rear (left)
 RS: Rear (right)
 S: Rear (monaural) - the rear component of the Dolby Surround processed stereo signal and the Dolby Digital signal.
 LFE: LFE (Low Frequency Effect)

 The display examples are as follows:
 • PCM (stereo)




• Dolby Surround



• Dolby Digital 5.1ch

 "LFE" appears only when a disc contains an LFE signal component. "LFE" remains on the "PROGRAM FORMAT" display even if the LFE signal component is not being output.




• MPEG



Changing the Sounds

 • **DTS**
 "LFE" is always enclosed in a solid line regardless of the LFE signal component output.




Note
 When the signal does not contain rear signal components such as LS, RS or S, the Virtual Enhanced Surround (VES) effect cannot be heard (page 36).

Displaying the Subtitles DVD

With DVDs on which subtitles are recorded, you can turn the subtitles on and off whenever you want while playing the DVD. With DVDs on which multilingual subtitles are recorded, you can change the subtitle language whenever you want while playing the DVD, and turn it on or off whenever you want. For example, you can select the language you want to practice and turn the subtitles on for better understanding.

Select "SUBTITLE" after pressing DISPLAY.

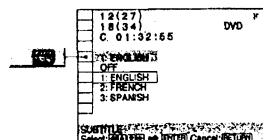

SUBTITLE

Select the language. The languages you can select are different depending on the DVD. When 4 digits are displayed, they indicate the language code. Select the language code from the list on page 66.

You can select "SUBTITLE" directly. Press SUBTITLE on the remote. Each time you press the button, the item changes.


Notes

- When playing a DVD on which no subtitles are recorded, no subtitles appear.
- Depending on the DVD, you may not be able to turn the subtitles on even if they are recorded on the DVD.
- Depending on the DVD, you may not be able to turn the subtitles off.
- The type and number of languages for subtitles vary from disc to disc.
- Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it.
- While playing the DVD, the subtitle may change when:
 - you open or close the disc tray
 - you change the title


Changing the Angles DVD

With DVDs on which various angles (multi-angles) for a scene are recorded, you can change the angles. For example, while playing a scene of a train in motion, you can display the view from either the front of the train, the left window of the train or from the right window without having the train's movement interrupted.

Select "ANGLE" after pressing DISPLAY. When the angles can be changed, the "ANGLE" indicator lights up in green.

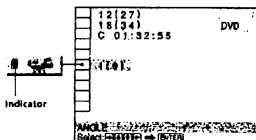


1 Select "ANGLE."

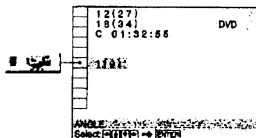


2 Press →.

The number of the angle changes to "-". The number in parentheses indicates the total number of angles.

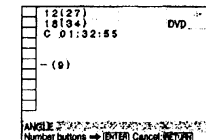

3 Select the number of the angles using the number buttons or 0/4, then press ENTER. The angle is changed to the selected angle.

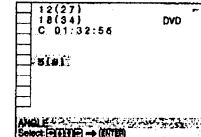

You can select "ANGLE" directly.

Press ANGLE on the remote. Each time you press the button, the angle changes.

Notes

- The number of angles varies from disc to disc or from scene to scene. The number of angles that can be changed on a scene is equal to the number of angles recorded for that scene.
- Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.

Digital Cinema Sound Settings DVD


Select a mode to enjoy multichannel surround sound such as Dolby Digital and MPEG.

Even if you connect only a TV, front speakers or use a 2+1 channel connection, Virtual Enhanced Surround (VES) lets you enjoy 3D sound by using 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The surround sound signals are output from the AUDIO OUT connectors.

When you select a surround mode, the player does not output the following signals from the DIGITAL OUT OPTICAL or COAXIAL connector.

- Dolby Digital signals (when you set "DOLBY DIGITAL" in "AUDIO SETUP" to "D-PCM")
- MPEG AUDIO signals

Select "VES" after pressing DISPLAY. When you select any item except "OFF," the "VES" indicator lights up in green.

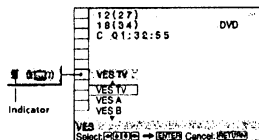

■ VES

Select the desired item. For details on each item, see "Effects of each item."

The default setting is underlined.

- OFF
- VES TV
- VES A
- VES B
- VIRTUAL SEMI MULTI DIMENSION

Effects of each item

OFF

Outputs 2-channel signals for stereo sound. 5-channel signals for Dolby Digital sound of a DVD are mixed down to 2-channels.

VES (Virtual Enhanced Surround) TV

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. This mode is effective when the distance between the front L and R speakers is short, such as built-in TV speakers.



VES (Virtual Enhanced Surround) A

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below.



VES (Virtual Enhanced Surround) B

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below.



VIRTUAL SEMI MULTI DIMENSION

Uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. This mode creates 5 sets of virtual speakers surrounding the listener at a 30° angle of elevation.



■ You can select "VES" directly

Press VES on the player. Each time you press the button, the item changes.

Notes


- When you select an item, the sound cuts off for a moment.
- When the playing signal does not contain the surround component, the effects may be difficult to hear even if you select "VES TV," "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION."
- Set the front speakers to form an equilateral triangle with the listening position at the top, or the effects may be difficult to hear even if you select "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION."
- When you select "VES TV," "VES A," "VES B" or "VIRTUAL SEMI MULTI DIMENSION," set the surround settings of the connected units, such as the amplifier, to OFF.

Checking the Play Information DVD

You can check information such as the bit rate or the disc layer that is being played.

While playing a disc, the approximate bit rate of the playback picture is always displayed as Mbps (Mega bit per second) and the audio as kbps (kilo bit per second).

Select "ADVANCED" after pressing DISPLAY.

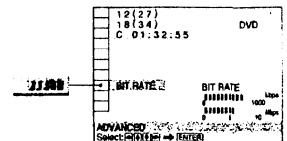

■ ADVANCED

The default setting is underlined.

When playing a DVD


- **BIT RATE:** displays the bit rate.
- **LAYER:** displays the layer and the point picked up.
- **OFF:** turns off ADVANCED display.

Checking the Play Information


Displays of each item

By pressing DISPLAY repeatedly, you can display either "BIT RATE" or "LAYER," whichever was selected in "ADVANCED."

BIT RATE

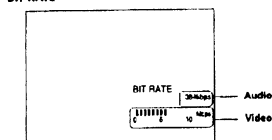

When you play MPEG AUDIO sound tracks

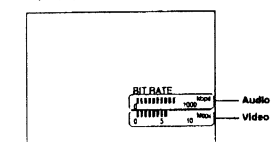

Bit rate refers to the amount of video/audio data per second in a disc. The higher the bit rate, the larger the amount of data. When the bit rate level is high, there is a large amount of data. However, this does not always mean that you can get higher quality pictures or sounds.

LAYER



Appears when the DVD has dual layers


Indicates the approximate point where the disc is playing. If it is a dual-layer DVD, the player indicates which layer is being read ("Layer 0" or "Layer 1"). For details on the layers, see page 64 (DVD).

Locking Discs (Custom Parental Control)

1 DVD VIDEO CD


Using the registered password, you can set playback restrictions for desired disc. You can set the Custom Parental Control up to 50 discs. When you set to the fifty-first disc, the first disc setting is canceled. The same password is used for both Parental Control (page 52) and Custom Parental Control.

Select "CUSTOM PARENTAL CONTROL" after pressing DISPLAY.

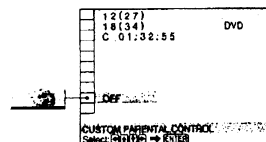

Setting the Custom Parental Control to a disc


- 1 Insert the disc you want to lock. If a disc is playing, press **STOP** to stop playback.
- 2 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.

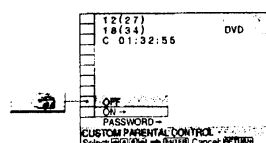

- 3 Select "ON" using **↑/↓**, then press ENTER.


■ If you have not entered a password

The display for entering a password appears.

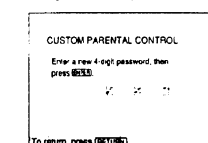


■ When you have already registered a password

The display for confirming the password appears. Skip Step 4.

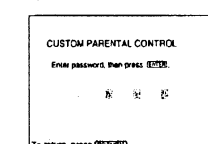

- 4 Enter a 4-digit password using the number buttons, then press ENTER. The digits change to asterisks (*), and the display for confirming the password appears.

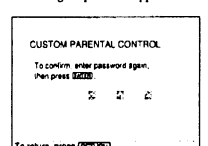

- 5 Enter the same 4-digit password using the number buttons, then press ENTER. "Custom parental control is set" appears and then the screen returns to the Control Menu display.

To return to the normal screen

Press **RETURN**.

To turn off the Custom Parental Control function


- 1 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.
- 2 Select "OFF" using **↑/↓**, then press ENTER.
- 3 Enter your 4-digit password using the number buttons, then press ENTER.

To change the password

- 1 Select "CUSTOM PARENTAL CONTROL" using **↑/↓**, then press ENTER.
- 2 Select "PASSWORD" using **↑/↓**, then press ENTER. The display for changing the password appears.
- 3 Enter a new 4-digit password using the number buttons, then press ENTER.
- 4 Enter a new 4-digit password using the number buttons, then press ENTER.
- 5 To confirm your password, re-enter it using the number buttons, then press ENTER.

Playing the disc on which the Custom Parental Control is set

- 1 Insert the disc. The CUSTOM PARENTAL CONTROL display appears.

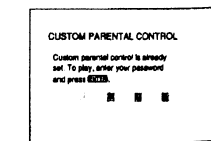

- 2 Enter your 4-digit password using the number buttons, then press ENTER. The player starts playback.

■ If you forget your password

Enter the 6-digit number "199703" in Step 2 to change the current password. To enter a new password, follow the "Set the Custom Parental Control to a disc" procedure.


Notes

Unless you enter the password, the player cannot play the disc on which the Custom Parental Control is set. When you do not know the password, press **STOP** and remove the disc.

Creating Your Own Program (Program Play) DVD VIDEO CD

You can play the contents of the disc in the order you want by arranging the order of the titles, chapters or tracks on the disc and create your own program. One program can be stored in the player and contain up to 99 titles, chapters and tracks.

Select "PROGRAM" after pressing DISPLAY. When you select "ON," the "PROGRAM" indicator lights up in green.

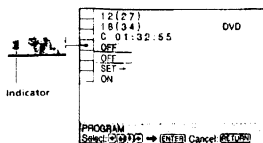

PROGRAM


The default setting is underlined.

- QEE: plays normally.
- SET: allows you to create your own program.
- ON: plays Program Play.

Creating the program


- 1 Select "SET" in "PROGRAM." The programming display appears.

"TRACK" is displayed when you play a VIDEO CD or a CD.

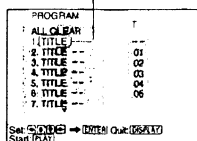

2 Press →.



"01" is highlighted. It is ready to set the first title or track for Program Play.

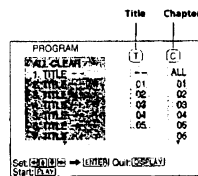

- 3 Select the title, chapter or track you want to program using ↑/↓, then press ENTER. For example, select title or track 2. (You can also use the number buttons and ENTER button to make a selection. In this case, the selected number is displayed on the screen.)


When playing a DVD

When both titles and chapters are recorded on the disc, select the title, then the chapter.

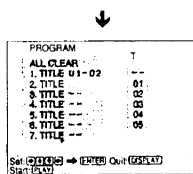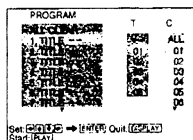

When playing a VIDEO CD or CD

Select the track you want to program.

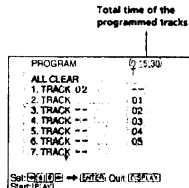

- 4 To program other titles, chapters or tracks, repeat Step 3.

The programmed titles, chapters or tracks are displayed in the selected order.

- 5 Press → to start Program Play.

To stop Program Play Press CLEAR on the remote.

To change the program

- 1 In Step 2, select the program number of the title, chapter or track you want to change using ↑/↓.
- 2 Follow Step 3 for new programming.


To cancel the programmed order

To cancel all the titles, chapters or tracks in the programmed order, select "ALL CLEAR" in Step 2. To cancel the selected program, select the program using ↑/↓ in Step 2 then press CLEAR, or select "→" in Step 3 then press ENTER.

The program remains even after Program Play ends. When you press →, you can play the same program again.

You can do Repeat Play or Shuffle Play of the programmed titles, chapters or tracks. During Program Play, set "REPEAT" or "SHUFFLE" to "ON" in the Control Menu display.

You can select discs, titles, chapters and tracks for the program by looking at the front panel display. You can program by looking at the front panel display instead of using the programming display on the TV screen. When you select Track 3 in a VIDEO CD for Program 1, the front panel display will appear as follows:

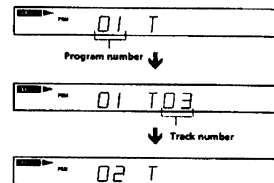


Notes

- The number of titles, chapters or tracks displayed are the same number of titles, chapters or tracks recorded on a disc.
- The program is canceled when:
 - you open or close the disc tray
 - the player enters standby mode by pressing I/O on the remote
 - you turn the power off by pressing ⏻ on the player
- You may not be able to perform Program Play depending on the DVD.
- If you are using the PBC playback function, you must first stop the disc before you can set a program.

Playing in Random Order (Shuffle Play) DVD VIDEO CD

You can have the player "shuffle" titles or tracks and play them in a random order. The playing order may differ from the previous "shuffling".

Select "SHUFFLE" after pressing DISPLAY. When you select a shuffle mode other than "OFF," the "SHUFFLE" indicator lights up in green.

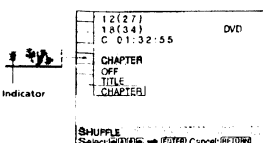

SHUFFLE

Selects the Shuffle Play setting. The default settings are underlined.

When playing a DVD and when Program Play is set to OFF

- QEE: does not play a disc in random order.
- TITLE: has the player "shuffle" titles and play them in a random order.
- CHAPTER: has the player "shuffle" chapters and play them in a random order.

When playing a VIDEO CD, CD or DVD (when Program Play is set to ON)

- QEE: does not play a disc in random order.
- ON: has the player "shuffle" titles or tracks and play them in a random order.

When playing a VIDEO CD or CD (when Program Play is set to OFF)

- QEE: does not play a disc in random order.
- TRACK: has the player "shuffle" tracks and play in a random order.

To stop Shuffle Play Press CLEAR on the remote.

You can set Shuffle Play while the disc is stopped. After selecting the "SHUFFLE" option, press →. The player starts Shuffle Play.


Notes

- Shuffle Play is canceled when:
 - you open or close the disc tray
 - the player enters standby mode by pressing I/O on the remote
 - you turn the power off by pressing ⏻ on the player
- You may not be able to perform Shuffle Play depending on the DVD.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.

Playing Repeatedly (Repeat Play) DVD VIDEO CD

You can play all of the titles or tracks on a disc or a single title, chapter or track repeatedly. In Shuffle or Program Play mode, the player repeats the titles or tracks in the shuffled or programmed order. You cannot perform Repeat Play during PBC playback of VIDEO CDs (page 23).

Select "REPEAT" after pressing DISPLAY. When you select a repeat mode other than "OFF," the "REPEAT" indicator lights up in green.

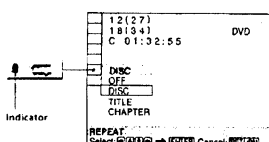

REPEAT

Selects the Repeat Play setting. The default settings are underlined.

When playing a DVD and when Program Play and Shuffle Play are set to OFF

- QEE: does not play repeatedly.
- DISC: repeats all of the titles.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

When playing a VIDEO CD/CD and when Program Play and Shuffle Play are set to OFF

- QEE: does not play repeatedly.
- DISC: repeats all of the tracks on a disc.
- TRACK: repeats the current track.

When Program Play or Shuffle Play is set to ON

- QEE: does not play repeatedly.
- ON: repeats Program Play or Shuffle Play.

To stop Repeat Play Press CLEAR on the remote.

You can set Repeat Play while the disc is stopped. After selecting the "REPEAT" option, press →. The player starts Repeat Play.

Notes


- Repeat play is canceled when:
 - you open or close the disc tray
 - the player enters standby mode by pressing I/O on the remote
 - you turn the power off by pressing ⏻ on the player
- You may not be able to perform Repeat Play depending on the DVD.

Repeating a Specific Portion (A-B Repeat) DVD VIDEO CD

You can play a specific portion of a title, chapter or track repeatedly. This function is useful when you want to do such things as memorize lyrics.

During PBC Playback of VIDEO CDs (page 23), this function is available only while playing moving pictures.

Select "A-B REPEAT" after pressing DISPLAY. During A-B Repeat Play, the "A-B REPEAT" indicator lights up in green.

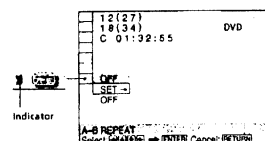



A-B REPEAT

The default setting is underlined.


- SET: sets the A and B points.
- Q.EE: does not play a specific portion of a title/chapter/track repeatedly.

Setting a portion for A-B repeat

- 1 Select "SET" in "A-B REPEAT".
The A-B REPEAT setting display appears.

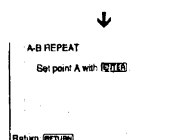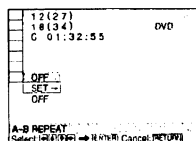

 
- 2 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.
The starting point (point A) is set.



- 3 When you reach the ending point (point B), press ENTER again.

The set points are displayed and the player starts repeating this specific portion.

"A-B" appears on the front panel display during A-B repeat play.

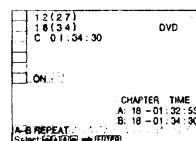

To stop A-B Repeat Play

Press CLEAR on the remote.

Notes

- You can set A-B Repeat for only one specific portion.
- A-B Repeat is canceled when:
 - you open or close the disc tray
 - the player enters standby mode by pressing I/O on the remote
 - you turn the power off by pressing D on the player
- When you set A-B Repeat, the settings for Shuffle Play and Program Play are canceled.
- You may not be able to set A-B Repeat for some DVD or VIDEO CD scenes.

44

45

Settings and Adjustments

This chapter describes how to set and adjust the player using the on-screen setup menu. Most settings and adjustments are required to be set when you first use the player.


Using the Setup Display

DVD VIDEO CD


Using the setup display, you can do the initial setup, adjust the picture and sound and set the various outputs. You can also set a language for the subtitles and the setup display, limit playback by children, and so on. For details on each setup display item, see pages 48 to 58.

Note


You can display the setup display only when the player is in stop mode.

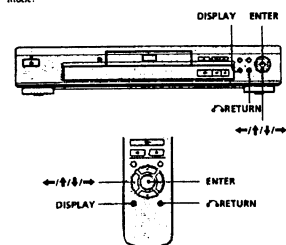


- 1 Press DISPLAY and select "SETUP" using \leftarrow/\rightarrow .

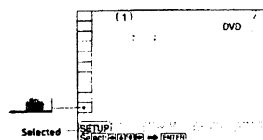


- 2 Press ENTER.
The setup display appears.

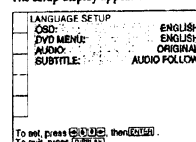


- 3 Select the main item you want using \leftarrow/\rightarrow .

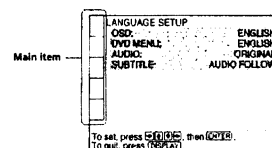


- 4 Press ENTER.
The selected main item is highlighted.

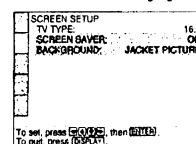


- 5 Select the item you want using \leftarrow/\rightarrow .

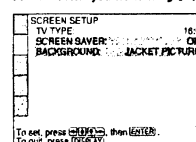


- 6 Press ENTER.

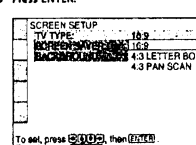

- 7 Select the setting you want using \leftarrow/\rightarrow .

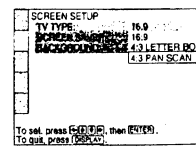

- 8 Press ENTER.

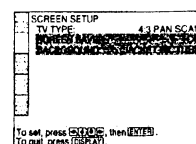

- 9 Press DISPLAY.

The setup display disappears.

- 10 Press DISPLAY repeatedly to turn off the on-screen menu.

To return to the previous screen
Press \leftarrow RETURN.

To quit while making a selection
Press DISPLAY.

Note


Some setup display items require operations other than selecting the setting. For details on these items, see the relevant pages.

46

47

Setup Display Item List


The default settings are underlined.

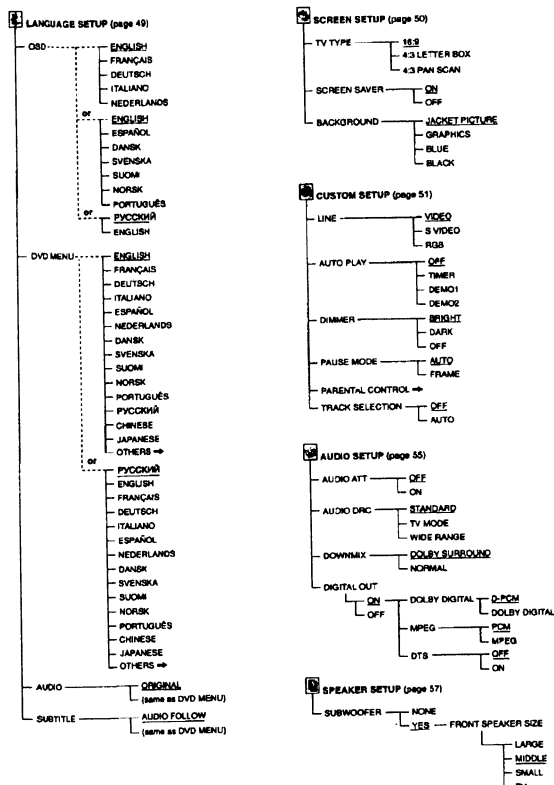

Setting the Display Language or Sound Track (LANGUAGE SETUP) DVD VIDEO CD

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track. The default settings are underlined.

Select "LANGUAGE SETUP" in the setup display.

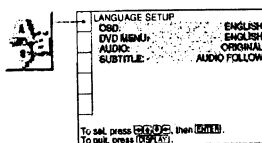

Notes

- When you select a language that is not recorded on the DVD, one of the recorded languages is automatically selected for the "DVD MENU," "AUDIO" and "SUBTITLE" settings.
- Even when you select a language in "DVD MENU," "AUDIO" or "SUBTITLE," the player may not start playing with the selected language depending on the DVD.

■ OSD (On-Screen Display)

Selects the language for the on-screen display. The languages you can select are different depending on the player model.

Type A

- ENGLISH (English)
- FRANCAIS (French)
- DEUTSCH (German)
- ITALIANO (Italian)
- NEDERLANDS (Dutch)

Type B

- ENGLISH (English)
- ESPAÑOL (Spanish)
- DANSK (Danish)
- SVENSKA (Swedish)
- SUOMI (Finnish)
- NORSK (Norwegian)
- PORTUGUÊS (Portuguese)

Type C

- PYCCOBA (Russian)
- ENGLISH (English)

■ DVD MENU

Selects the language for the DVD menu. The language order is different depending on the player model. Default setting is "ENGLISH" or "PYCCOBA."

- ENGLISH (English)
- FRANCAIS (French)
- DEUTSCH (German)
- ITALIANO (Italian)
- ESPAÑOL (Spanish)
- NEDERLANDS (Dutch)
- DANSK (Danish)
- SVENSKA (Swedish)
- SUOMI (Finnish)
- NORSK (Norwegian)
- PORTUGUÊS (Portuguese)
- PYCCOBA (Russian)
- CHINESE (Chinese)
- JAPANESE (Japanese)
- OTHERS

When you select "OTHERS," select and enter the language code from the list using the number buttons (page 66). After you have made a selection, the language code (4 digits) is displayed.

■ AUDIO

Selects the language for the sound track. The language order is different depending on the player model.

- ORIGINAL: the language given priority in the disc
- ENGLISH (English)
- FRANCAIS (French)
- DEUTSCH (German)
- ITALIANO (Italian)
- ESPAÑOL (Spanish)
- NEDERLANDS (Dutch)
- DANSK (Danish)
- SVENSKA (Swedish)
- SUOMI (Finnish)
- NORSK (Norwegian)
- PORTUGUÊS (Portuguese)
- PYCCOBA (Russian)
- CHINESE (Chinese)
- JAPANESE (Japanese)
- OTHERS

When you select "OTHERS," select and enter the language code from the list using the number buttons (page 66). After you have made a selection, the language code (4 digits) is displayed.

48

49

Setting the Display Language or Sound Track (LANGUAGE SETUP)

■ SUBTITLE

Selects the language for the subtitles. The language order is different depending on the player model.

■ AUDIO FOLLOW

- ENGLISH (English)
- FRANCAIS (French)
- DEUTSCH (German)
- ITALIANO (Italian)
- ESPAÑOL (Spanish)
- DANSK (Danish)
- SVENSKA (Swedish)
- SUOMI (Finnish)
- NORSK (Norwegian)
- PORTUGUÊS (Portuguese)
- PYCCOBA (Russian)
- CHINESE (Chinese)
- JAPANESE (Japanese)
- OTHERS


When you select "OTHERS," select and enter the language code from the list using the number buttons (page 66). After you have made a selection, the language code (4 digits) is displayed.

- When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language for the setting you selected in "AUDIO."

Settings for the Display (SCREEN SETUP) DVD VIDEO CD

"SCREEN SETUP" allows you to set the display according to the playback conditions. The default settings are underlined.

Select "SCREEN SETUP" in the setup display.

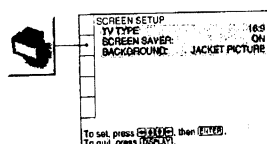

■ TV TYPE

Selects the aspect ratio of the TV to be connected.

- 16:9: select this when you connect a wide-screen TV to the player.
- 4:3 LETTER BOX: select this when you connect a normal TV to the player. Displays a wide picture with bands on the upper and lower portions of the screen.
- 4:3 PAN SCAN: select this when you connect a normal TV to the player. Displays the wide picture on the whole screen automatically and cuts off the portions that do not fit.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



Note

Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" and vice versa.

■ SCREEN SAVER

Turns on and off the screen saver. If you turn on the screen saver, the screen saver image appears when you leave the player or the remote in pause or stop mode for 15 minutes or when you play back a CD for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged.

- ON: turns on the screen saver.
- OFF: turns off the screen saver.

■ BACKGROUND

Selects the background color or picture of the TV screen in stop mode or while playing a CD.

- JACKET PICTURE: The jacket picture appears in the background, but only when the jacket picture is already recorded on the disc.
- GRAPHICS: A preset picture stored in the player appears in the background.
- BLUE: The background color is blue.
- BLACK: The background color is black.


Note

If a disc which does not contain the jacket picture is played while "BACKGROUND" is set to "JACKET PICTURE," the picture stored in the player will automatically appear in the background.

Custom Settings (CUSTOM SETUP) DVD VIDEO CD

"CUSTOM SETUP" allows you to set the playback conditions. The default settings are underlined.

Select "CUSTOM SETUP" in the setup display.

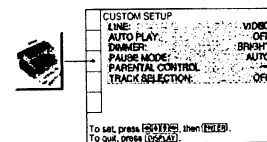

■ LINE

Selects the methods of outputting video signals from the LINE-1 (RGB)-TV connector on the rear panel of the player.

- VIDEO: outputs the video signals.
- S VIDEO: outputs the S video signals.
- RGB: outputs the RGB signals.

Notes

- If your TV does not conform to the S video or the RGB signals, no picture appears on the TV screen even if you select "S VIDEO" or "RGB." Refer to the instructions supplied with your TV.
- If your TV has only one SCART (EURO AV) connector, do not select "S VIDEO."

■ AUTO PLAY

Selects the Auto Play setting when you connect the AC power cord to the AC outlet.

- OFF: does not use "TIMER," "DEMO1" or "DEMO2" to start playback.
- TIMER: starts playing at any time you want by connecting a timer (not supplied). Set a timer when the player is in standby mode (the power indicator lights up in red).
- DEMO1: starts playing the first demonstration automatically.
- DEMO2: starts playing the second demonstration automatically.

50

51

Custom Settings (CUSTOM SETUP)

DIMMER

- Adjusts the lighting of the front panel display.
- BRIGHT**: makes the front panel display bright.
- DARK**: makes the front panel display dark.
- OFF**: turns off the lighting of the front panel display.

PAUSE MODE (DVD only)

- Selects the picture in pause mode.
- ALTO**: A picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
- FRAME**: A picture including subjects that do not move dynamically is output with high resolution.


PARENTAL CONTROL

- Set a password and playback limitation level when you play DVDs with playback limitation for children. The same password is used for both Parental Control and Custom Parental Control (page 38).
- For details, see "Limiting Playback by Children (Parental Control)".


Limiting Playback by Children (Parental Control) (DVD)

Playback of some DVDs can be limited depending on the age of the users. The "Parental Control" function allows you to set a playback limitation level.


Select "CUSTOM SETUP" in the setup display.

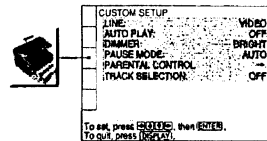


1 Select "PARENTAL CONTROL" using \uparrow/\downarrow , then press ENTER.

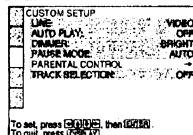


When you have not entered a password The display for entering a password appears.

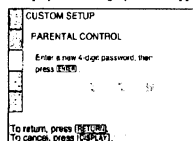


When you have already registered a password The display for confirming the password appears. Skip Step 2.

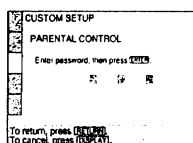


2 Enter a password in 4 digits using the number buttons, then press ENTER. The digits change to asterisks (*), and the display for confirming the password appears.

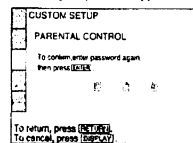


3 To confirm your password, enter it again using the number buttons, then press ENTER. The display for setting the playback limitation level and changing the password appears.

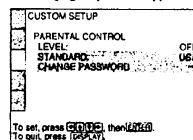


4 Select "STANDARD" using \uparrow/\downarrow , then press \rightarrow .

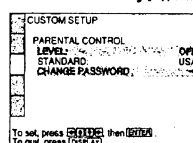


5 Select a geographic area as the playback limitation level standard using \uparrow/\downarrow , then press \rightarrow . When you select "OTHERS", select and enter the standard code in the table on the next page using the number buttons.

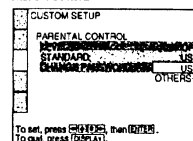

6 Select "LEVEL" using \uparrow/\downarrow , then press \rightarrow .

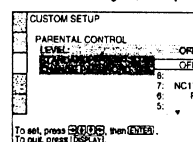

7 Select the level you want using \uparrow/\downarrow , then press ENTER.

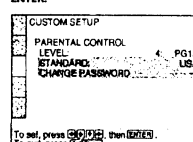

The lower the value, the more strict the limitation.

To return to the normal screen Press DISPLAY.

To turn off the Parental Control function and play the DVD after entering your password Set "LEVEL" to "OFF" in Step 7, then press \rightarrow .

52

53

Custom Settings (CUSTOM SETUP)

To change the password

- After Step 3, select "CHANGE PASSWORD" using \uparrow/\downarrow , then press \rightarrow or ENTER. The display for changing the password appears.
- Follow Steps 2 and 3 to enter a new password.

Playing a disc which is blocked by the playback limitation level

- Insert the disc and press \rightarrow . The PARENTAL CONTROL display appears.
- Enter a 4-digit password using the number buttons, then press ENTER. The player starts playback. When you stop playing the DVD, the level returns to the original level.

If you forget your password

Enter the 6-digit number "199703" in Step 2 to clear the current password. To enter a new password, follow the procedure from Step 2 again.

Notes

- When you play DVDs which do not have the Parental Control function, playback cannot be limited on this player.
- If you do not set a password, you cannot change the settings for playback limitation.
- Depending on the DVD, you may be asked to change the parental control level while playing the disc. In this case, enter the password, then change the level. When you stop playing the DVD, the level returns to the original level.
- The same password is used for both Parental Control and Custom Parental Control (page 38).

| Standard | Code number |
|----------------|-------------|
| Argentina | 2044 |
| Australia | 2047 |
| Austria | 2046 |
| Belgium | 2057 |
| Brazil | 2070 |
| Canada | 2079 |
| Chile | 2090 |
| China | 2092 |
| Denmark | 2115 |
| Finland | 2165 |
| France | 2174 |
| Germany | 2109 |
| Hong Kong | 2219 |
| India | 2248 |
| Indonesia | 2238 |
| Italy | 2254 |
| Japan | 2276 |
| Korea | 2304 |
| Malaysia | 2363 |
| Mexico | 2362 |
| Netherlands | 2376 |
| New Zealand | 2390 |
| Norway | 2379 |
| Pakistan | 2427 |
| Philippines | 2424 |
| Portugal | 2436 |
| Russia | 2489 |
| Singapore | 2501 |
| Spain | 2149 |
| Sweden | 2499 |
| Switzerland | 2086 |
| Taiwan | 2543 |
| Thailand | 2528 |
| United Kingdom | 2184 |

TRACK SELECTION

Gives the sound track which contains the highest number of channels priority when you play a DVD on which multiple audio formats (PCM, DTS, MPEG AUDIO or Dolby Digital format) are recorded.

- DEF**: No priority given.
- AUTO**: Priority given.


Notes

- When you set this item to "AUTO", the language may change depending on the "AUDIO" settings in "LANGUAGE SETUP". The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 49).
- If you set "DTS" in "AUDIO SETUP" to "OFF", the DTS sound track is not played even if you set this item to "AUTO" and the highest-numbered channel audio is recorded in DTS format.
- If PCM, DTS, MPEG AUDIO and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, Dolby Digital and MPEG AUDIO sound tracks in this order.
- Depending on the DVD, the audio channel with priority may be predetermined. In this case, you cannot give priority to the DTS, MPEG AUDIO or Dolby Digital format by selecting "AUTO".

Settings for the Sound (AUDIO SETUP)

"AUDIO SETUP" allows you to set the sound recording to the playback conditions. The default settings are underlined.

Select "AUDIO SETUP" in the setup display.

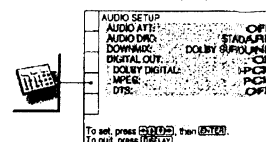

AUDIO ATT (attenuation)

If the playback sound is distorted, set this item "ON". The player reduces the audio output level.

- Selects the setting of the output from the AUDIO OUT and LINE 1, 2 connectors according to the audio equipment to be connected.
- DEF**: turns off the audio attenuation. Normally select this position.
- ON**: reduces the audio output level so that no sound distortion occurs. Select this when the playback sound from the built-in TV speakers is distorted.

Note

The setting does not affect the output from the DIGITAL OUT OPTICAL and COAXIAL connectors.

AUDIO DRC (Dynamic Range Control)

Makes the sound clear when the volume is turned down when playing a DVD. This function works only when you play a DVD which has the AUDIO DRC function. This affects the output from the DIGITAL OUT connectors only when "DOLBY DIGITAL" is set to "D-POL" and "MPEG" is set to "PCM" in "DIGITAL OUT", as it affects the output from the AUDIO OUT and LINE 1, 2 connectors.

- STANDARD**: Normally select this position.
- TV MODE**: makes the low sounds clear even when you turn the volume down. It is especially recommended when you listen to the sound using the speakers of a TV.
- WIDE RANGE**: It gives you the feeling of being at a live performance. When you use high quality speakers, it is more effective.

Note

When you play DVDs without the AUDIO DRC function, the setting may be no effect on the sound.

54

55

Settings for the Sound (AUDIO SETUP)

■ DOWNMIX

Switches the mixing down methods when you play a DVD on which rear signal components such as LS, RS or S in Dolby Digital format are recorded. For details on the rear signal components, see "Displaying the audio information of the disc" (page 33).

The "DOWNMIX" setting affects the following connectors:

- AUDIO OUT connectors
- DIGITAL OUT OPTICAL and COAXIAL connectors (when you set "DOLBY DIGITAL" to "D-PCM" in "AUDIO SETUP" in the setup display)
- DOLBY SURROUND: when the player is connected to an audio component that conforms to Dolby Surround (Pro Logic). The output signals which reproduce the Dolby Surround (Pro Logic) effect are mixed down to 2 channels.
- NORMAL: when the player is connected to an audio component that does not conform to Dolby Surround (Pro Logic). The signals without Dolby Surround (Pro Logic) effect are output.

■ DIGITAL OUT

Selects output signals via the DIGITAL OUT OPTICAL and COAXIAL connectors.

- QZ: Normally select this position. When you select "ON," set "DOLBY DIGITAL," "MPEG" and "DTS." For details on setting these items, see "Setting the Digital Output Signal."
- OFF: when the player does not output the sound signals via the DIGITAL OUT OPTICAL and COAXIAL connectors, the influence of the digital circuit upon the analog circuit is at a minimum.


Notes

- When you play sound tracks with a 96 kHz sampling frequency, the output signals from the DIGITAL OUT (OPTICAL COAXIAL) are converted to 48 kHz (sampling frequency). When the signals are output from the AUDIO OUT connectors, sampling frequency stays at 96 kHz and the output signals are converted to analog signals.
- When you select "OFF," you cannot set "DOLBY DIGITAL," "MPEG" and "DTS."

Setting the Digital Output Signal

Switches the methods of outputting audio signals when you, 1. connect a digital component such as a receiver (amplifier) having a digital connector, 2. an audio component having a built-in decoder (Dolby Digital, MPEG or DTS), 3. a DAT or MD via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord. For details on the connection, see pages 12 and 14.

When you select "ON," set "DOLBY DIGITAL," "MPEG" and "DTS."

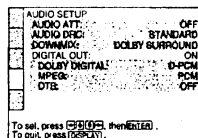

■ DOLBY DIGITAL

Selects the Dolby Digital signals to be output via the DIGITAL OUT OPTICAL and COAXIAL connectors. You cannot select this item when you set "DIGITAL OUT" to "OFF."

- D-PCM (Downmix PCM): when you play Dolby Digital sound tracks, the output audio signals are mixed down to 2 channels. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the "DOWNMIX" item in "AUDIO SETUP."
- DOLBY DIGITAL: when the player is connected to an audio component with a built-in Dolby Digital decoder. If the player is connected to an audio component lacking a built-in Dolby Digital decoder, do not set this.

Otherwise, when you play the Dolby Digital sound track, a loud noise or no sound will come out from the speakers, affecting your ears or causing the speakers to be damaged.

Note

When you select "D-PCM," set Virtual Enhanced Surround (YES) to "OFF." Otherwise, the player will not output signals from the DIGITAL OUT OPTICAL or COAXIAL connector.

■ MPEG

Selects the MPEG AUDIO signals to be output via the DIGITAL OUT OPTICAL and COAXIAL connectors. You cannot select this item when you set "DIGITAL OUT" to "OFF."

- PCM: when the player is connected to an audio component lacking a built-in MPEG decoder. If you play MPEG AUDIO sound tracks, the player outputs stereo signals via the DIGITAL OUT OPTICAL and COAXIAL connectors.
- MPEG: when the player is connected to an audio component having a built-in MPEG decoder. If the player is connected to an audio component lacking a built-in MPEG decoder, do not set this. Otherwise, when you play the MPEG AUDIO sound track, a loud noise will come out from the speakers, affecting your ears or causing the speakers to be damaged.

Note

The player outputs the MPEG analog audio sound only from the front speakers when you set "DIGITAL OUT" in "AUDIO SETUP" to "ON" and then set "MPEG" to "MPEG."

■ DTS

Selects the DTS signals to be output via the DIGITAL OUT OPTICAL and COAXIAL connectors. You cannot select this item when you set "DIGITAL OUT" to "OFF."

- QZ: when the player is connected to an audio component lacking a built-in DTS decoder.
- ON: when the player is connected to an audio component having a built-in DTS decoder. If the player is connected to an audio component lacking a built-in DTS decoder, do not set this. Otherwise, when you play the DTS sound track, a loud noise will come out from the speakers, affecting your ears or causing the speakers to be damaged.


Note

Select the setting correctly. Otherwise, no sound or a strange sound will come out from the speakers, affecting your ears or causing the speakers to be damaged.

Subwoofer Set Up (SPEAKER SETUP)

When you have connected a subwoofer, specify the size of the front speakers you have connected to change the frequency range output from the subwoofer so that you can obtain the best possible surround sound. Even if you change the "SUBWOOFER" setting, the sound output from the front speakers do not change. For the speaker hookups, see pages 12 and 13. The default settings are underlined.

Select "SPEAKER SETUP" in the setup display.

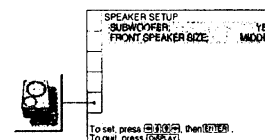

■ SUBWOOFER

Selects whether a subwoofer is connected to the player or not.

- NONE: When a subwoofer is not connected to the player.
- YES: When a subwoofer is connected to the player. When you select "YES," set "FRONT SPEAKER SIZE."

For details, see "Setting the output level from the subwoofer."

Subwoofer Set Up (SPEAKER SETUP)

Setting the output level from the subwoofer

When you select "YES" in "SUBWOOFER," set "FRONT SPEAKER SIZE." This selects the size of the connected front speakers. The frequency range output from the subwoofer varies according to the size of the front speakers.

■ FRONT SPEAKER SIZE

- LARGE: If you connect large speakers that will effectively reproduce bass frequencies and play a DVD recorded in 5.1 channels including an LFE signal, select this.

If you feel a lack of bass frequencies from the front speakers when you select this, select "MIDDLE."

Notes

- If an LFE signal is not recorded on the disc, no sound will be output from the subwoofer even if you select "LARGE."
- When you play MPEG AUDIO sound track, an LFE signal is not output from the SUBWOOFER connector.

- MIDDLE: If you connect large speakers that will effectively reproduce bass frequencies and play a source on which an LFE signal is not recorded, such as CD or DVD with 2 channels, select this to output the bass frequencies from the subwoofer as well as from the front channel.


If you feel a lack of bass frequencies from the front speakers when you select this, select "SMALL."

- SMALL: If you feel a lack of bass, select this to output even more bass frequencies from the subwoofer.

If you still feel a lack of bass frequencies from the front speakers when you select this, select "TV."

- TV: If you use the speakers of the TV or small speakers, select this to output the bass frequencies from the subwoofer.

The subwoofer outputs the LFE signal and the frequency range according to the FRONT SPEAKER SIZE setting. The LFE signal is output only when the disc contains an LFE signal.

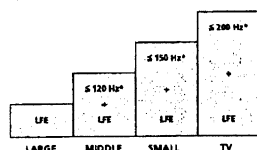

* Audio signal besides LFE

Note

The signals of the PCM sound tracks with a 96 kHz sampling frequency are not output from the WOOFER connector.

Self-diagnosis function

When the self-diagnosis function activates to prevent the player from malfunctioning, a five-character service number (combination of a letter and digits) flashes on the screen and on the front panel display. In this case, check the following table.



| First three characters | Cause and/or Corrective Action |
|------------------------|--|
| C13 | <ul style="list-style-type: none"> The disc is dirty. Clean the disc with a cleaning cloth. (page 6) |
| C31 | <ul style="list-style-type: none"> The disc is not inserted correctly. Open the disc tray and insert the disc correctly. |
| Eax (ax is any number) | <ul style="list-style-type: none"> To prevent a malfunction, the player has performed the self-diagnosis function. When you contact your Sony dealer or local authorized Sony service facility, give the 5-character service number. (example: E61:10) |

Language Code List

For details, see page 34, 49.

The language spellings conform to the ISO 639: 1988 (E/F) standard.


| Code | Language | Code | Language | Code | Language | Code | Language |
|------|-----------------|------|------------------|------|----------------|------|---------------|
| 1027 | Afar | 1186 | Scott Gaelic | 1350 | Malayalam | 1513 | Swati |
| 1028 | Abkhazian | 1194 | Galician | 1352 | Mongolian | 1514 | Sesotho |
| 1032 | Afrikaans | 1196 | Guzarati | 1353 | Moldavian | 1515 | Sundanese |
| 1039 | Akan | 1203 | Gujarati | 1356 | Marathi | 1516 | Swedish |
| 1044 | Arabic | 1209 | Hawai | 1357 | Malay | 1517 | Swahili |
| 1045 | Assamese | 1217 | Hindi | 1358 | Maltese | 1521 | Tamil |
| 1051 | Aymara | 1226 | Croatian | 1363 | Burmese | 1525 | Telugu |
| 1052 | Azerbaijani | 1229 | Hungarian | 1365 | Nauru | 1527 | Tajik |
| 1053 | Bashkir | 1233 | Armenian | 1369 | Nepali | 1528 | Thai |
| 1057 | Byelorussian | 1235 | Interlingua | 1376 | Dutch | 1529 | Tigrinya |
| 1059 | Bulgarian | 1239 | Interlingue | 1379 | Norwegian | 1531 | Turkmen |
| 1060 | Bhazari | 1245 | Inupiak | 1393 | Occitan | 1532 | Tagalog |
| 1061 | Bislama | 1248 | Indonesian | 1403 | (Afan) Oromo | 1534 | Setswana |
| 1066 | Bengali, Bangla | 1253 | Icelandic | 1408 | Oriya | 1535 | Tonga |
| 1067 | Tibetan | 1254 | Italian | 1417 | Punjabi | 1538 | Turkish |
| 1070 | Breton | 1257 | Hebrew | 1428 | Polish | 1539 | Tsonga |
| 1079 | Catalan | 1261 | Japanese | 1435 | Pashto; Pushto | 1540 | Tatar |
| 1093 | Corakan | 1269 | Yiddish | 1436 | Portuguese | 1543 | Tshi |
| 1097 | Czech | 1283 | Javanese | 1463 | Quechua | 1557 | Ukrainian |
| 1103 | Welsh | 1287 | Georgian | 1481 | Rhaeto-Romanic | 1564 | Urdu |
| 1105 | Danish | 1297 | Kazakh | 1482 | Kirundi | 1572 | Uzbek |
| 1109 | German | 1298 | Greenlandic | 1483 | Romanian | 1581 | Vietnamese |
| 1130 | Bhutani | 1299 | Cambodian | 1489 | Russian | 1587 | Volapik |
| 1142 | Greek | 1300 | Kannada | 1491 | Kinyarwanda | 1613 | Wolof |
| 1144 | English | 1301 | Korean | 1495 | Sanskrit | 1632 | Xhosa |
| 1145 | Español | 1305 | Kashmiri | 1496 | Sindhi | 1665 | Yoruba |
| 1149 | Spanish | 1307 | Kurdish | 1501 | Singho | 1684 | Chinese |
| 1150 | Estonian | 1311 | Kirghiz | 1502 | Serbo-Croatian | 1697 | Zulu |
| 1151 | Basque | 1313 | Latin | 1503 | Singhalese | 1703 | Not specified |
| 1157 | Persian | 1326 | Lingala | 1505 | Slovak | | |
| 1165 | Finnish | 1327 | Laotian | 1506 | Slovenian | | |
| 1166 | Fiji | 1332 | Lithuanian | 1507 | Samoa | | |
| 1171 | Faroese | 1334 | Latvian; Lettish | 1508 | Shona | | |
| 1174 | French | 1345 | Malagasy | 1509 | Somali | | |
| 1181 | Frisian | 1347 | Maori | 1511 | Albanian | | |
| 1183 | Irish | 1349 | Macedonian | 1512 | Serbian | | |

66

Index to Parts and Controls

Refer to the pages indicated in parentheses for details.

Front Panel

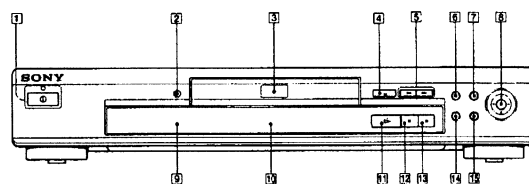


- 1 (power) button and indicator (18)
Disconnects the power of the player or places the player in standby mode.
- 2 VES (Virtual Enhanced Surround) button (36)
Press to select the desired "VES" item.
- 3 Disc tray (18)
Place a disc on the tray.
- 4 OPEN/CLOSE button (18)
Opens or closes the disc tray.
- 5 PREVIOUS/NEXT (previous/next) buttons (19)
Press to go to the next chapter or track, or to go back to the previous chapter or track.
- 6 TITLE button (22)
Displays the title menu on the TV screen.
- 7 DVD MENU button (22)
Displays the DVD menu on the TV screen.
- 8 ENTER button (18)
Selects and executes the items or settings.
- 9 (remote sensor) (7)
Accepts the remote control signals.
- 10 Front Panel Display (24)
Indicates the playing time, etc.
- 11 (play) button (18)
Plays a disc.
- 12 (pause) button (19)
Pauses playing a disc.
- 13 (stop) button (19, 21)
Stops playing a disc.
- 14 DISPLAY button (26)
Displays the Control Menu display on the TV screen to set or adjust the items.
- 15 RETURN button (23, 27)
Press to return to the previously selected screen, etc.

67

Index to Parts and Controls


Rear Panel

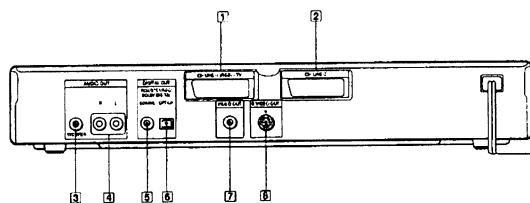

- 1 LINE-1 (RGB)-TV connector (8, 51)
Connect to your TV using a LINE-1 connector to output the signal from the player. You can select the video signals, the 5 VIDEO signals or the RGB signals as the output signal format.
- 2 LINE-2 connector (8)
Connect your video equipment using a LINE-2 connector to input the signal from the equipment.
- 3 AUDIO OUT WOOVER connector (13)
Connect to a subwoofer (not supplied).
- 4 AUDIO OUT R (right)/L (left) connectors (9, 11)
Connect to the audio input connector on your TV or receiver (amplifier).
- 5 DIGITAL OUT COAXIAL connector (12, 14)
Connect to an audio component using the coaxial digital connecting cord.
- 6 DIGITAL OUT OPTICAL connector (12, 14)
Connect to an audio component using the optical digital connecting cord.
- 7 VIDEO OUT connector (9, 11)
Connect to the video input connector on your TV or monitor.
- 8 S VIDEO OUT connector (9, 11)
Connect to the S video input connector on your TV or monitor.

68

Remote

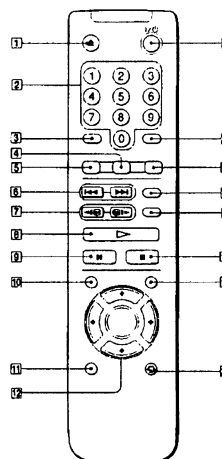


- 1 OPEN/CLOSE button (18)
Opens or closes the disc tray.
- 2 Number buttons
Selects the items or settings.
- 3 CLEAR button (29, 41)
Press to return to continuous play, etc.
- 4 ANGLE button (35)
Changes the angles when playing a DVD.
- 5 AUDIO button (32)
Changes the sound while playing a DVD or VIDEO CD.
- 6 PREVIOUS/NEXT (previous/next) buttons (19)
Press to go to the next chapter or track, or to go back to the previous chapter or track.
- 7 SCAN/SLOW buttons (20)
Locate a point quickly while monitoring the picture or play a disc in slow motion.
- 8 PLAY button (18)
Plays a disc.
- 9 PAUSE button (19)
Pauses playing a disc.
- 10 TITLE button (22)
Displays the title menu on the TV screen.
- 11 DISPLAY button (26)
Displays the Control Menu display on the TV screen to set or adjust the items.
- 12 ENTER buttons
Selects and executes the items or settings.
- 13 I/O (on/standby) button (19)
Press to turn on the player or place it in standby mode after power is connected by pressing (1) on the player.
- 14 ENTER button
Executes the items or settings.
- 15 SUB/TITLE button (34)
Changes the subtitles when playing a DVD.
- 16 TV/DVD button (10)
Press to return the TV's input from CD/DVD player to the TV when you connect the player to your TV via the SCART (EURO AV) connectors.
- 17 TIME/TEXT button (24)
Displays the playing time of the disc, etc., on the front panel display.
- 18 STOP button (19, 21)
Stops playing a disc.
- 19 DVD MENU button (22)
Displays the DVD menu on the TV screen.
- 20 RETURN button (23, 27)
Press to return to the previously selected screen, etc.

69


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


2-1. CASE REMOVAL

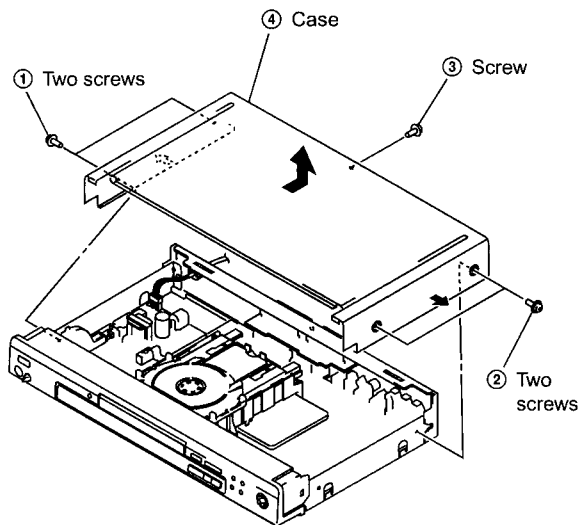


2-3. TRAY COVER REMOVAL

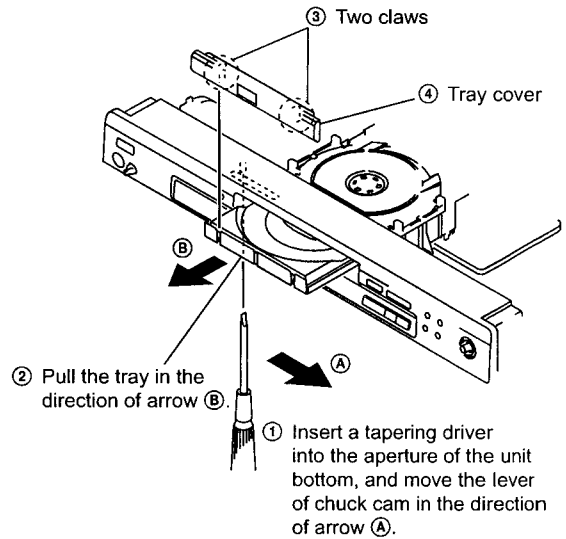


2-2. REAR PANEL REMOVAL

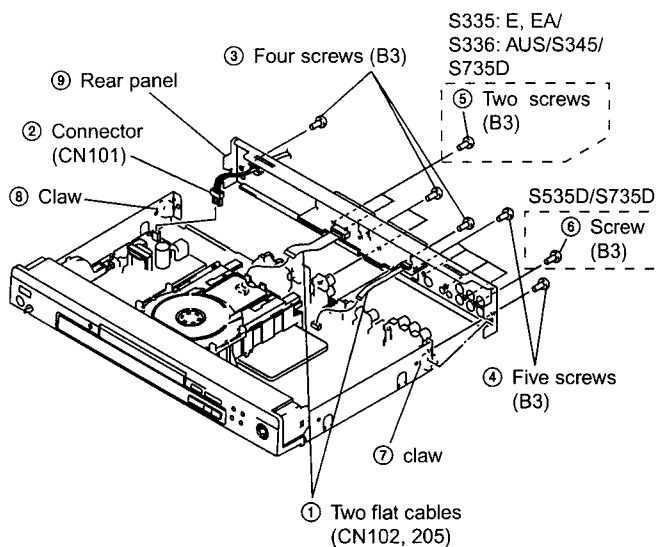


2-4. FRONT PANEL REMOVAL

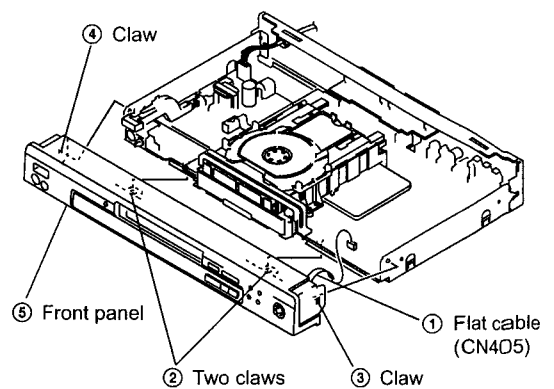


2-5. POWER BLOCK REMOVAL

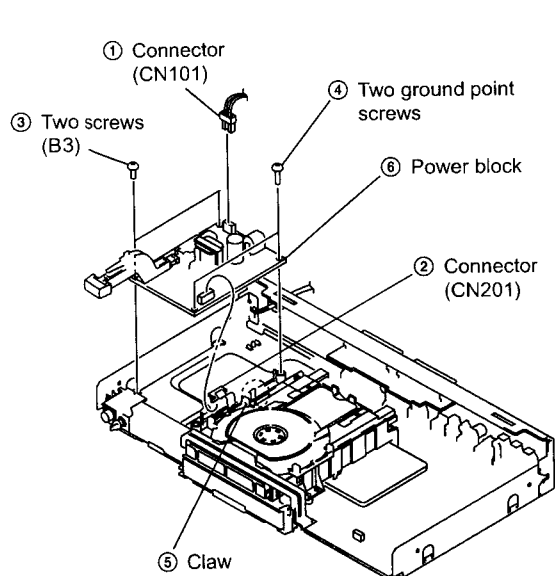


2-7. TRAY REMOVAL

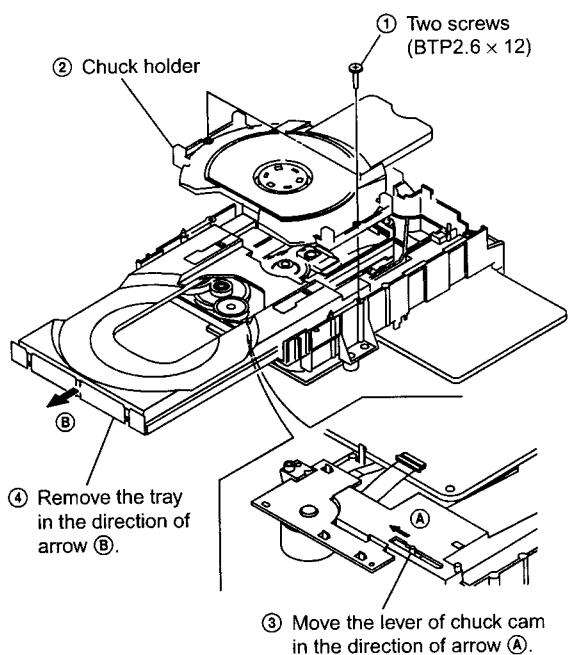


2-6. MECHANISM DECK REMOVAL

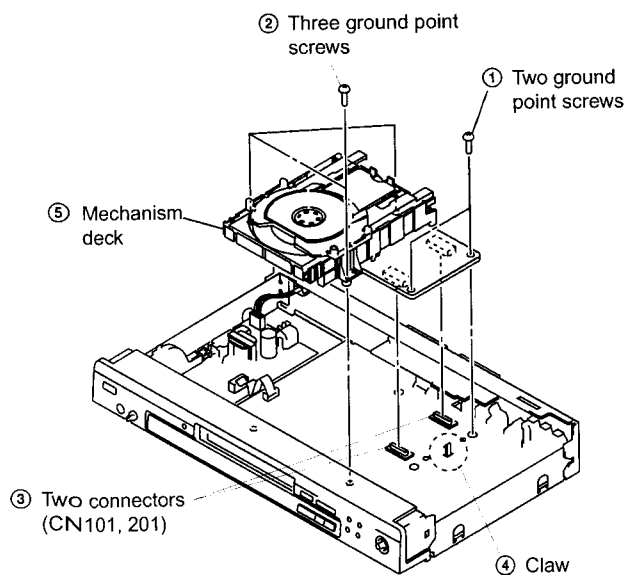


2-8. OPTICAL PICK-UP REMOVAL

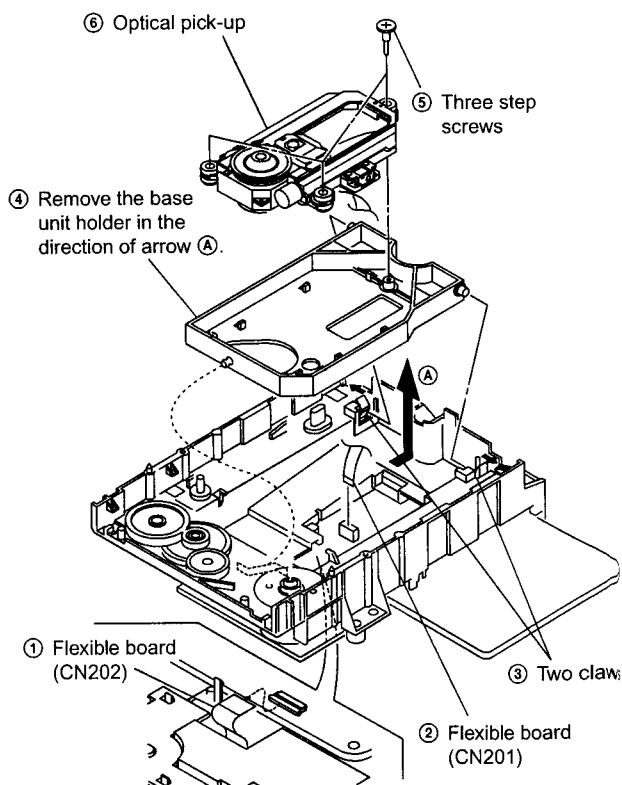

2-9. BELT, MB-86 BOARD, LOADING MOTOR (M001), MS-48 BOARD REMOVAL

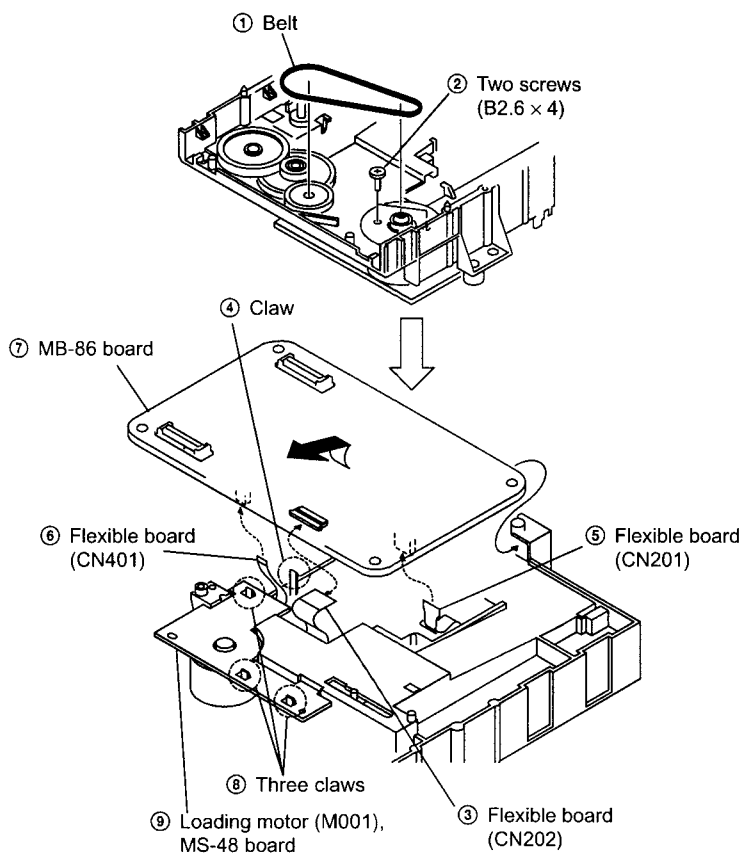

2-10. AI-17 BOARD REMOVAL

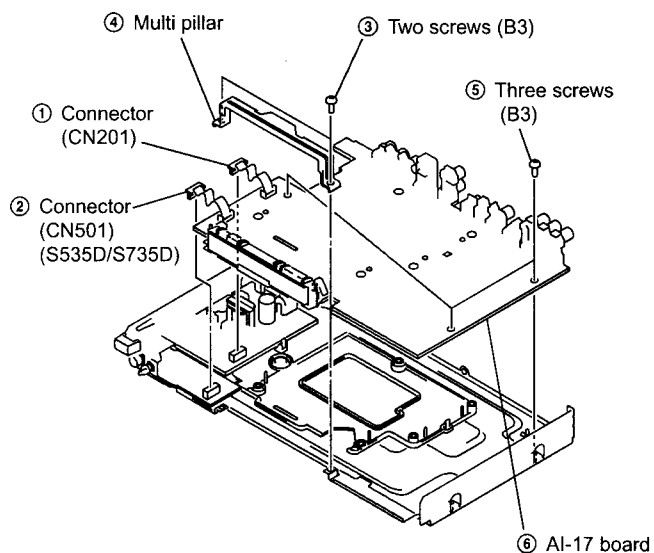

2-11. INTERNAL VIEWS

Optical pick-up
(KHM-220AAA/J1RP)
A-6062-397-A


Lever switch
1-771-562-11

DC motor (loading)
1-541-632-11

Flexible flat cable
1-792-457-11

DC motor (loading)
1-541-632-11


2-12. CIRCUIT BOARDS LOCATION

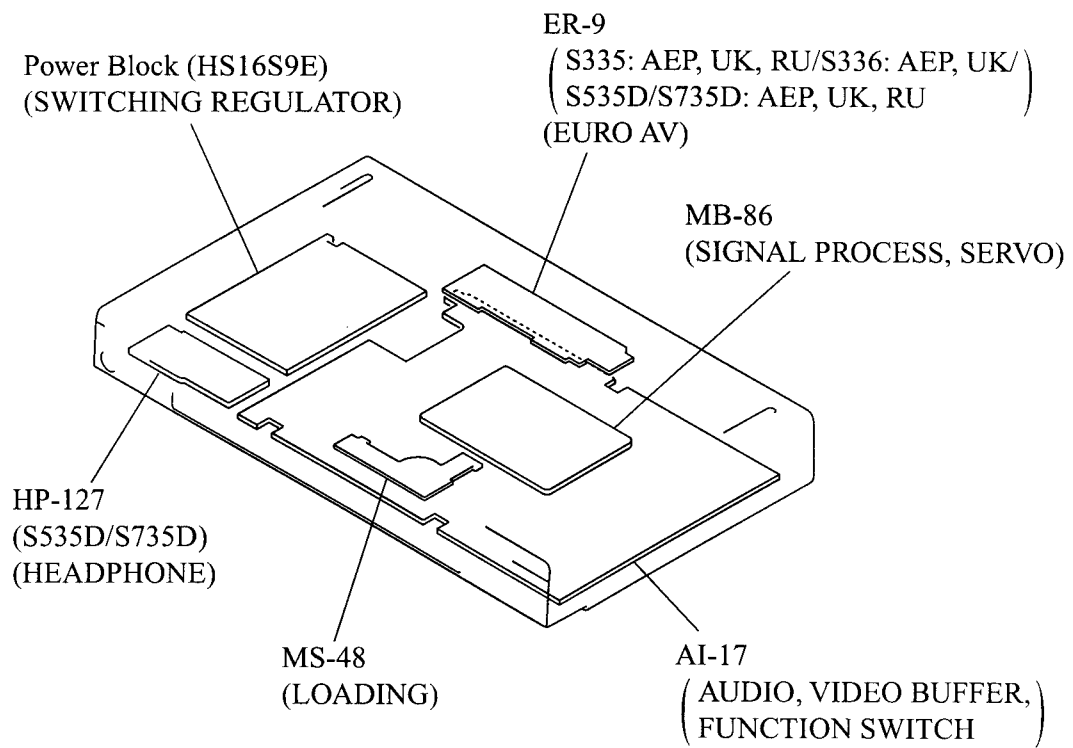


SECTION 3 BLOCK DIAGRAMS

DVP-S335/S336/S345/S535D/S735D

3-1. OVERALL BLOCK DIAGRAM

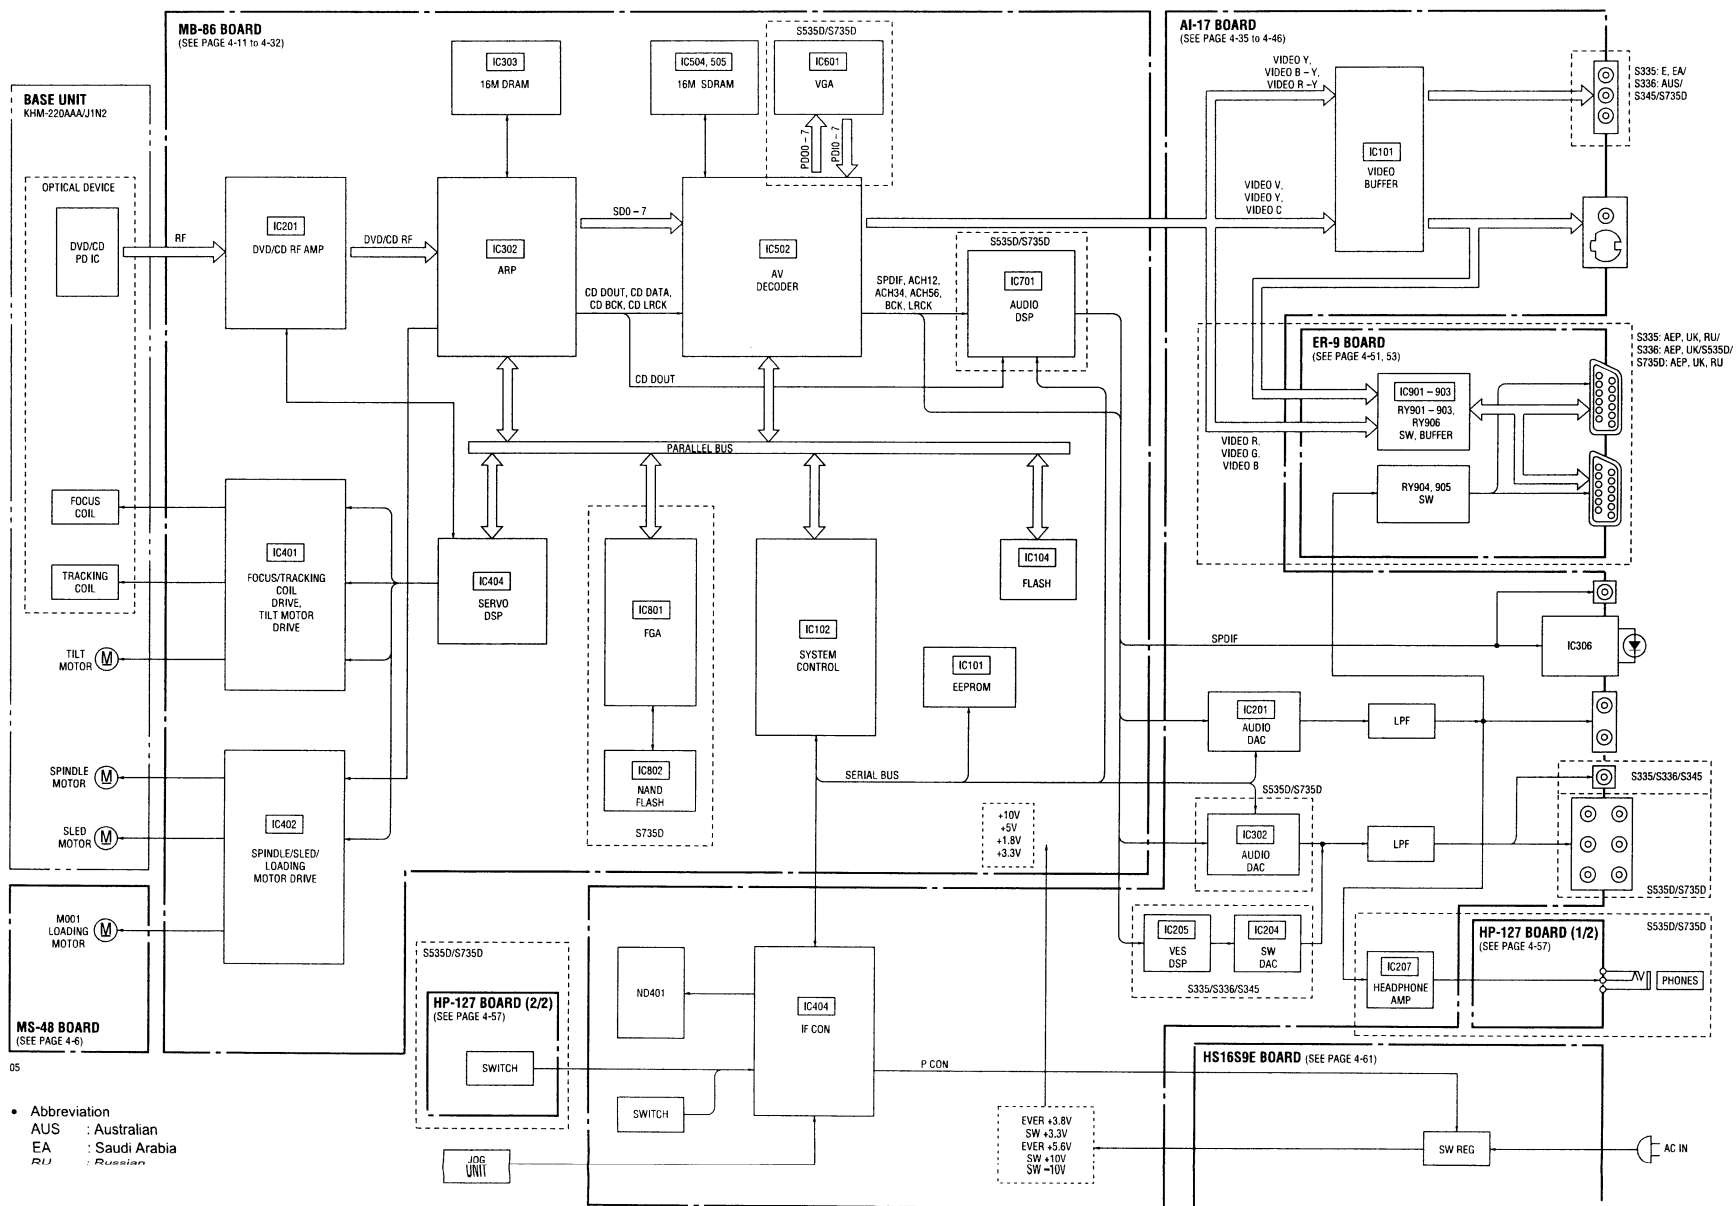


3-2. RF/SERVO BLOCK DIAGRAM

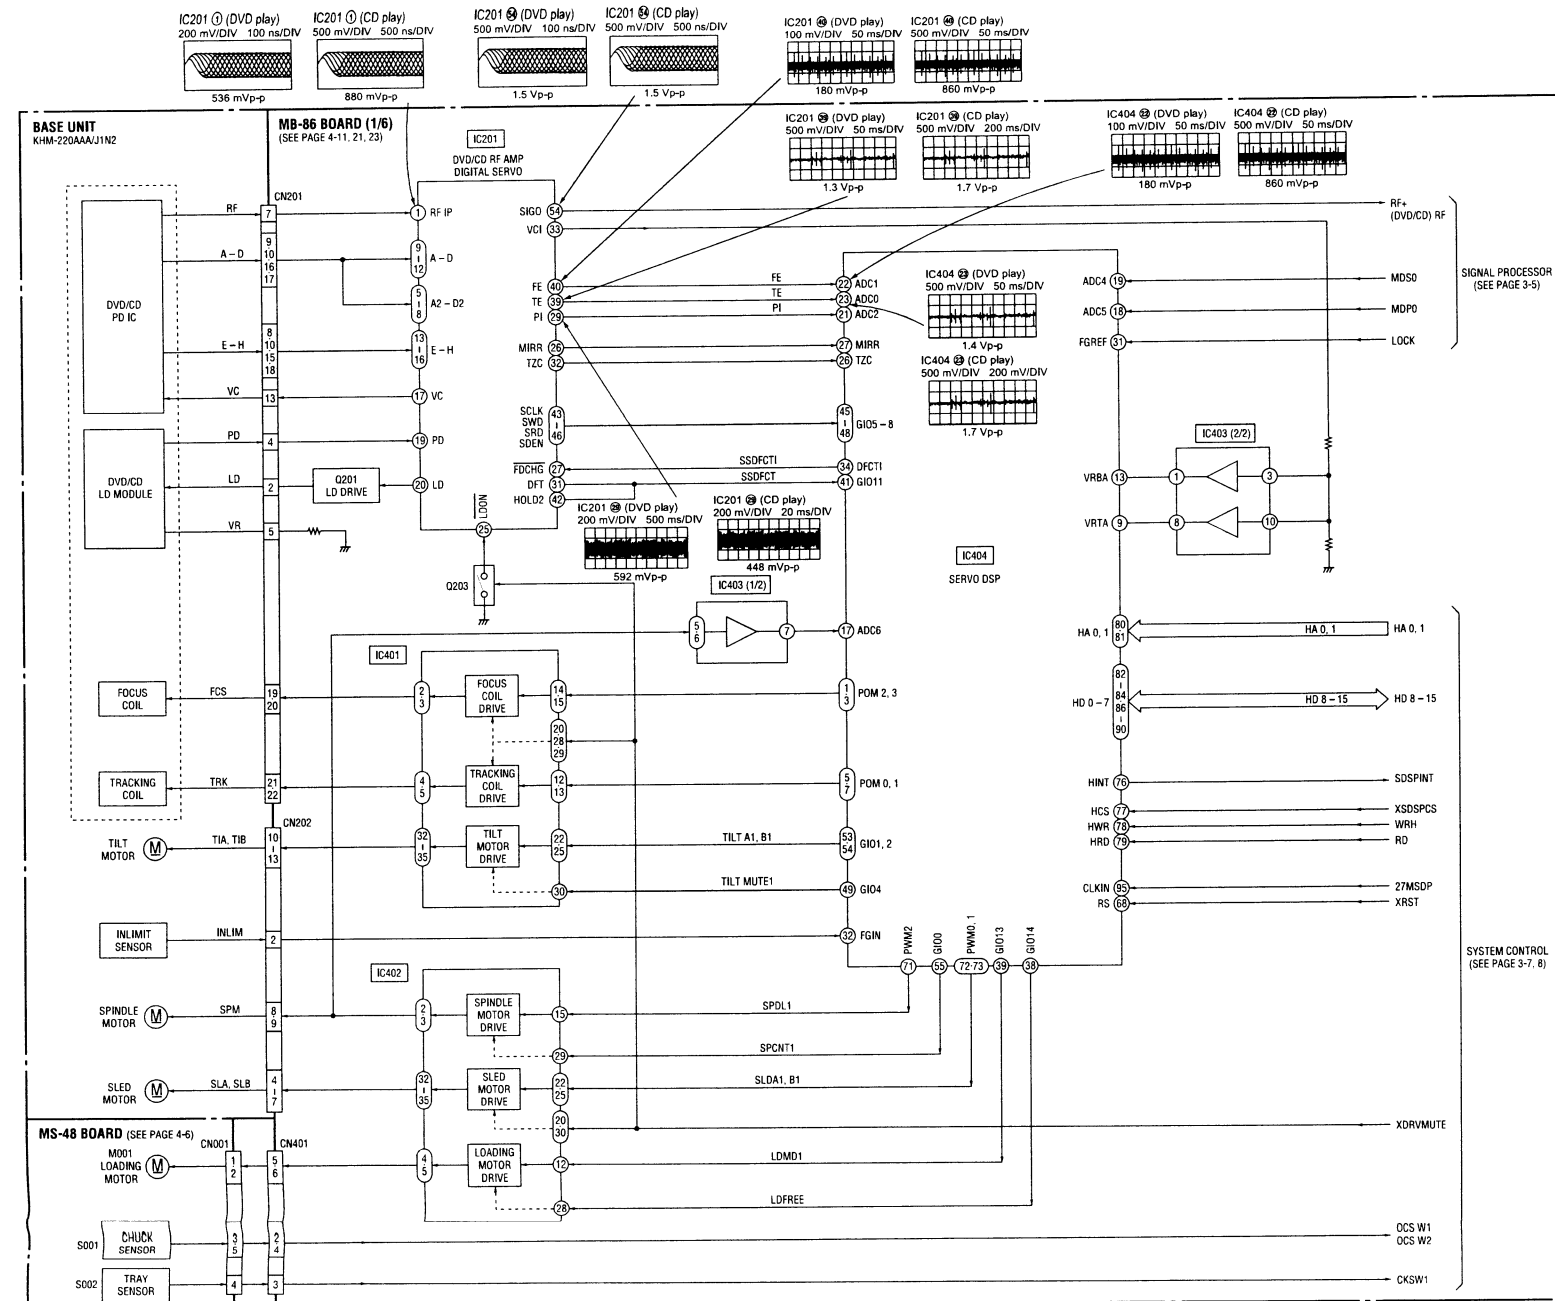

3-5



3-4. SYSTEM CONTROL BLOCK DIAGRAM

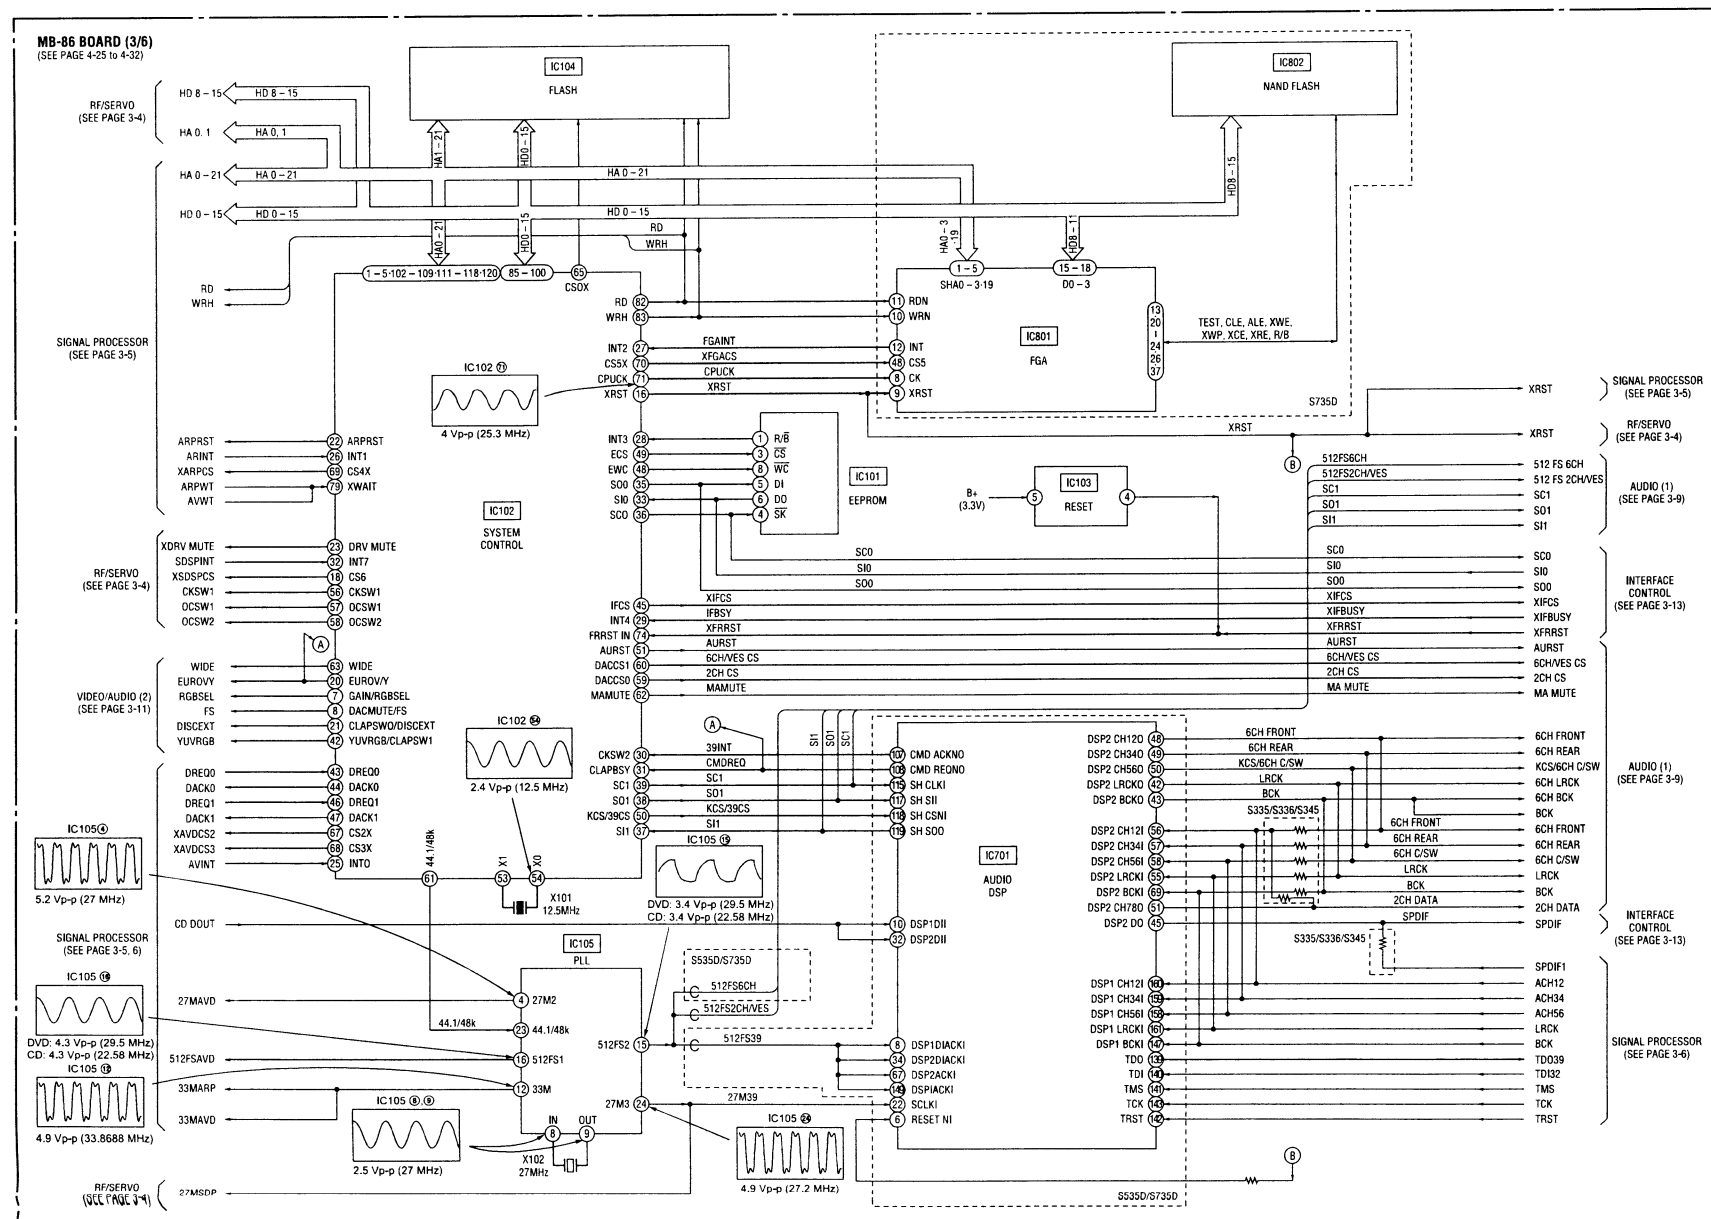


[illegible]

3-13



3-8. POWER BLOCK DIAGRAM

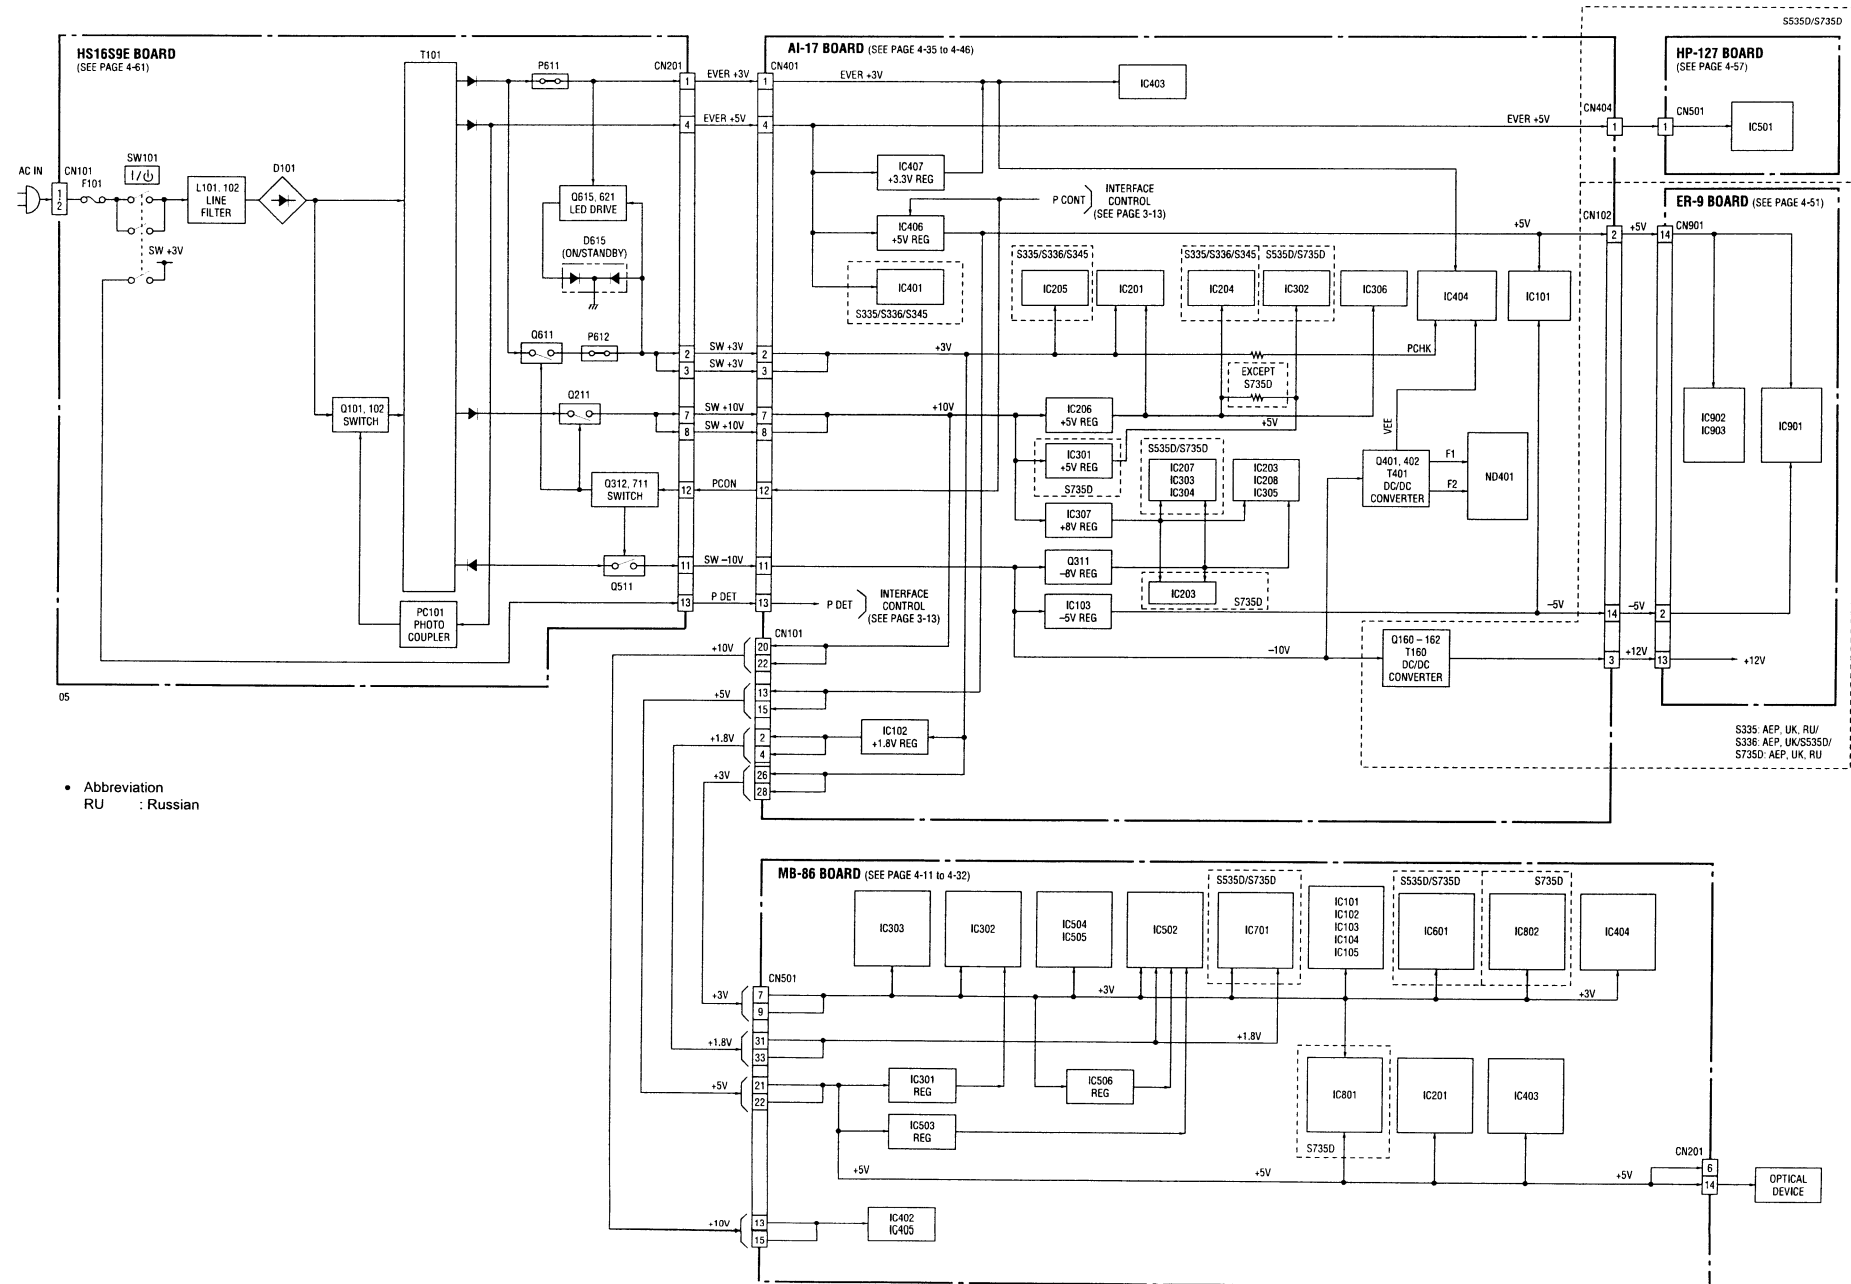
 
 



SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For printed wiring boards:


 

 



-  : indicates a lead wire mounted on the component side.
-  : indicates a lead wire mounted on the printed side.
-  : Through hole.
-  : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Side B)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Side A)

- Abbreviation
AUS : Australian
EA : Saudi Arabia
RU : Russian

For schematic Diagram:


- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, $\frac{1}{4}$ W (Chip resistors : $\frac{1}{10}$ W) unless otherwise specified.
k Ω : 1000 Ω , M Ω : 1000k Ω .
- All capacitors are in μ F unless otherwise noted. pF : μ F
50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.
-  : internal component.
-  : adjustment for repair.
-  : B+ Line.
-  : B- Line.
- Circled numbers refer to waveforms.
- Voltages are dc between measurement point.
- Readings are taken with a color-bar signals on DVD reference disc and when playing CD reference disc.
- Readings are taken with a digital multimeter (DC 10M Ω).
- Voltage variations may be noted due to normal production tolerances.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Abbreviation
AUS : Australian
EA : Saudi Arabia
RU : Russian
- Description about destination (AEP model)
AEP50
└ This number indicates the suffix number of its "model code".




4-1. FRAME SCHEMATIC DIAGRAM

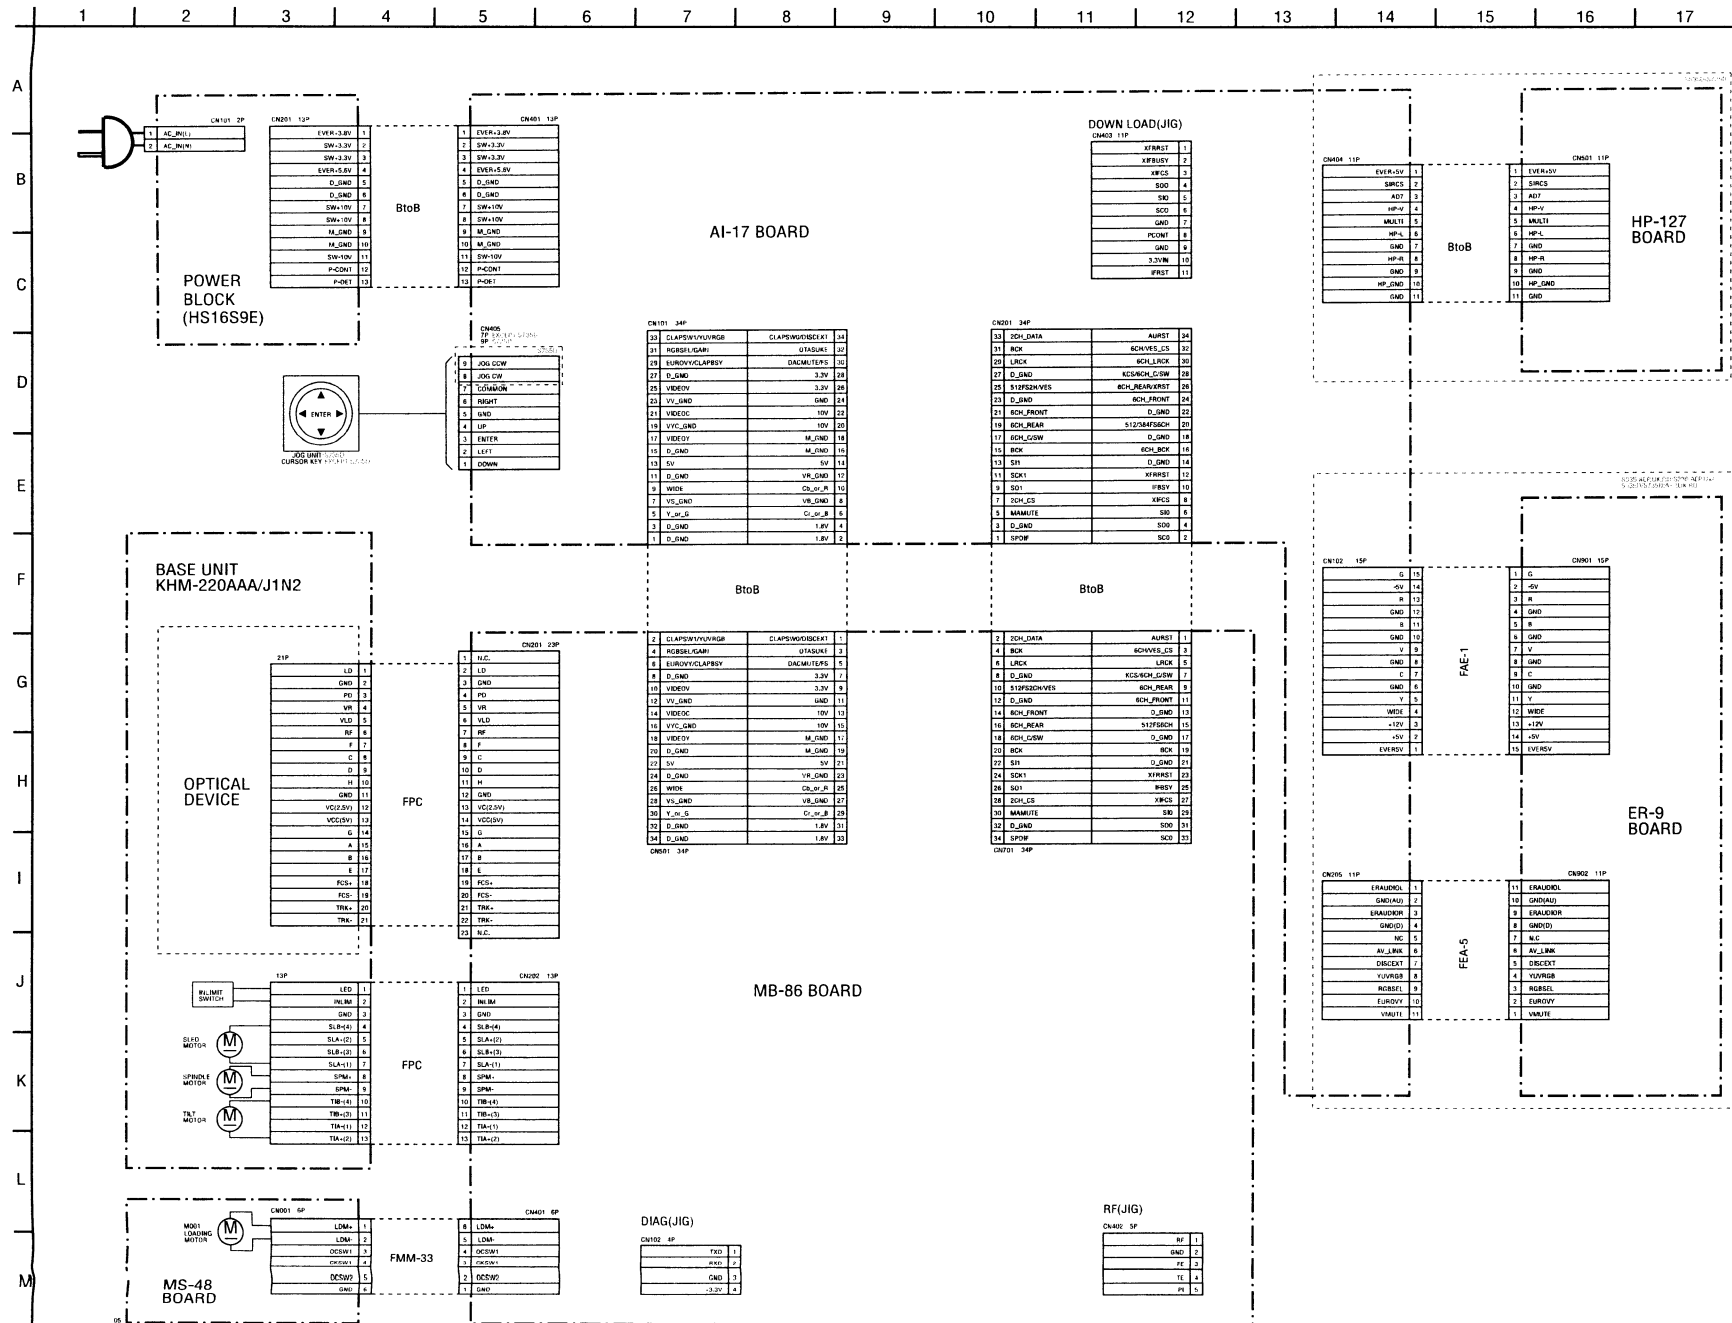

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


MS-48 (LOADING) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
– Ref. No.: MS-48 board; 2,000 series –

There are few cases that the part isn't mounted in this model is printed on this diagram.

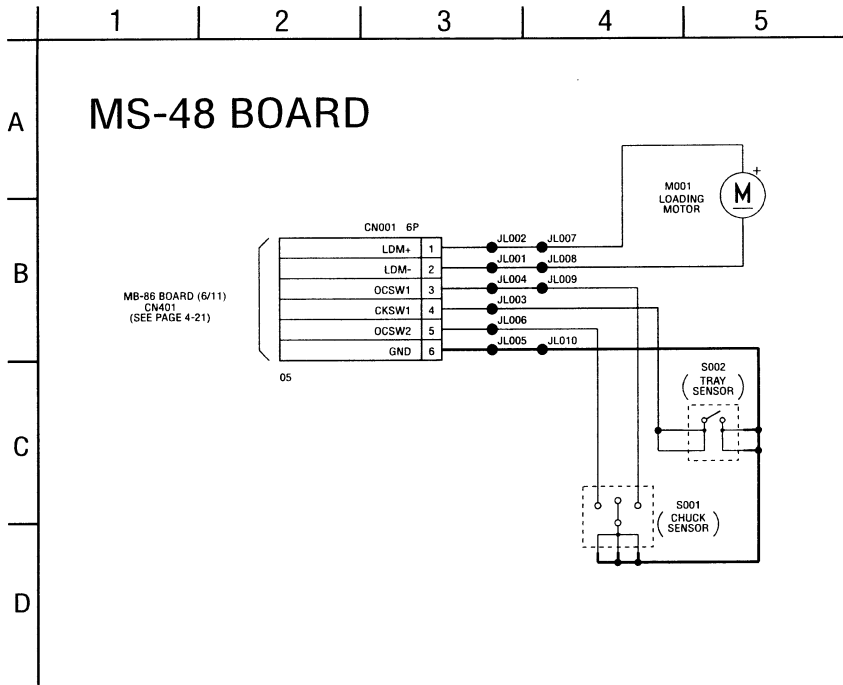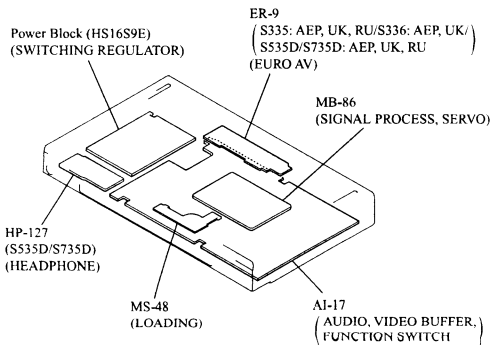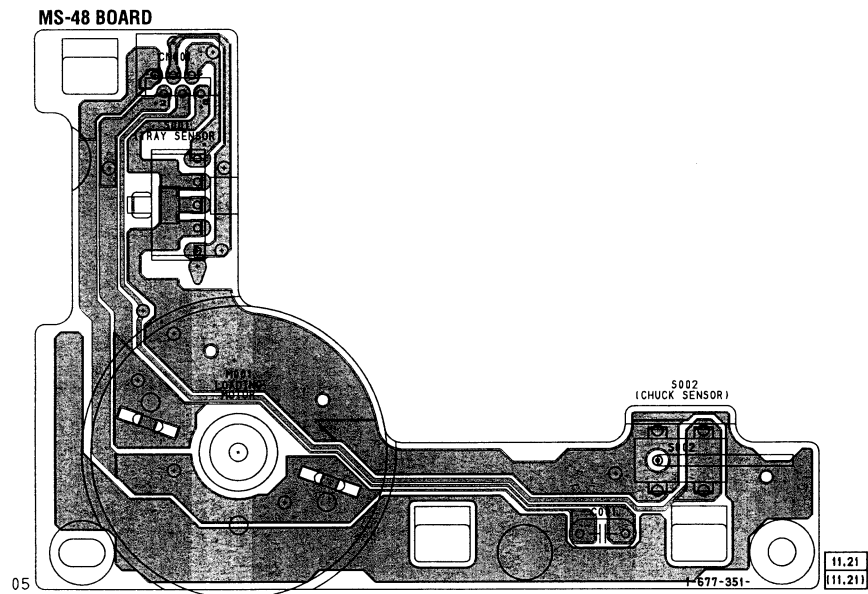


– Ref. No.: MB-86 board; 1,000 series –

| | |
|-------|-----|
| IC101 | B-2 |
| IC102 | C-1 |
| IC201 | B-5 |
| IC302 | C-4 |
| IC404 | B-4 |
| IC502 | C-2 |
| IC503 | D-3 |
| IC506 | B-3 |
| IC701 | A-2 |

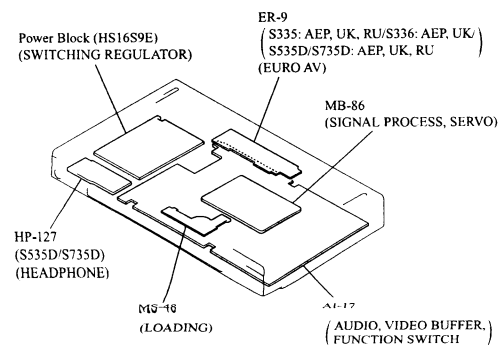

MB-86 BOARD (SIDE B)

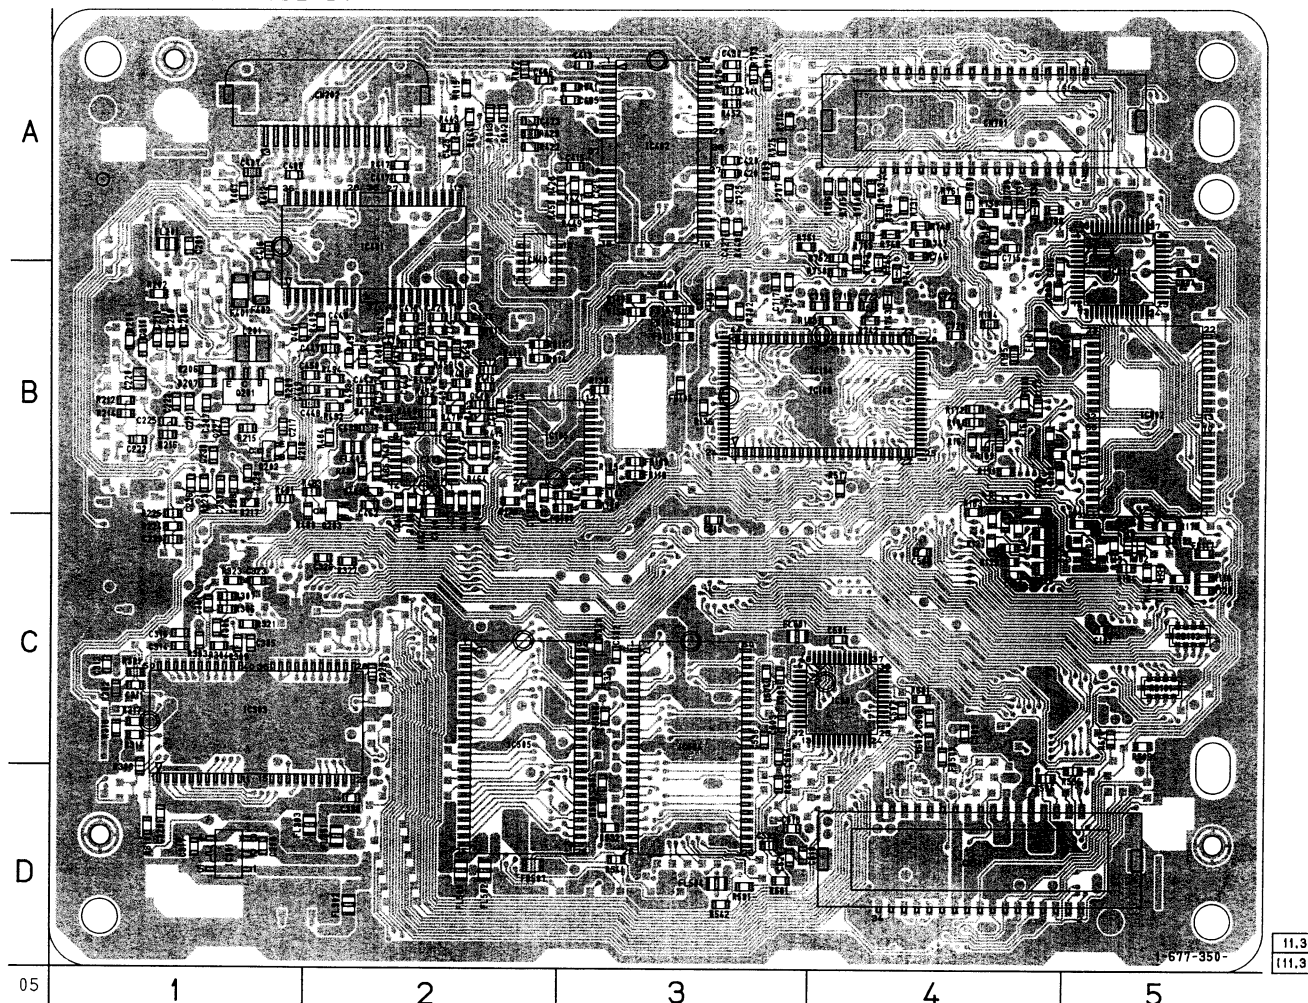


MB-86 BOARD (SIDE B)


| | | | |
|-------|-----|-------|-----|
| CN202 | A-2 | IC402 | A-3 |
| CN501 | D-4 | IC403 | B-2 |
| CN701 | A-4 | IC504 | C-3 |
| | | IC505 | C-2 |
| D101 | C-5 | IC601 | C-4 |
| | | IC801 | B-5 |
| IC103 | C-5 | IC802 | B-5 |
| IC104 | B-4 | | |
| IC105 | B-2 | Q201 | B-1 |
| IC301 | D-1 | Q203 | B-1 |
| IC303 | C-1 | | |
| IC401 | A-2 | | |

MC-Service


• Waveforms

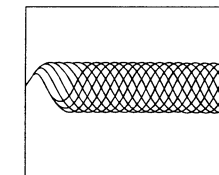① IC201 ① (DVD play)
200 mV/DIV 100 ns/DIV


536 mVp-p

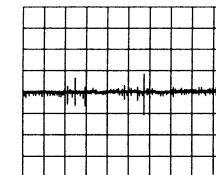② IC201 ② (CD play)
500 mV/DIV 200 ms/DIV


1.7 Vp-p

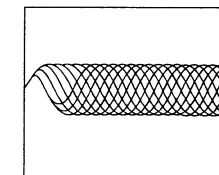③ IC201 ③ (CD play)
500 mV/DIV 500 ns/DIV


880 mVp-p

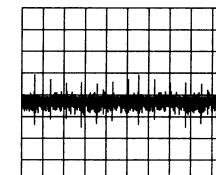④ IC201 ④ (DVD play)
100 mV/DIV 50 ms/DIV


180 mVp-p

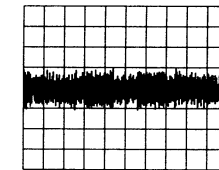⑤ IC201 ⑤ (DVD play)
200 mV/DIV 500 ms/DIV


592 mVp-p

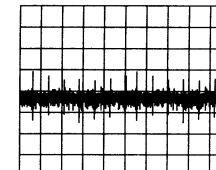⑥ IC201 ⑥ (CD play)
500 mV/DIV 50 ms/DIV


860 mVp-p

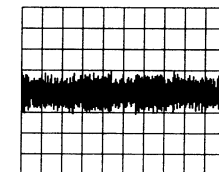⑦ IC201 ⑦ (CD play)
200 mV/DIV 20 ms/DIV


448 mVp-p

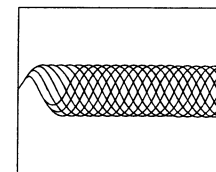⑧ IC201 ⑧ (DVD play)
500 mV/DIV 100 ns/DIV

1.5 Vp-p

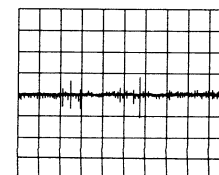⑨ IC201 ⑨ (DVD play)
500 mV/DIV 50 ms/DIV

1.3 Vp-p

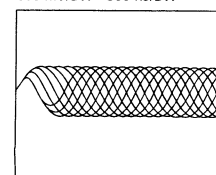
⑩ IC201 ⑩ (CD play)
500 mV/DIV 500 ns/DIV

1.5 Vp-p

SIGNAL PROCESS, SERVO
MB-86

MB-86 (RF AMP, SERVO) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board and page 4-10 for waveforms.

– Ref. No.: MB-86 board; 1,000 series –

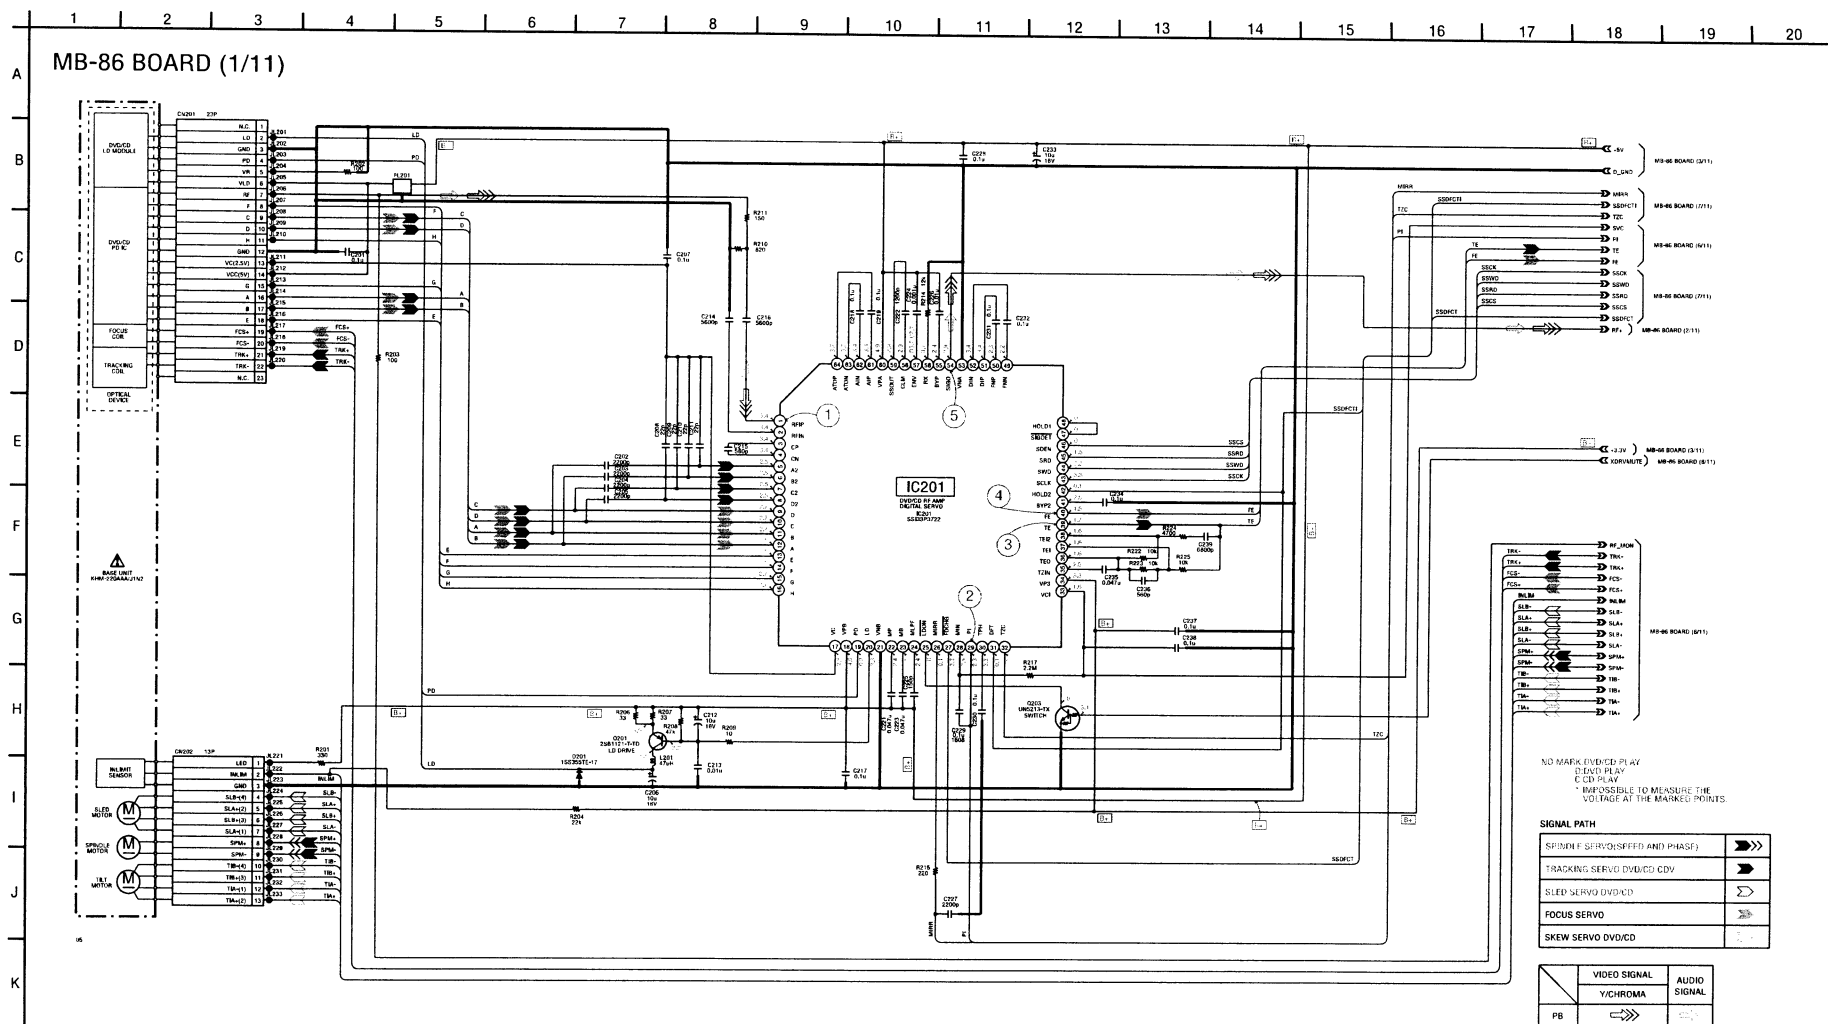


MC-Service

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


MB-86 (ARP) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

- Ref. No.: MB-86 board; 1,000 series -

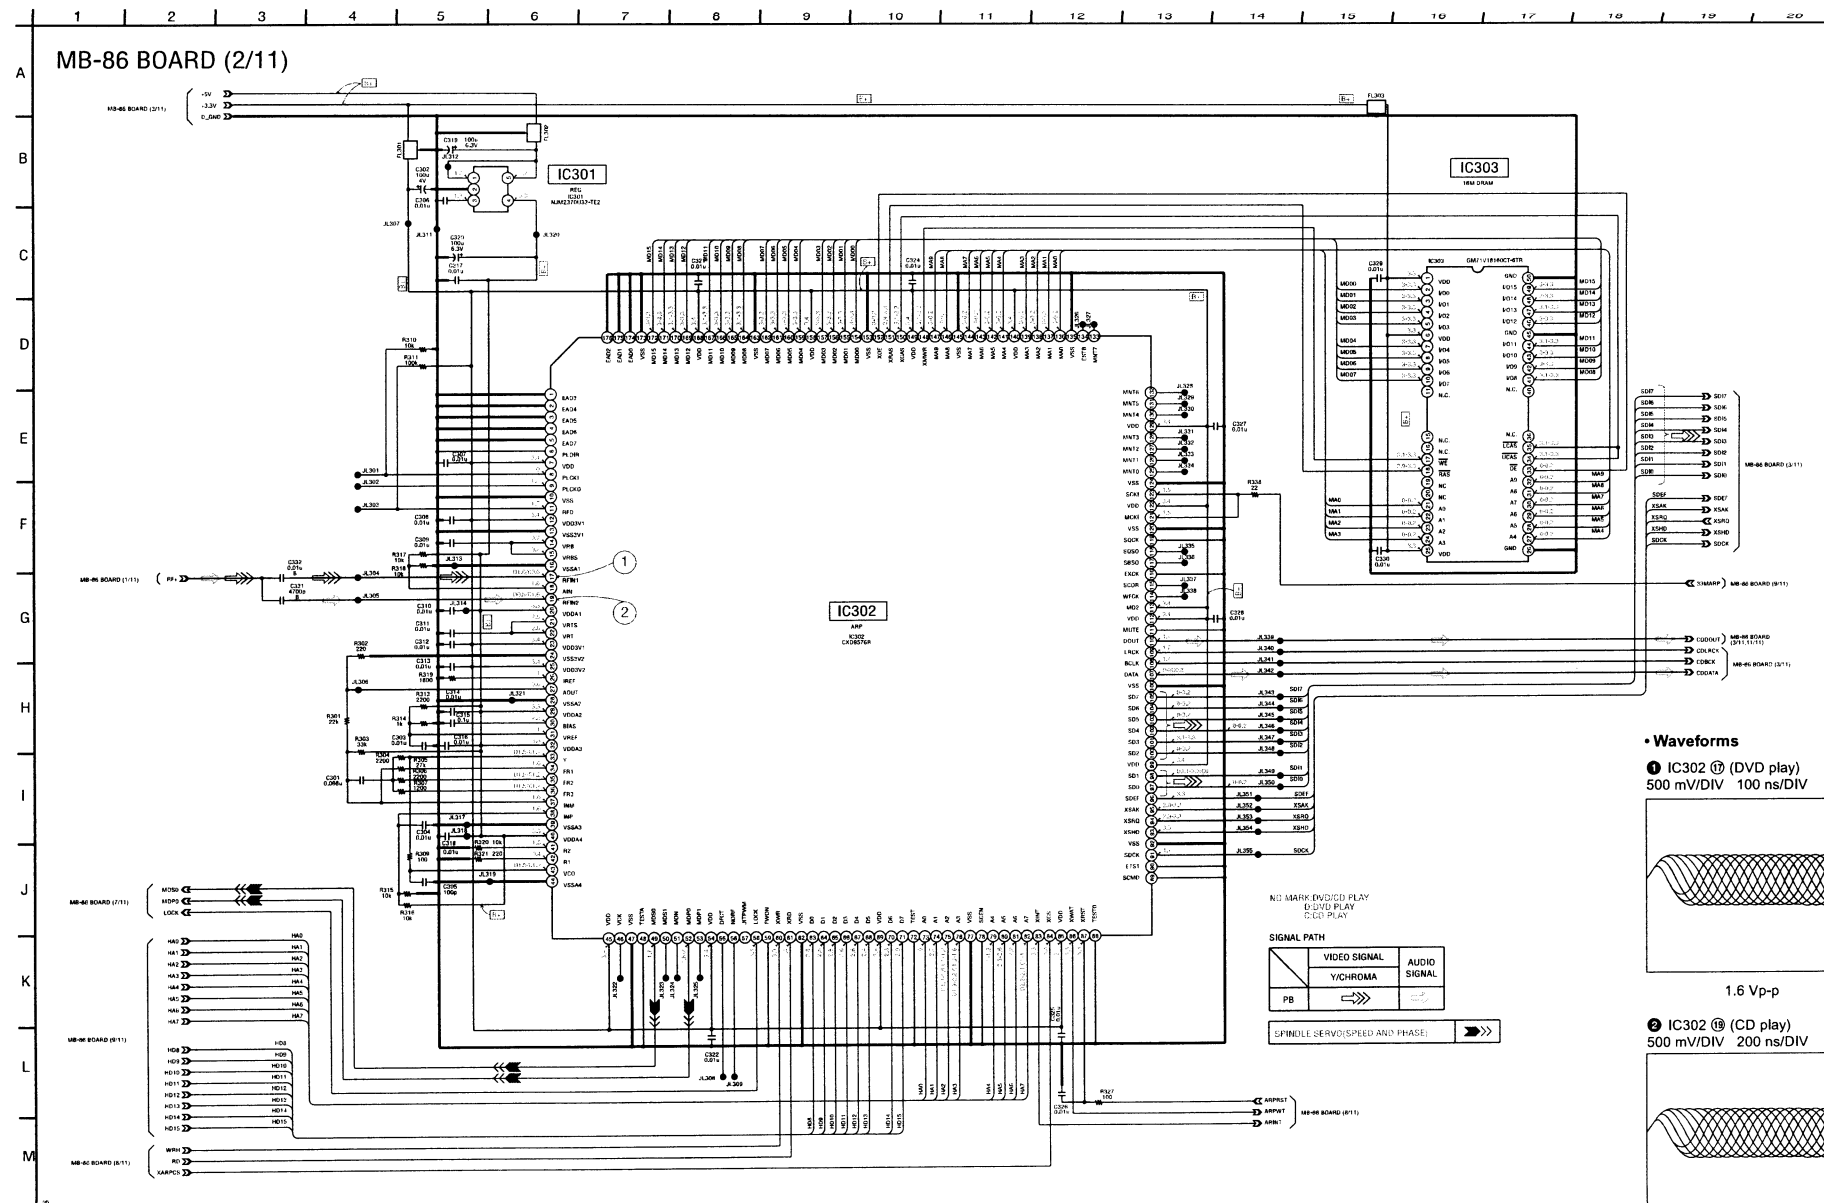


MB-86 (AV DECODER) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

– Ref. No.: MB-86 board; 1,000 series –

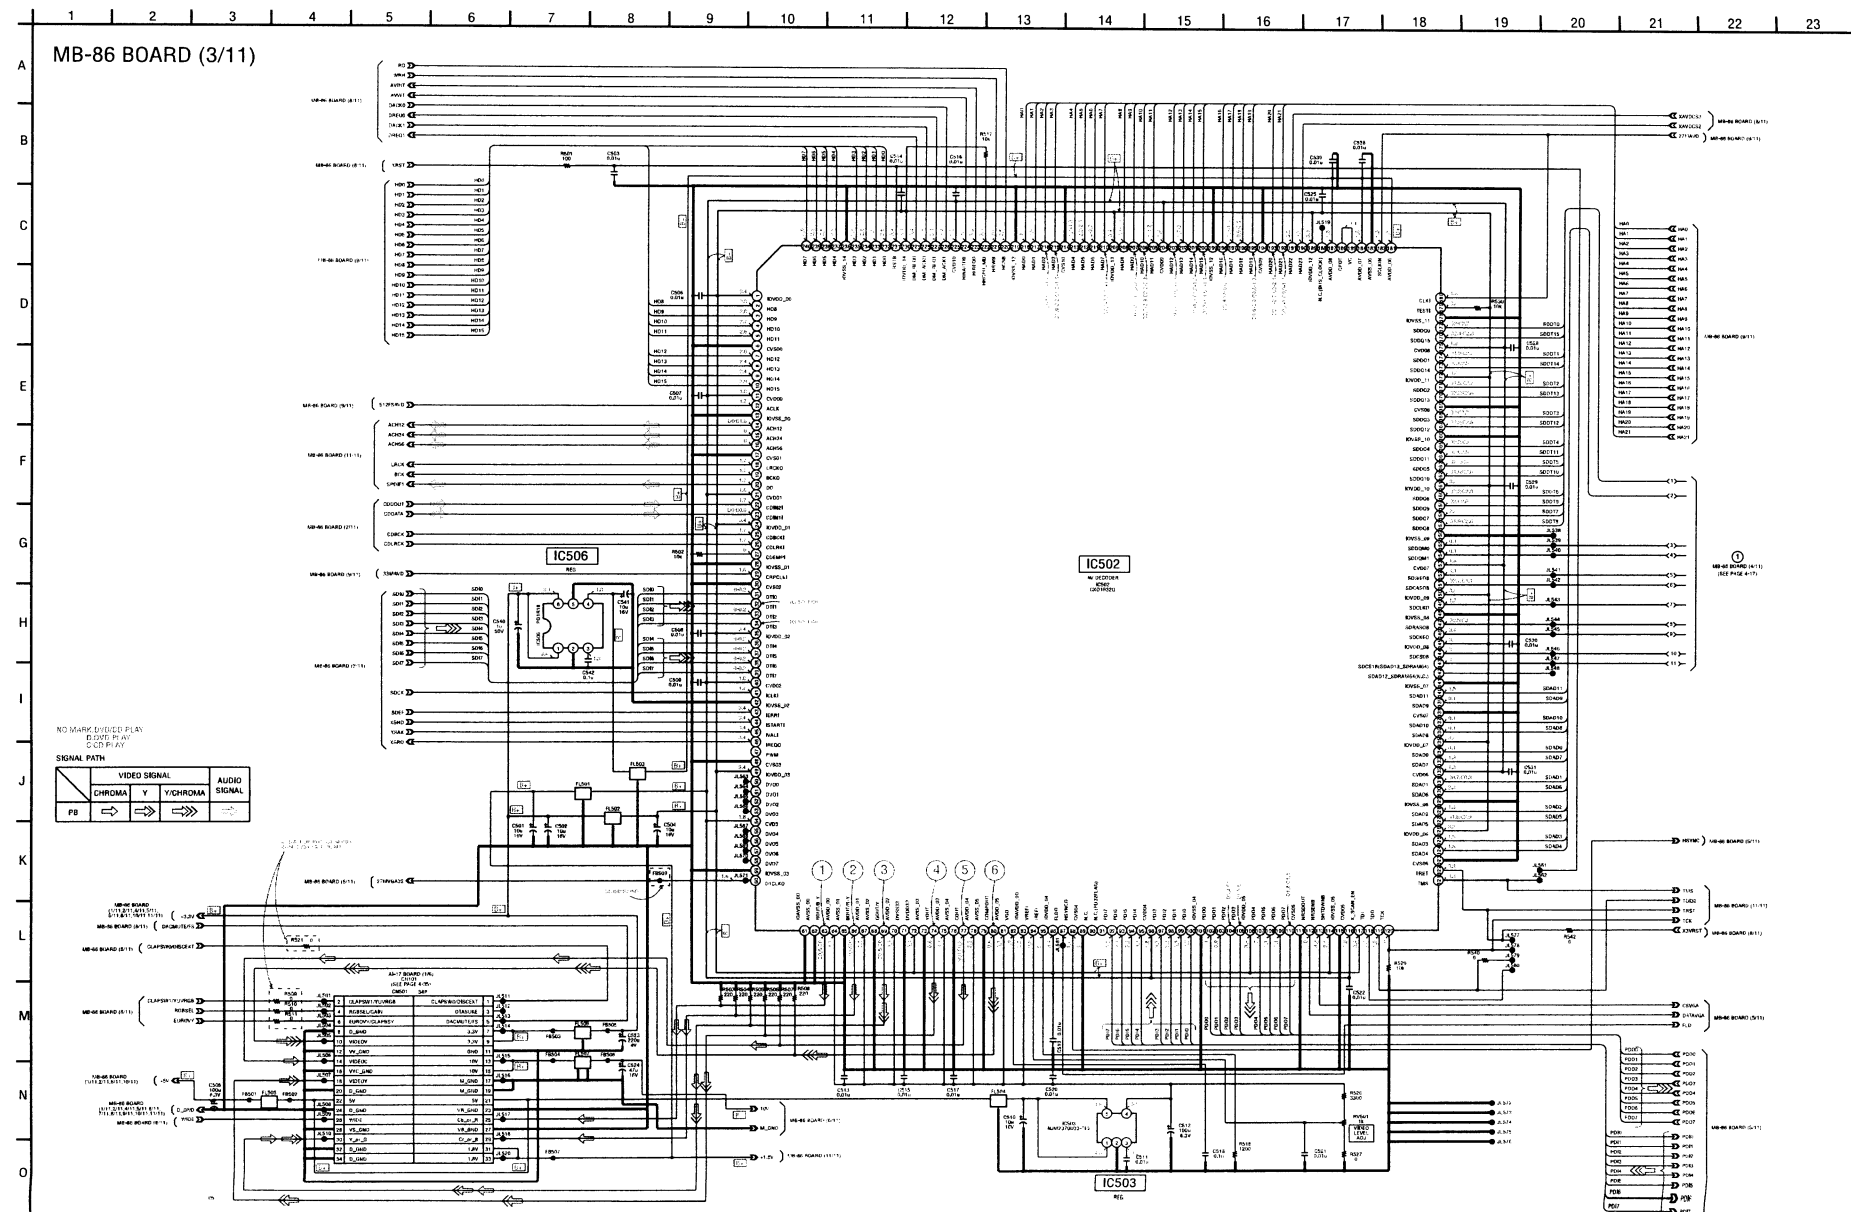


MB-86 (SDRAM) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

- Ref. No.: MB-86 board; 1,000 series -

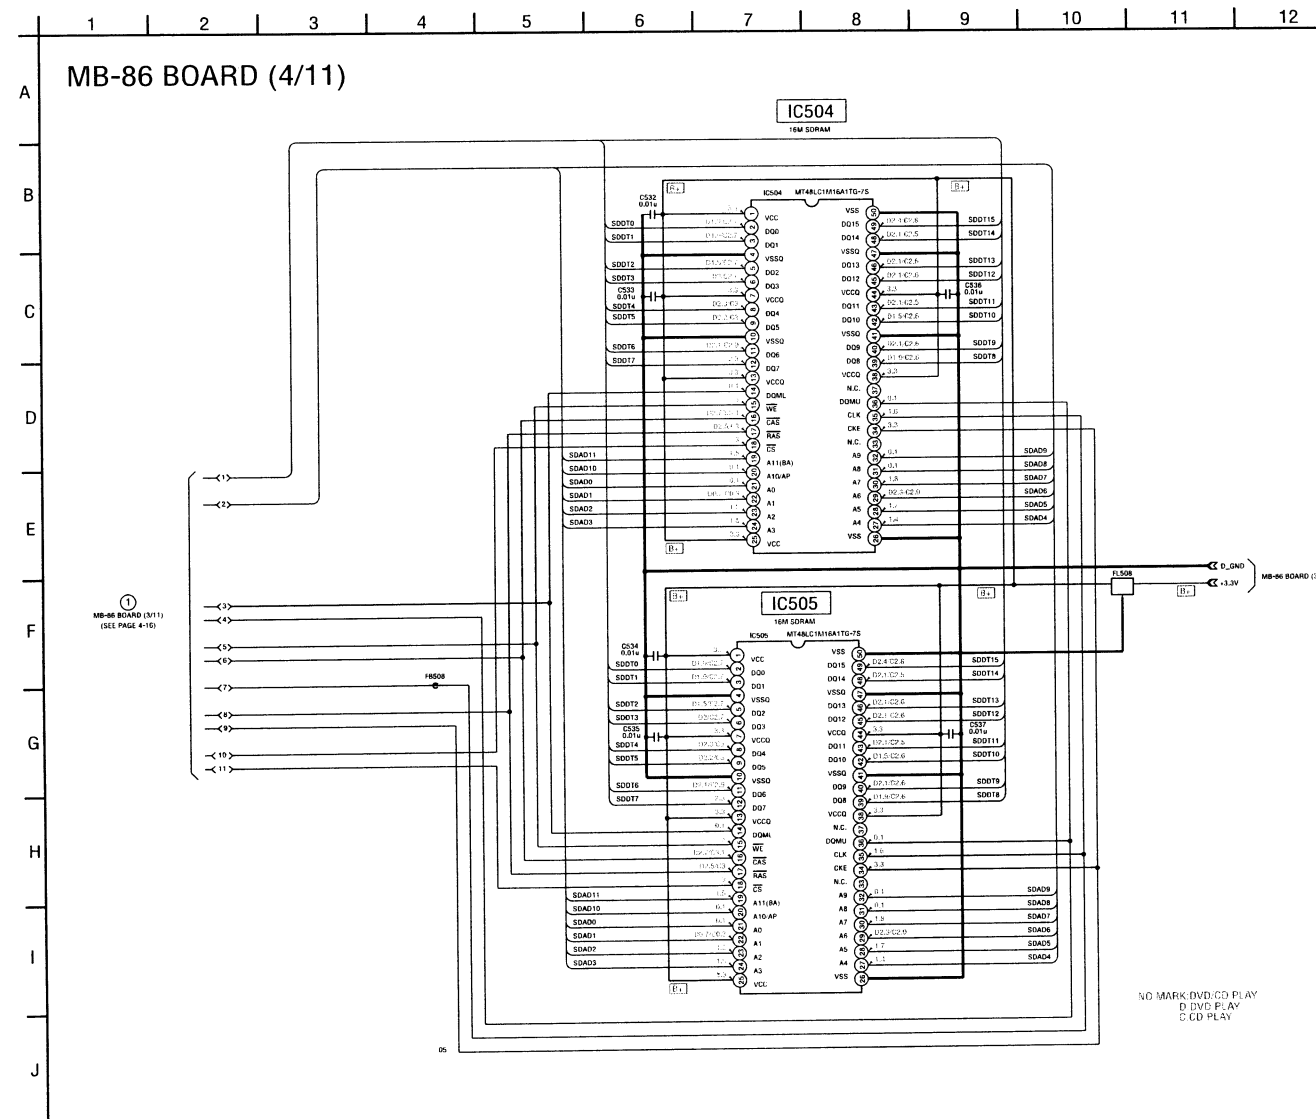


• Waveforms

① IC502 ㉔

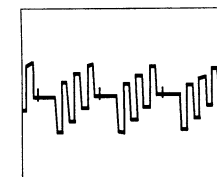


720 mVp-p (H)

② IC502 ㉔ (RGB output)

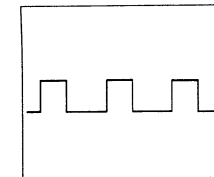


1.0 Vp-p (H)

③ IC502 ㉔ (RGB output)

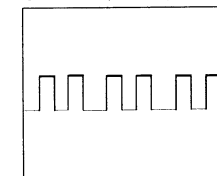


720 mVp-p (H)

④ IC502 ㉔

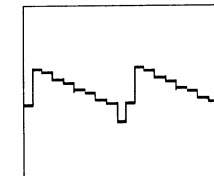


1.1 Vp-p (H)

⑤ IC502 ㉔

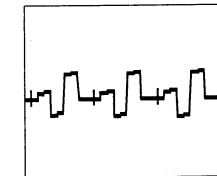


728 mVp-p (H)

⑥ IC502 ㉔

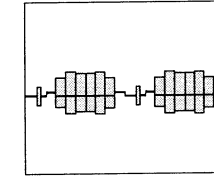


520 mVp-p (H)

⑦ IC502 ㉔ (RGB output)

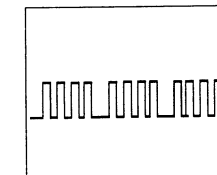


728 mVp-p (H)

⑧ IC502 ㉔

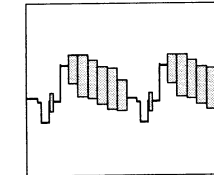

1.2 Vp-p (H)


⑨ IC502 ㉔

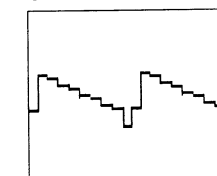


1.0 Vp-p (H)

MB-86 (VGA) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

- Ref. No.: MB-86 board; 1,000 series -

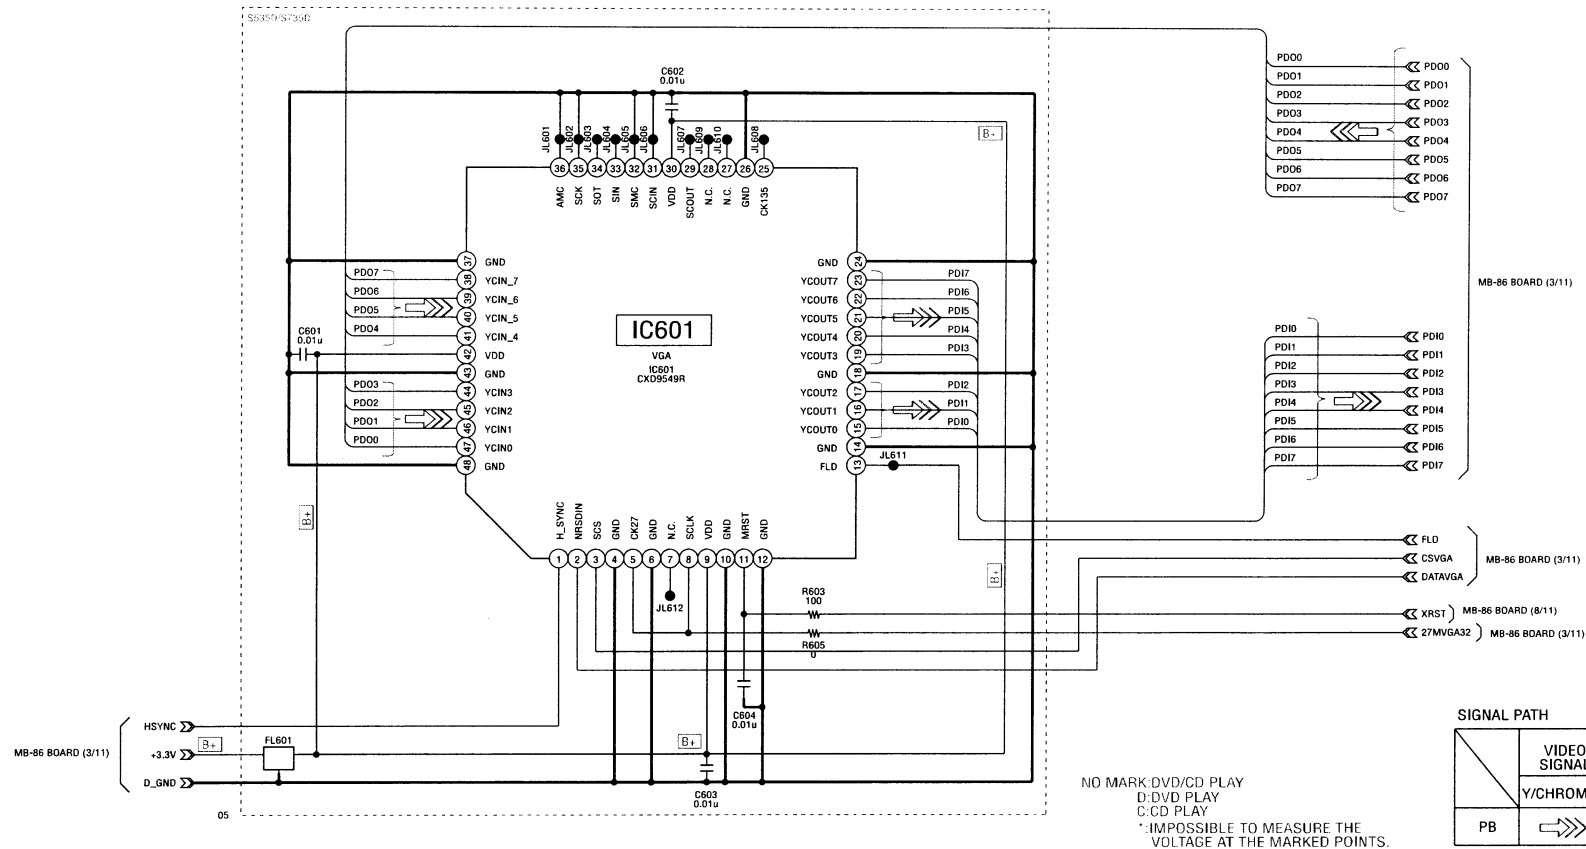MB-86 BOARD (5/11)


MC-Service

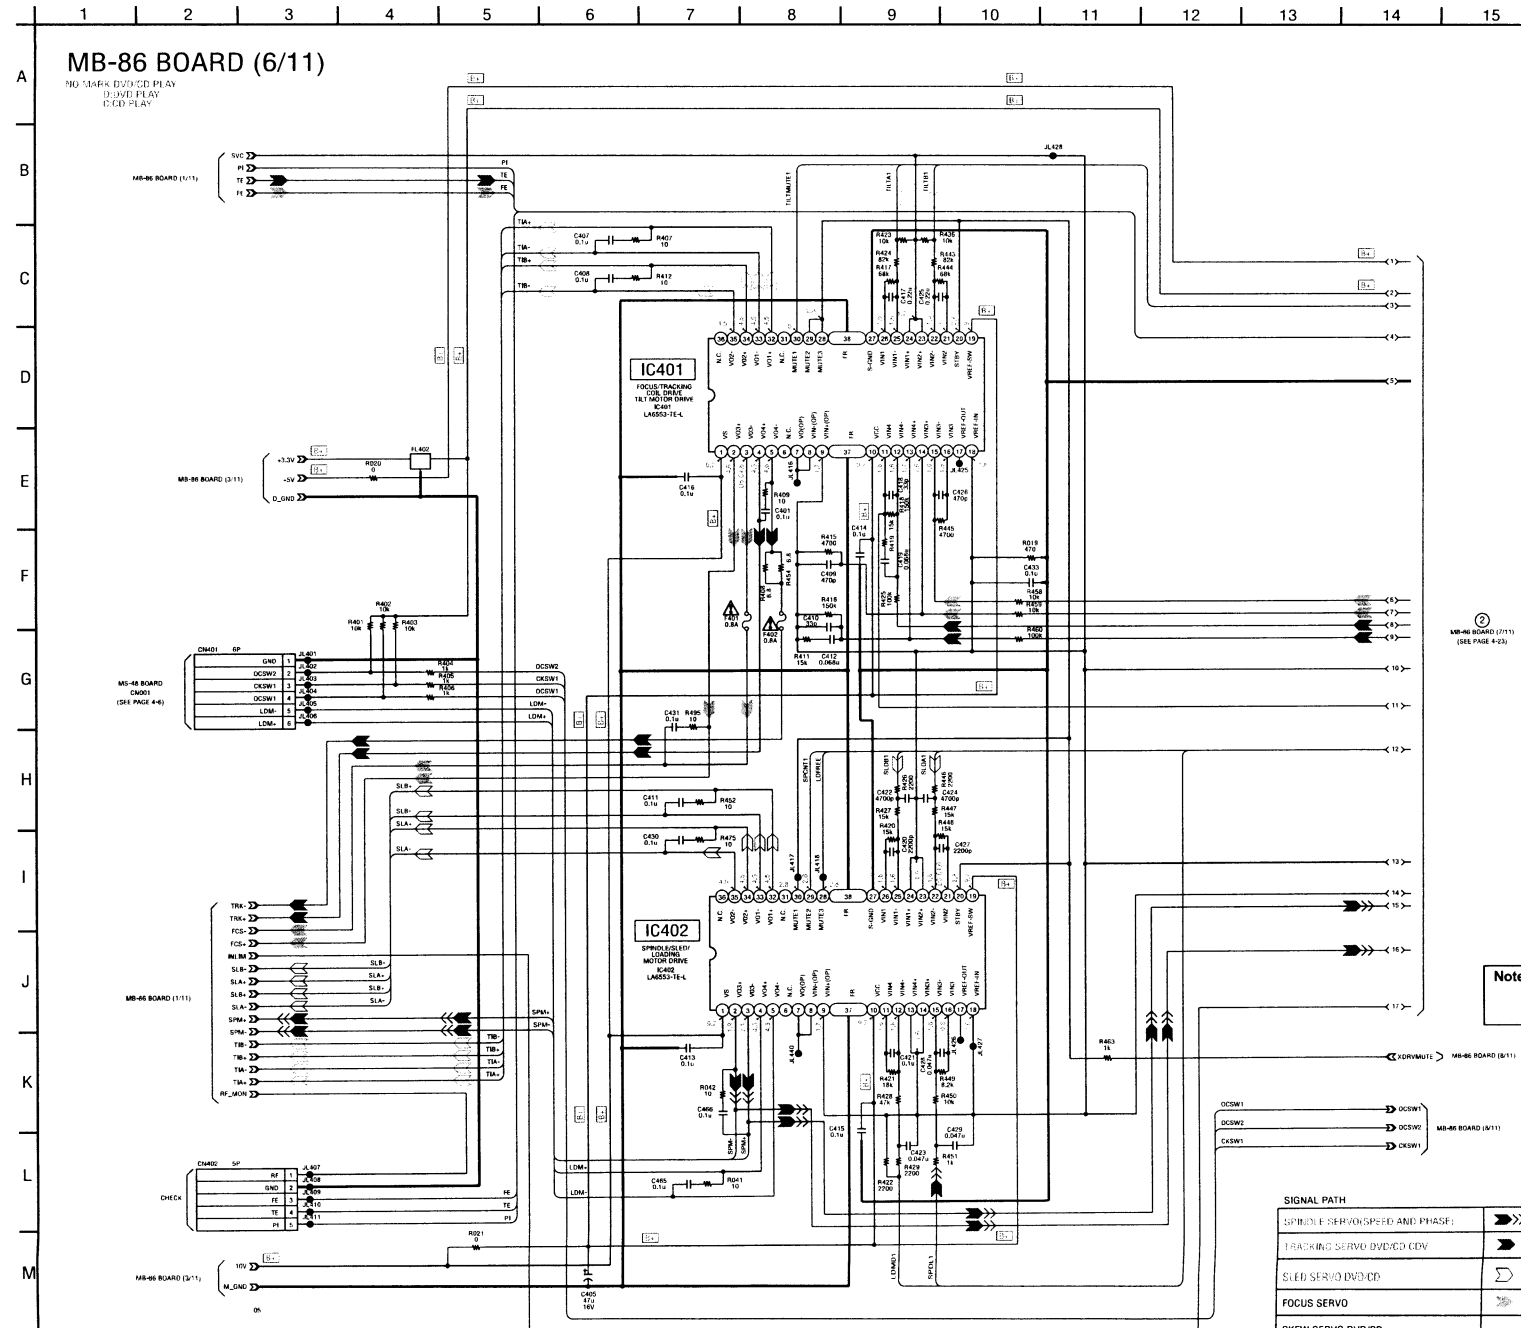

MB-86 (SERVO DSP) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.
 – Ref. No.: MB-86 board; 1,000 series –


• Waveforms

① IC404 (DVD play)
 100 mV/DIV 50 ms/DIV

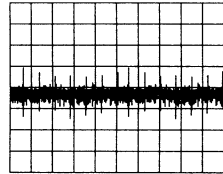


180 mVp-p

① IC404 (CD play)
 500 mV/DIV 50 ms/DIV

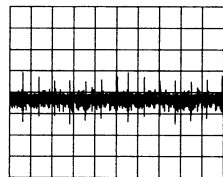


860 mVp-p

② IC404 (DVD play)
 500 mV/DIV 50 ms/DIV

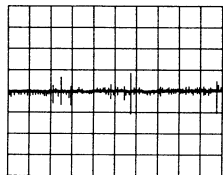


1.4 Vp-p

② IC404 (CD play)
 500 mV/DIV 200 mV/DIV

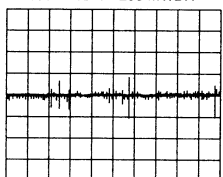


1.7 Vp-p

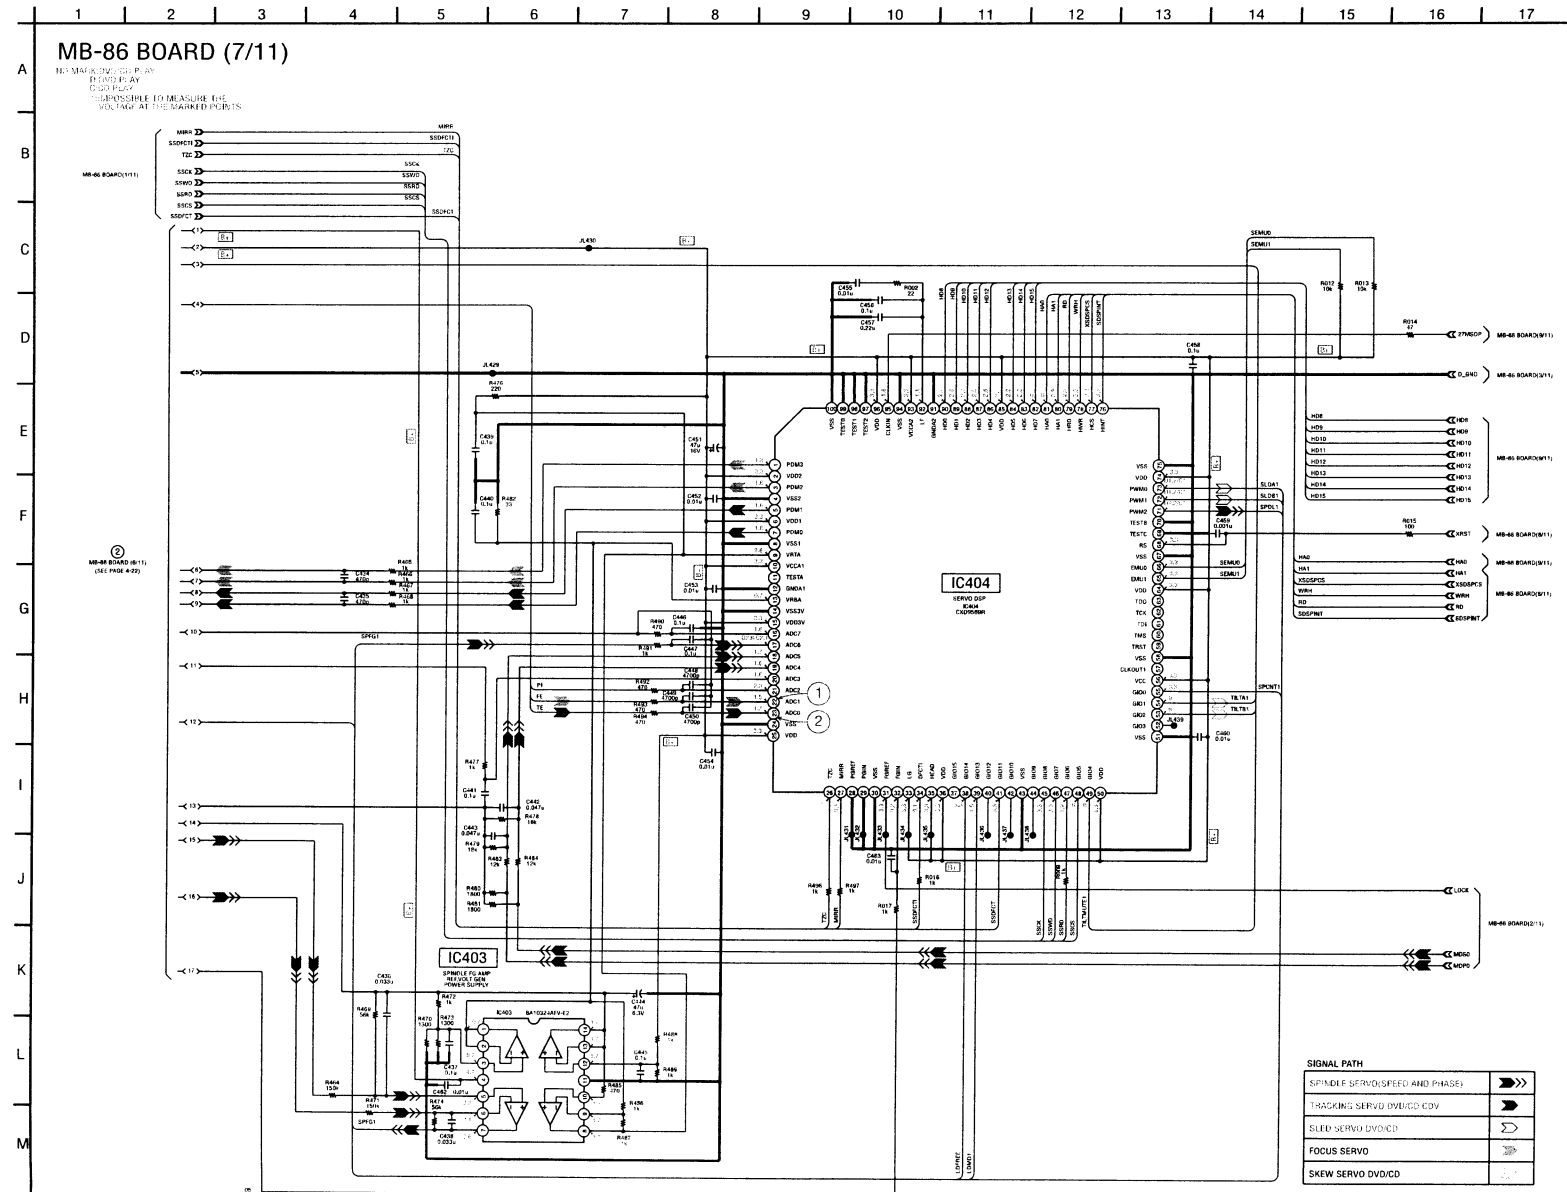


MB-86 (SYSTEM CONTROL) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

- Ref. No.: MB-86 board; 1,000 series -

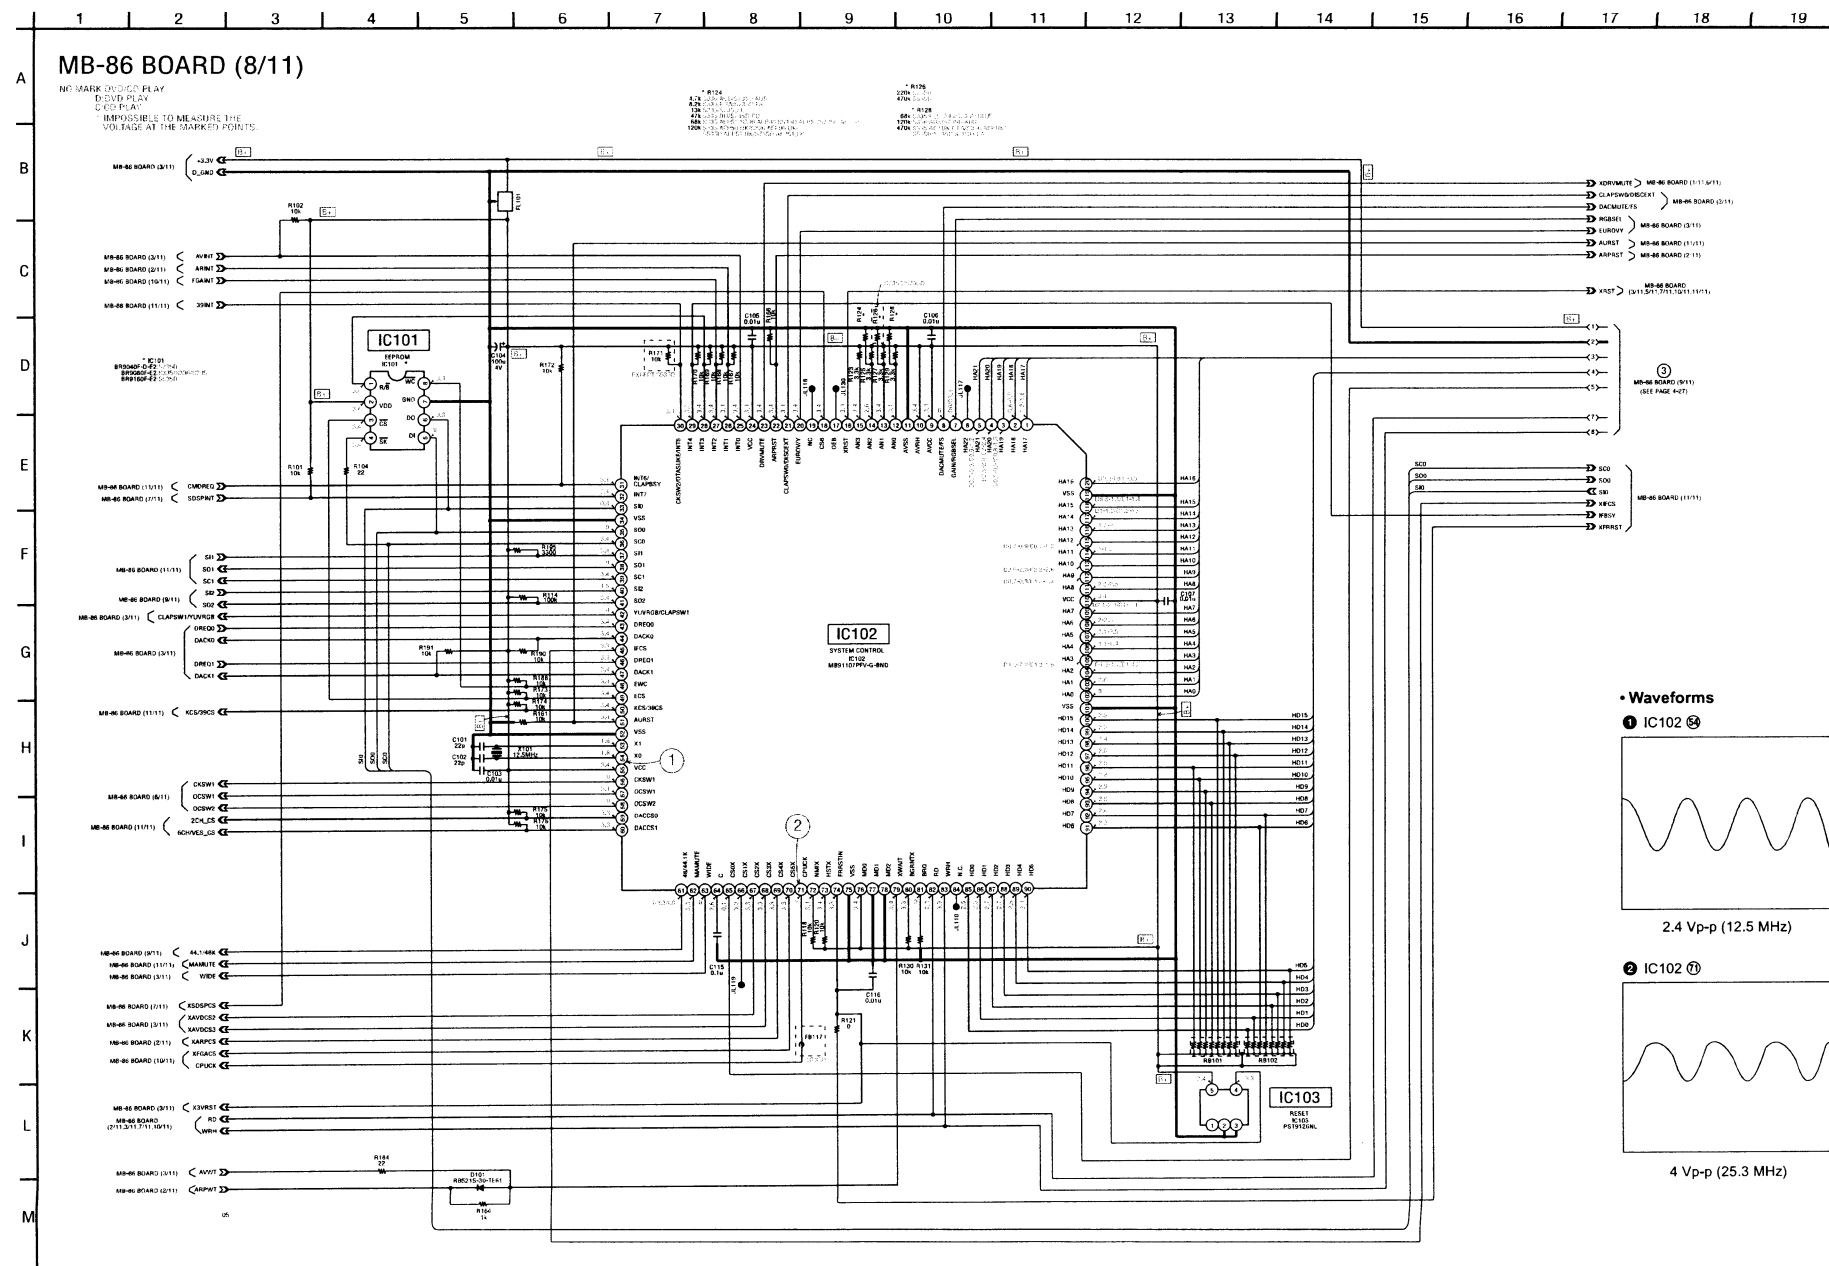


MB-86 (MEMORY, CLOCK GENERATOR) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

– Ref. No.: MB-86 board; 1,000 series –

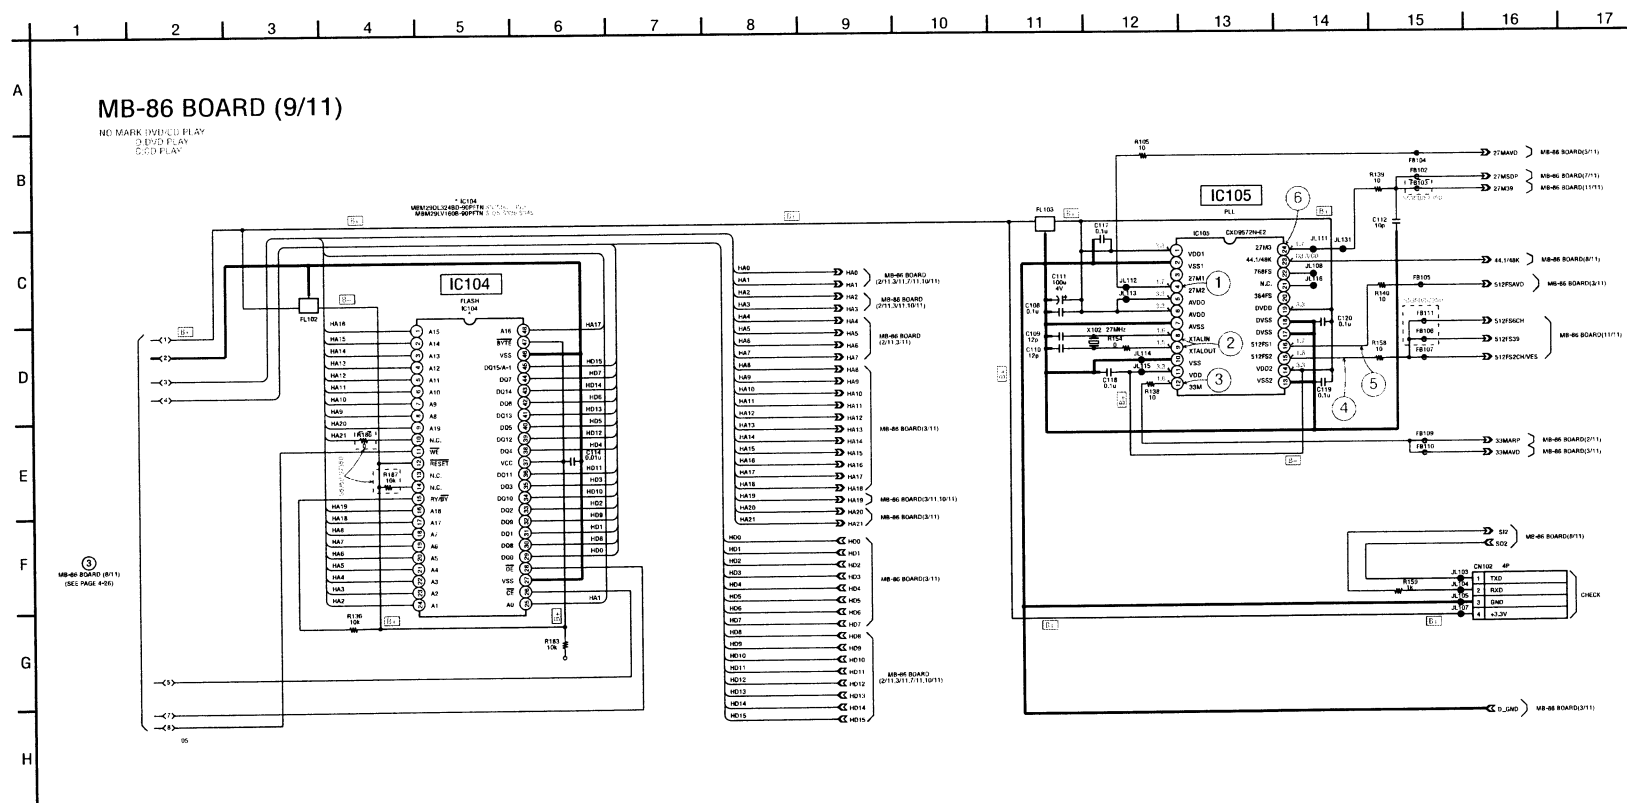


- **Waveforms**

① IC105 ④

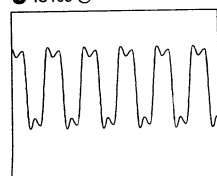
5.2 V_{p-p} (27 MHz)

② IC105 ⑧, ⑨

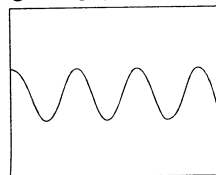


2.5 V_{p-p} (27 MHz)

③ IC105 ⑫

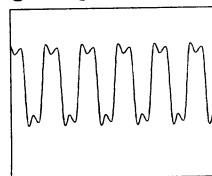


4.9 Vp-p (33.8688 MHz)

④ IC105 ⑮

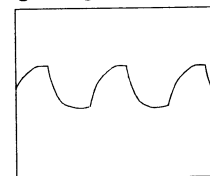


DVD : 3.4 Vp-p (29.5 MHz)
CD : 3.4 Vp-p (22.58 MHz)

⑤ IC105 ⑩

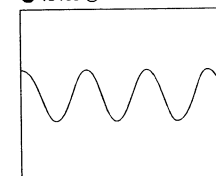

DVD : 4.3 Vp-p (29.5 MHz)
CD : 4.3 Vp-p (22.58 MHz)


⑥ IC105 ②④

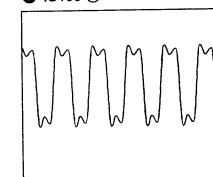

4.9 Vp-p (27.2 MHz)

MB-86 (FGA) SCHEMATIC DIAGRAM • See page 4-7 for printed wiring board.

– Ref. No.: MB-86 board; 1,000 series –

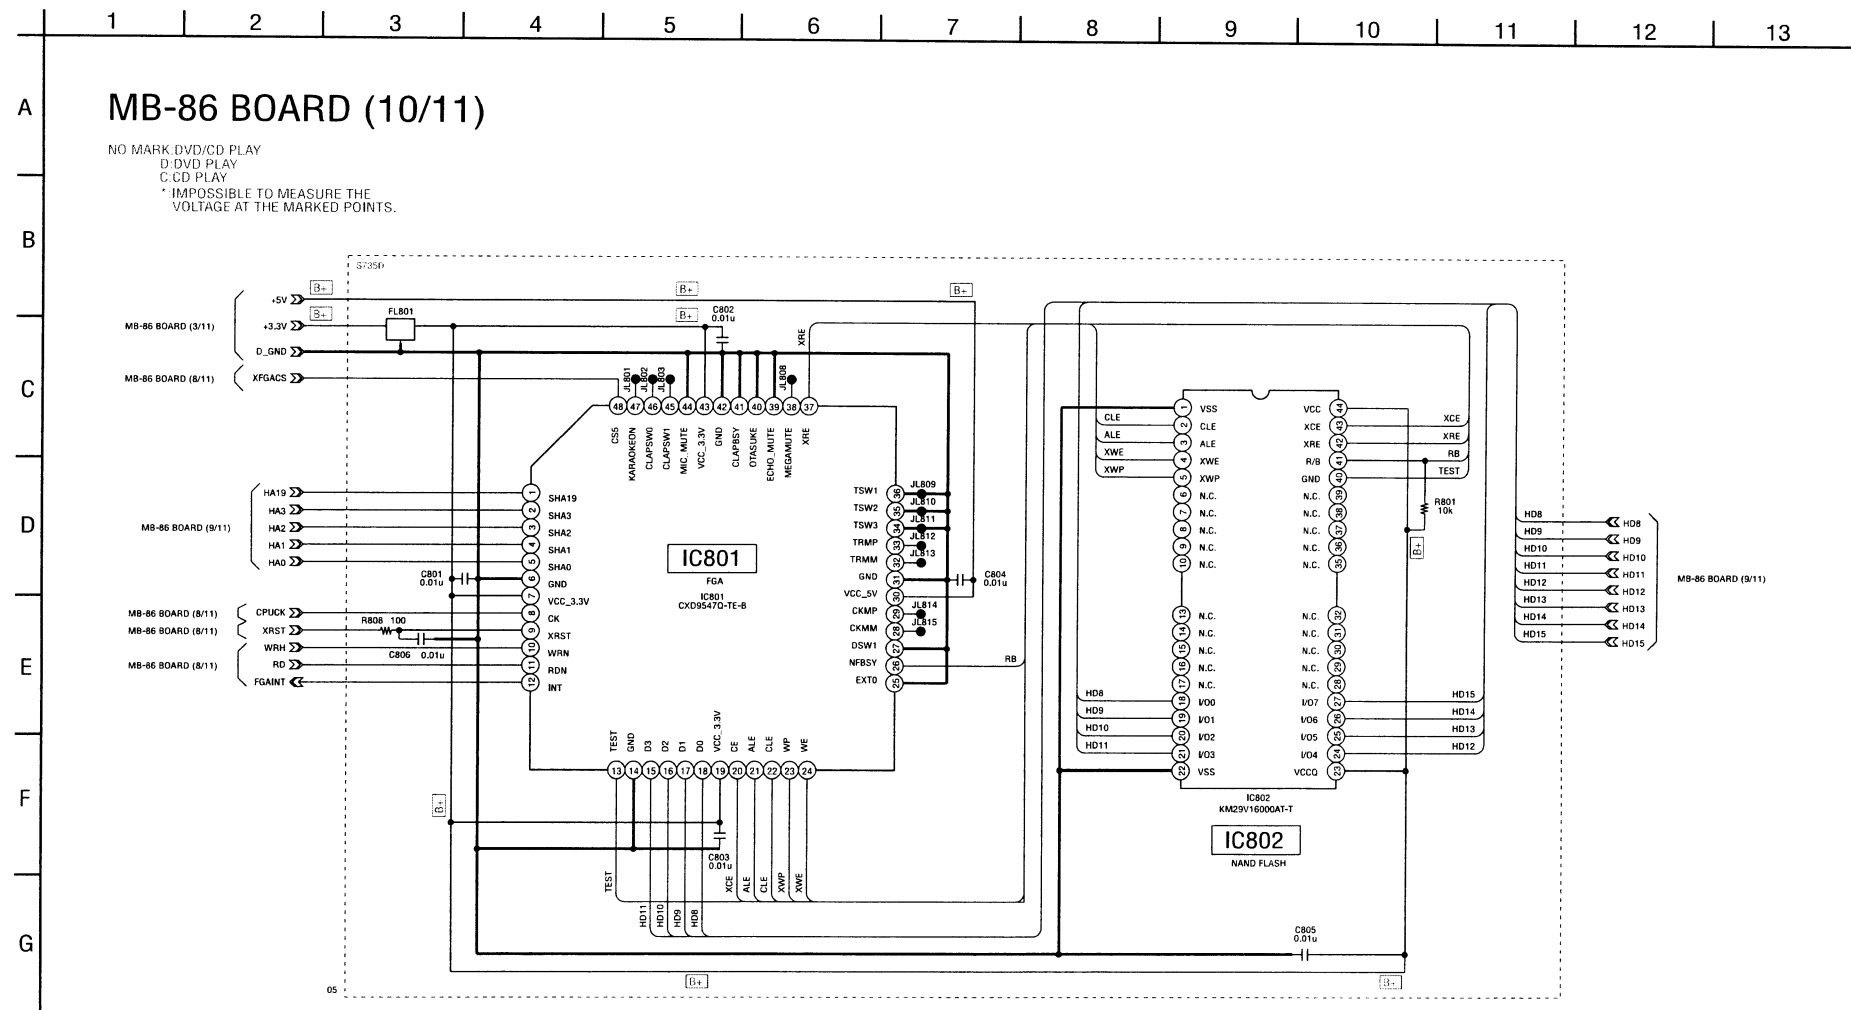

MC-Service



4-31

4-32



AI-17 BOARD

There are few cases that the part isn't mounted in this model is printed on this diagram.

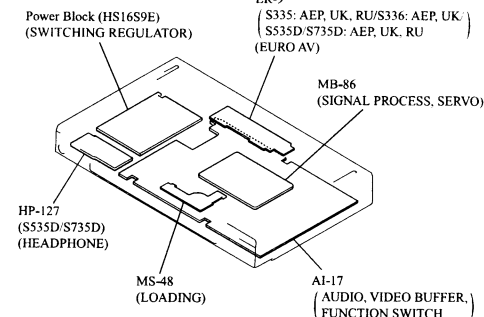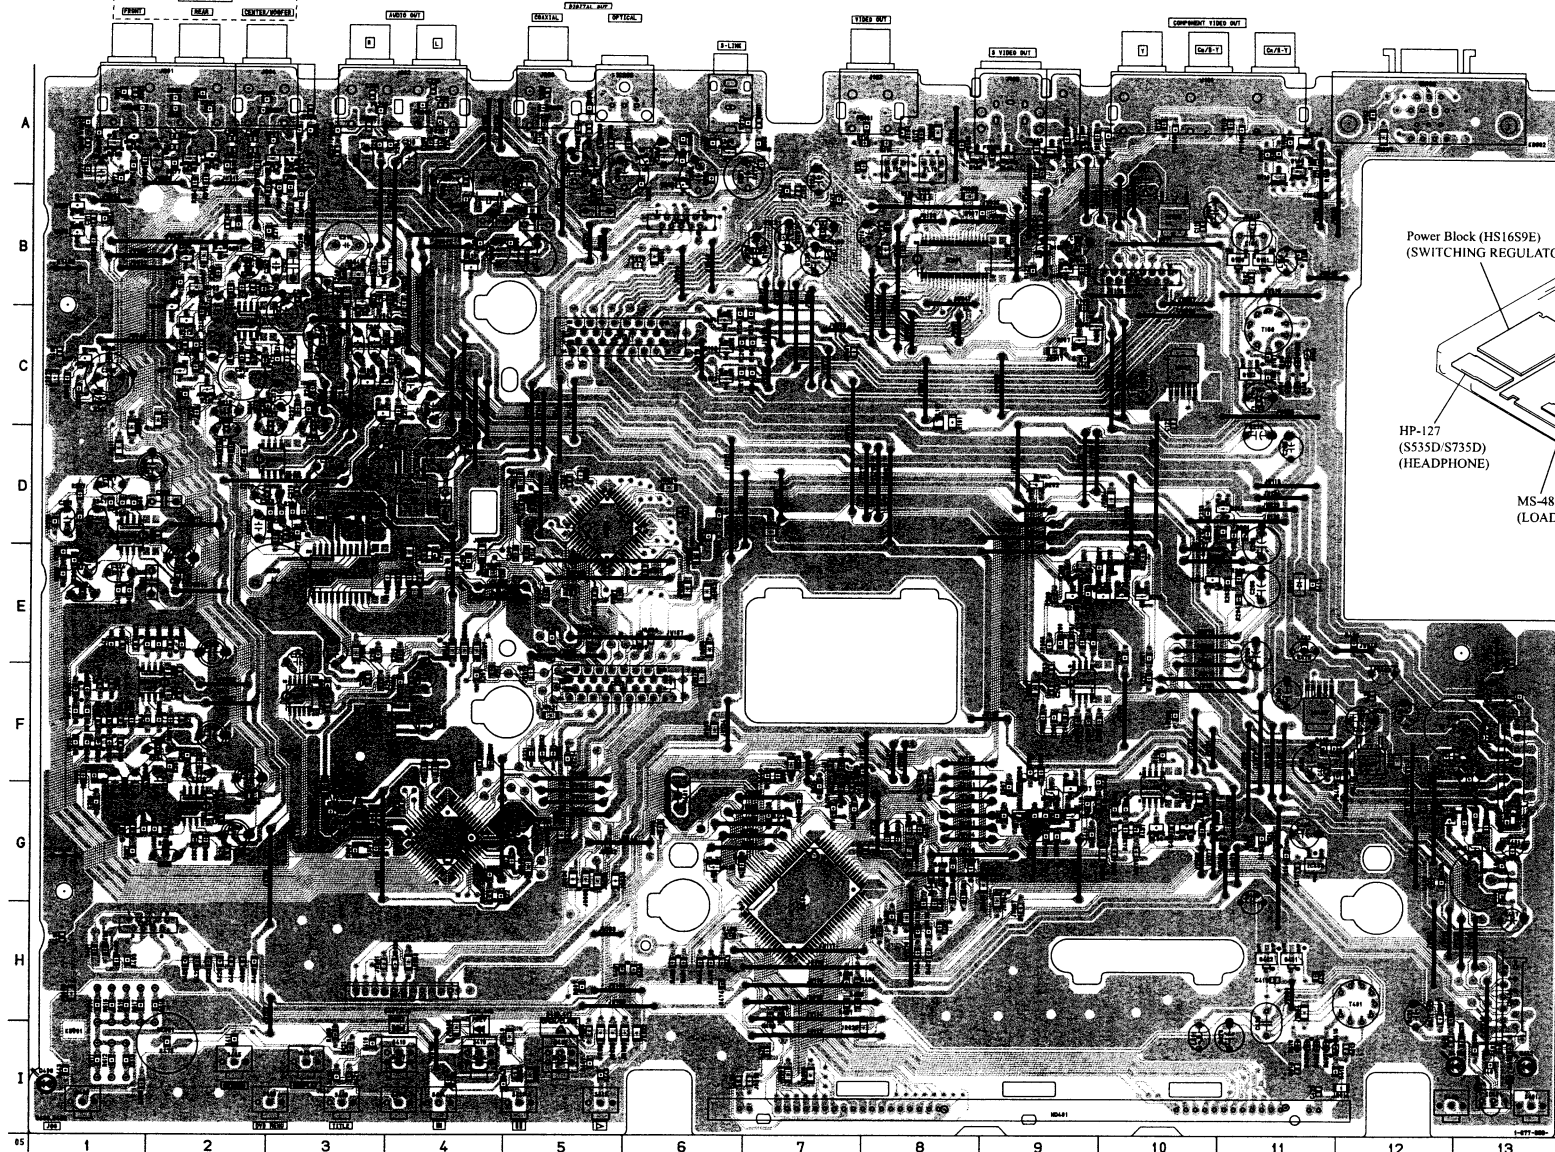

AI-17 BOARD

| | | | |
|-------|------|-------|------|
| CN101 | C-5 | IC302 | G-4 |
| CN102 | B-10 | IC303 | D-1 |
| CN201 | F-5 | IC304 | F-2 |
| CN205 | B-6 | IC305 | G-2 |
| CN401 | F-13 | IC306 | A-5 |
| CN403 | H-4 | IC307 | A-4 |
| CN404 | H-13 | IC401 | I-13 |
| CN405 | H-2 | IC403 | G-11 |
| | | IC404 | G-7 |
| D101 | B-9 | IC406 | F-11 |
| D103 | A-9 | IC407 | F-12 |
| D104 | A-9 | | |
| D105 | A-8 | Q106 | C-8 |
| D106 | A-9 | Q107 | C-9 |
| D160 | C-11 | Q160 | B-11 |
| D161 | C-11 | Q161 | B-11 |
| D162 | C-11 | Q162 | C-11 |
| D163 | C-11 | Q201 | C-3 |
| D164 | C-11 | Q202 | C-3 |
| D201 | C-2 | Q203 | B-3 |
| D202 | D-9 | Q204 | B-3 |
| D203 | B-2 | Q205 | B-2 |
| D205 | B-3 | Q206 | C-2 |
| D207 | C-1 | Q207 | C-2 |
| D303 | C-1 | Q208 | E-9 |
| D306 | A-4 | Q209 | E-9 |
| D406 | I-1 | Q210 | C-3 |
| D407 | I-11 | Q211 | C-2 |
| D408 | I-11 | Q212 | C-2 |
| D409 | I-11 | Q213 | E-10 |
| D410 | I-11 | Q214 | D-11 |
| D411 | G-11 | Q215 | E-10 |
| D412 | I-13 | Q220 | E-10 |
| D413 | I-13 | Q221 | E-10 |
| D415 | I-12 | Q301 | C-1 |
| D416 | G-6 | Q302 | B-1 |
| D417 | H-12 | Q303 | B-1 |
| D430 | G-13 | Q304 | A-3 |
| | | Q305 | A-3 |
| IC101 | B-8 | Q306 | A-2 |
| IC102 | C-10 | Q307 | A-2 |
| IC103 | B-10 | Q308 | A-1 |
| IC201 | E-3 | Q309 | A-1 |
| IC203 | C-2 | Q311 | B-4 |
| IC204 | F-3 | Q312 | A-6 |
| IC205 | D-5 | Q313 | A-6 |
| IC206 | D-4 | Q314 | A-5 |
| IC207 | F-9 | Q401 | H-11 |
| IC208 | D-3 | Q402 | H-11 |
| IC301 | F-3 | | |

4-35


MC-Service




① IC101 ②

The waveform is drawn on a grid. It starts at a baseline level, rises to a higher level, stays there for a short duration, then drops to a lower level. This pattern repeats several times, with some variations in the duration of the high and low states. The signal appears to be a digital or pulse-width modulated signal.


② IC101 ㉓

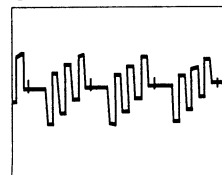


③ IC101 ②⑤

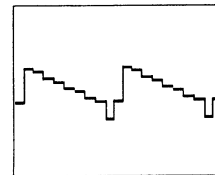


④ IC101 ③①

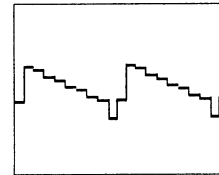

5 IC101 33

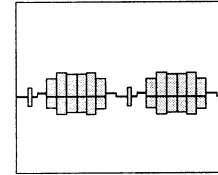

6 IC101 35

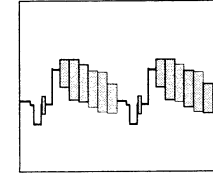


2.4 V_{p-p} (H)

– Ref. No.: AI-17 board; 2,000 series –








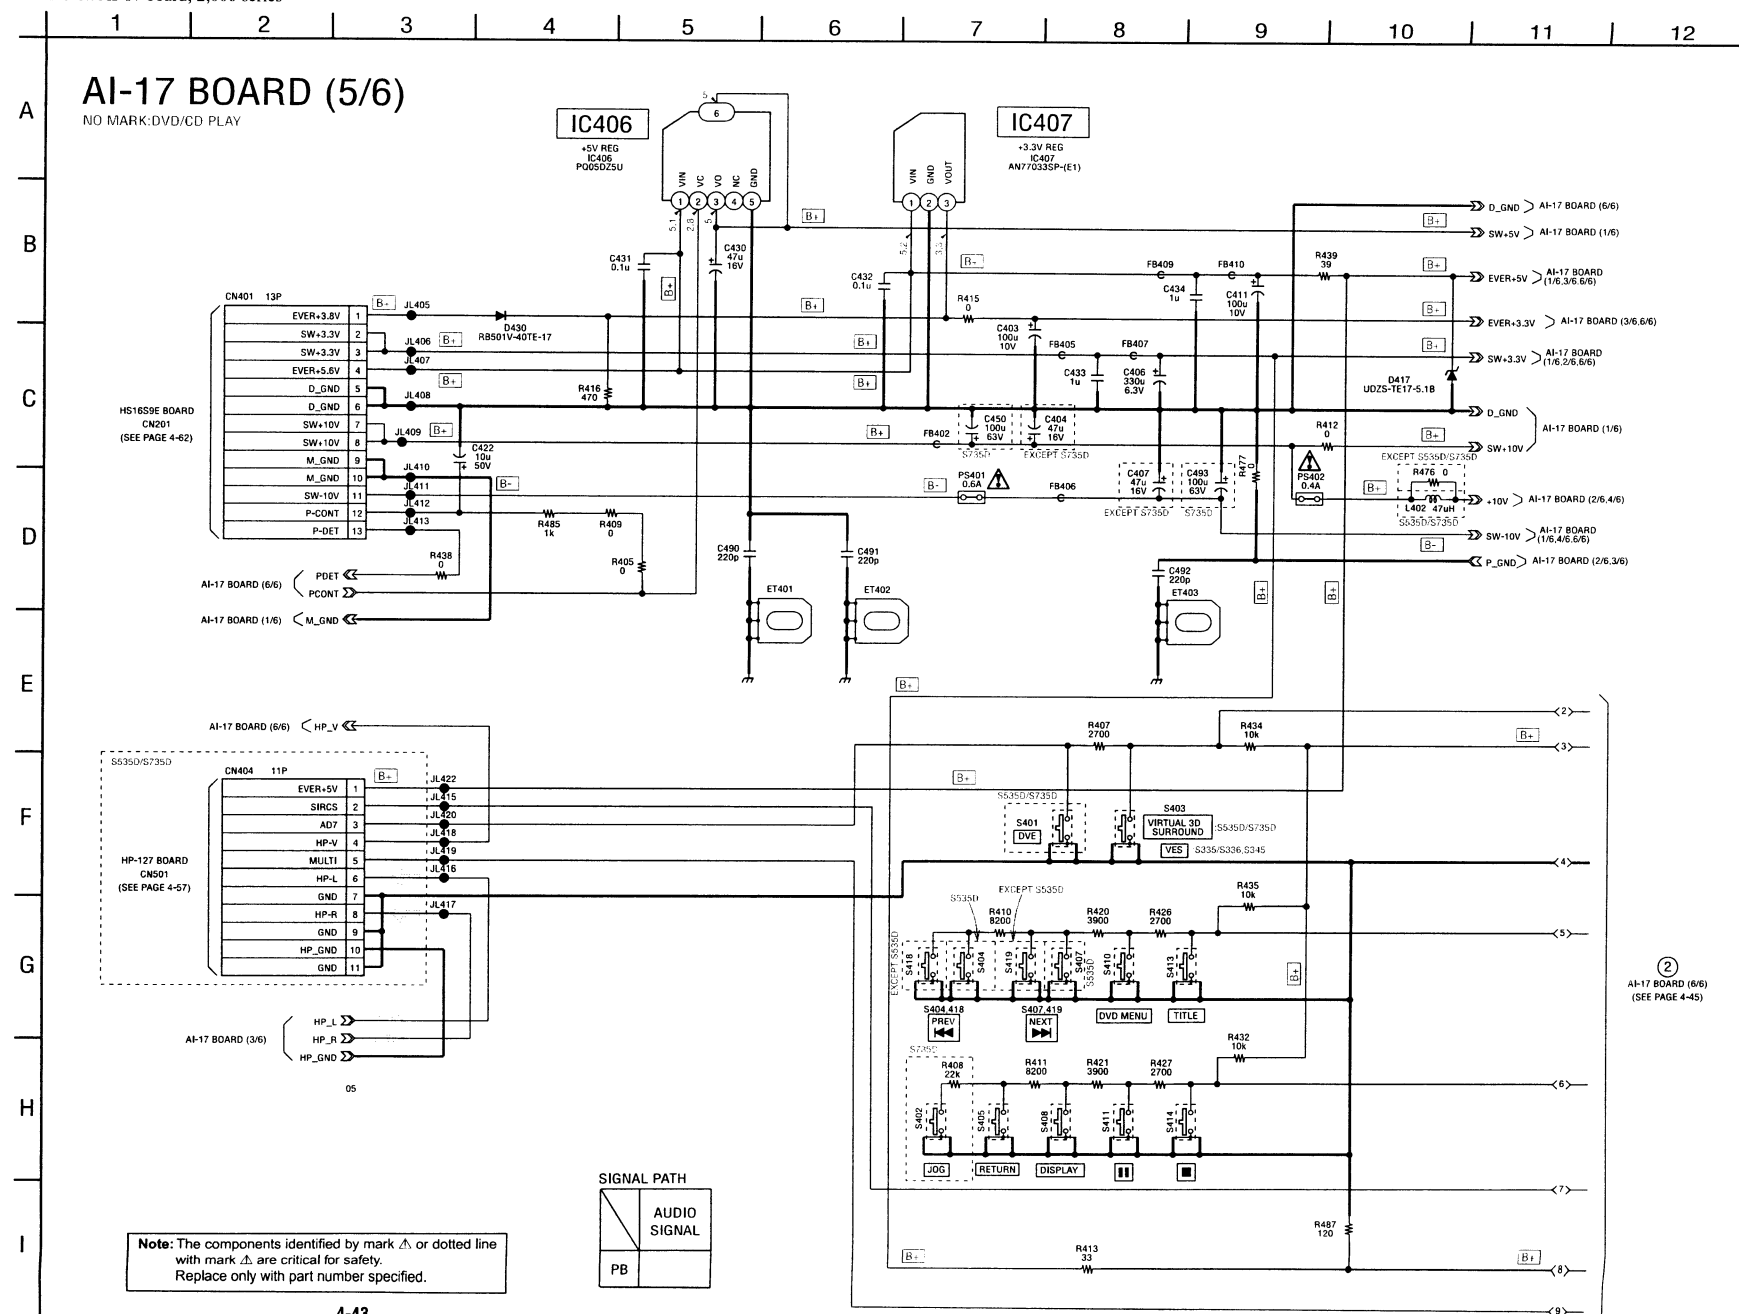

AI-17 (IF CON) SCHEMATIC DIAGRAM


- Ref. No.: AI-17 board; 2,000 series -

AI-17 BOARD (6/6)

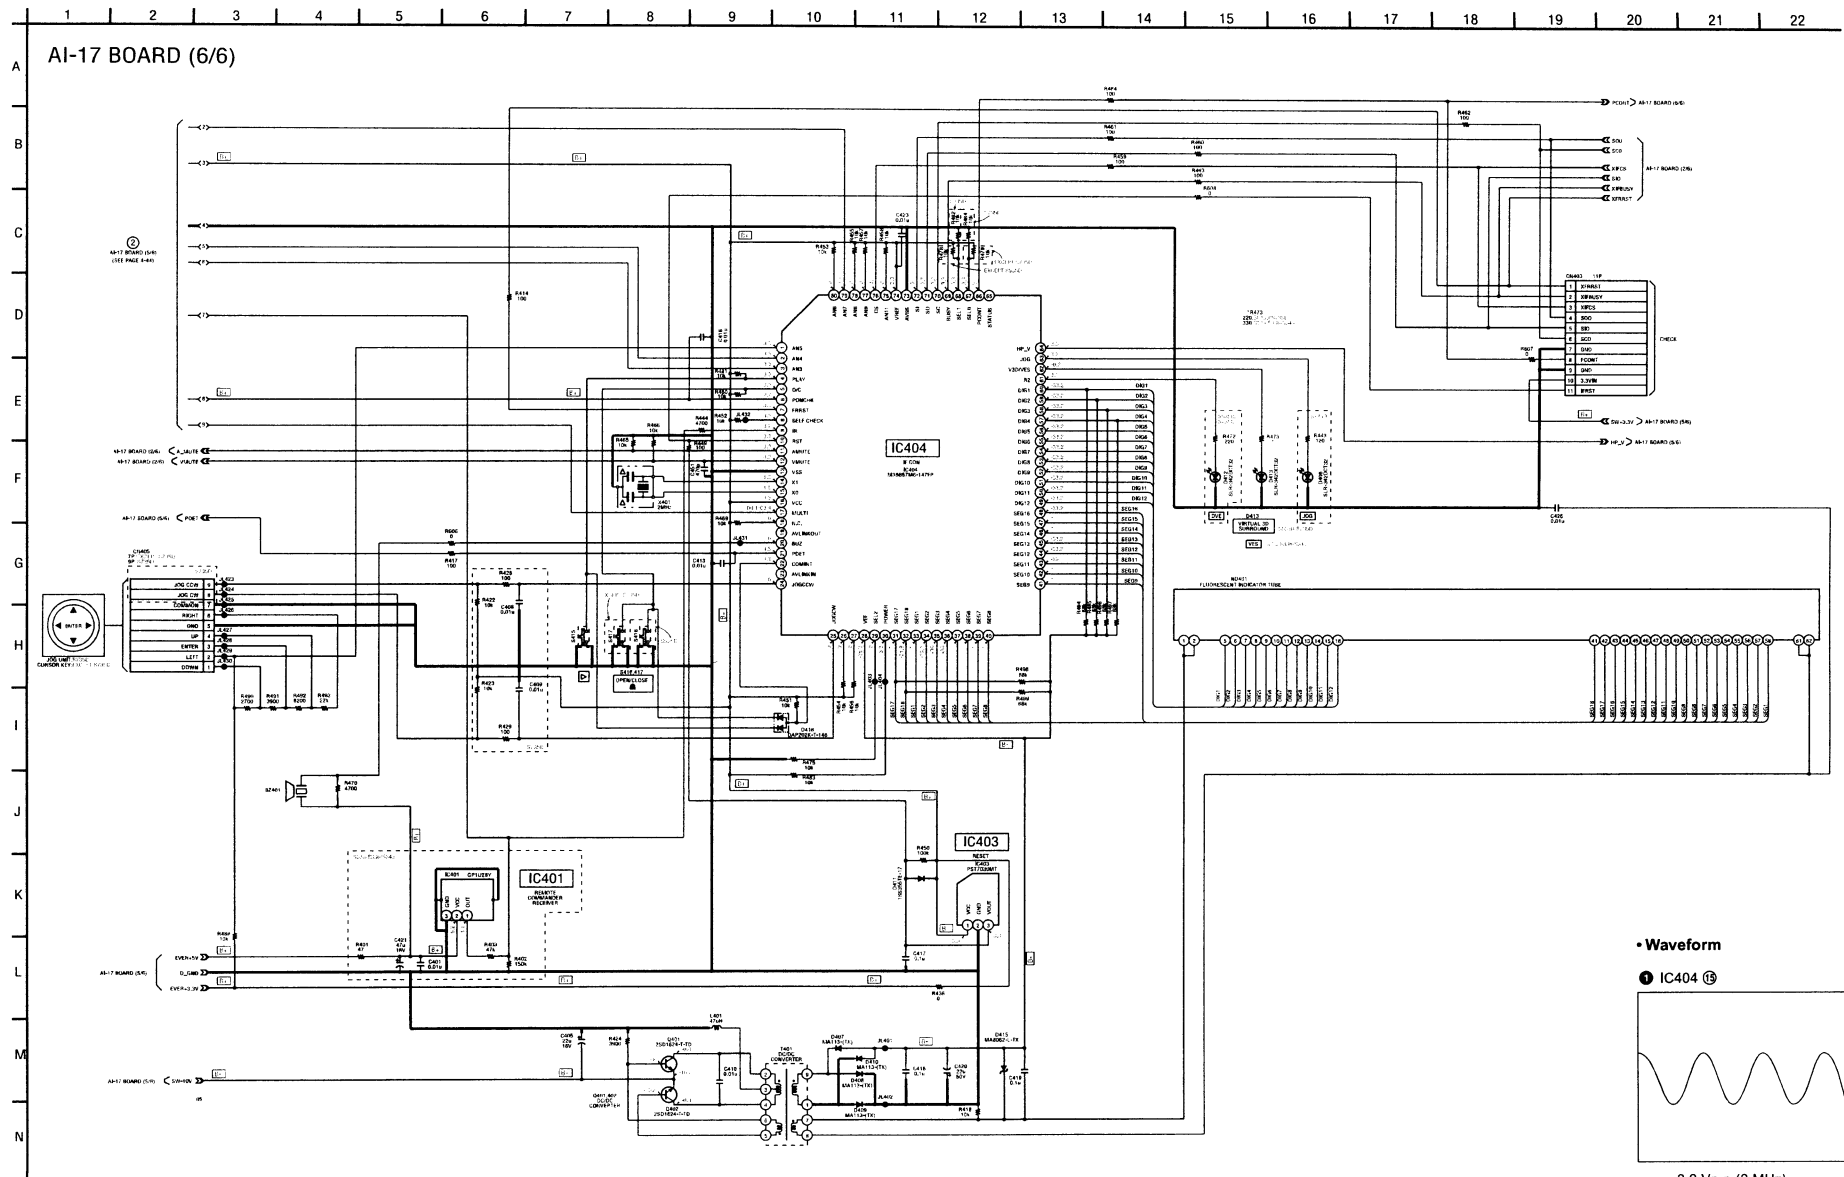

• Waveform

① IC404 ⑤

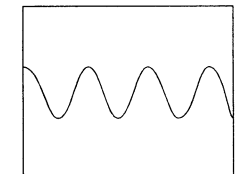


3.2 Vp-p (2 MHz)


ER-9 (EURO AV) PRINTED WIRING BOARD

– Ref. No.: ER-9 board; 2,000 series –
– DVP-S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU –

There are few cases that the part isn't mounted in this model is printed on this diagram.

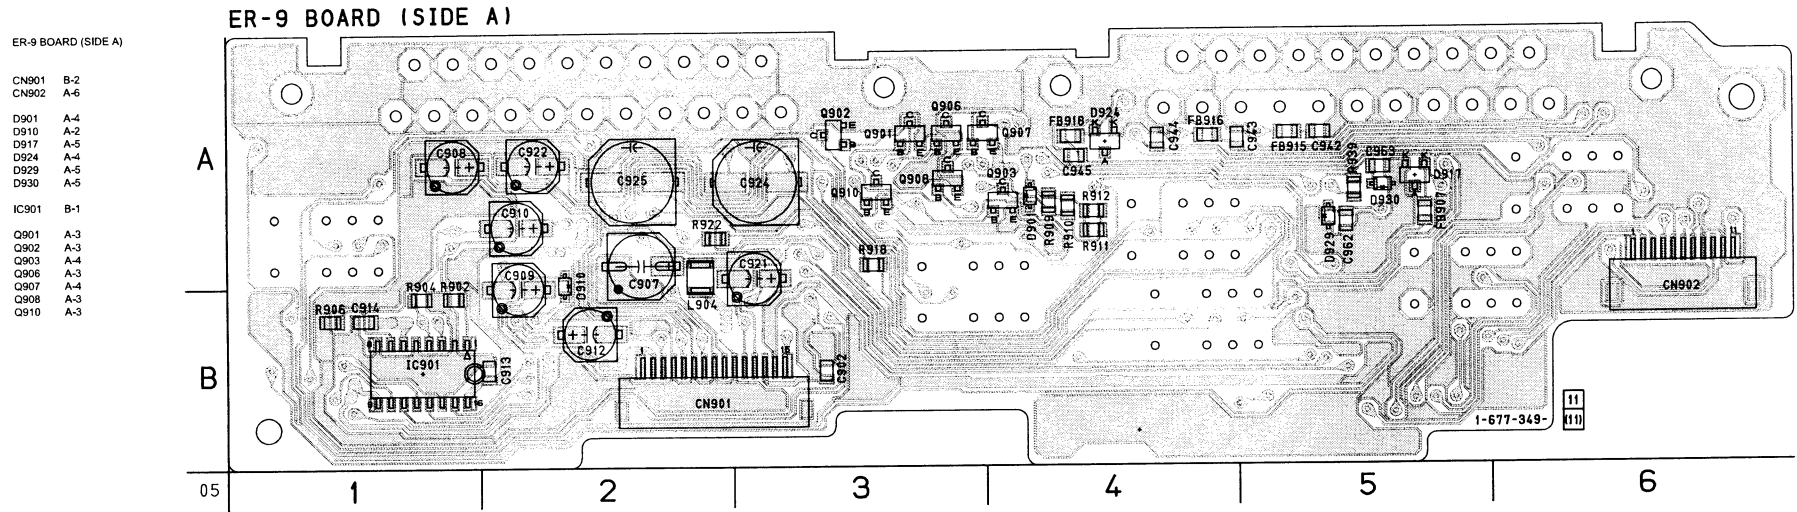


MC-Service

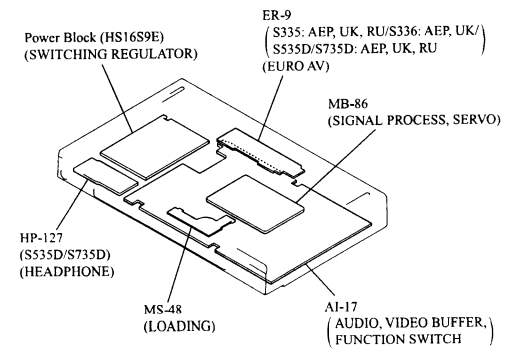

ER-9 BOARD (SIDE B)

EURO AV1 (RGB) -TV

EURO AV2

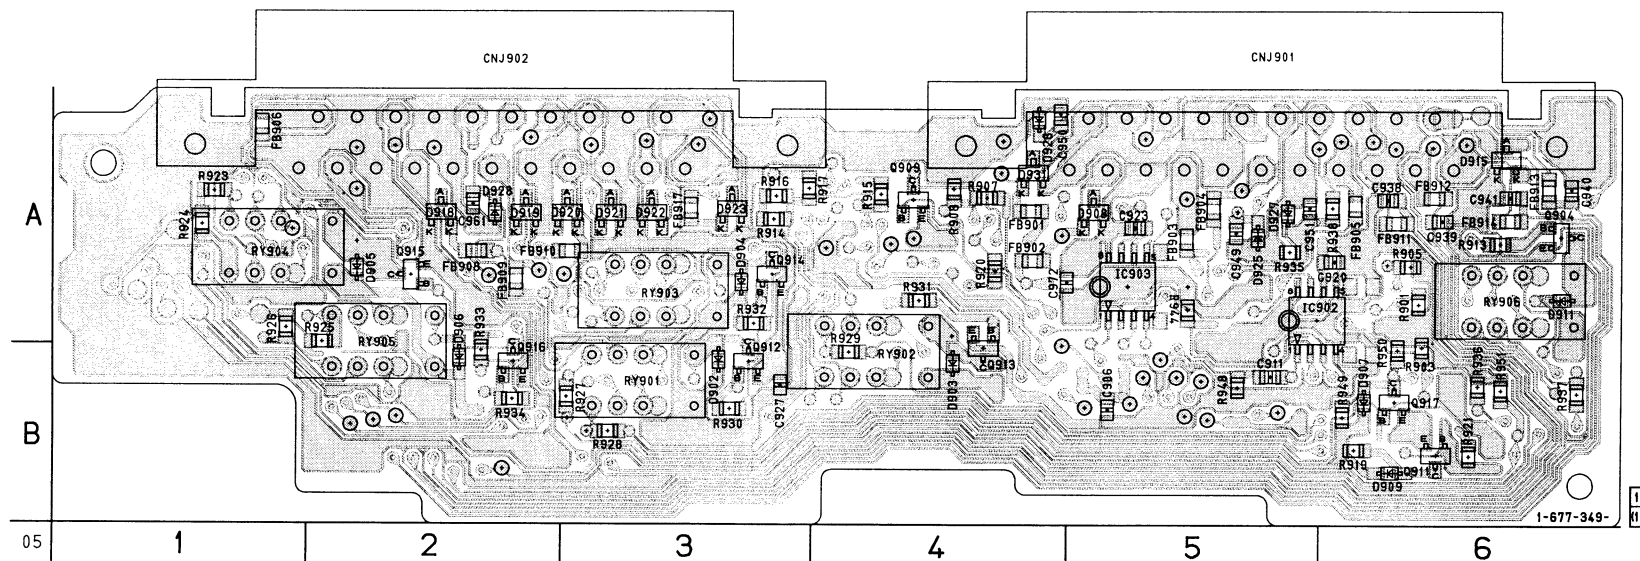

ER-9 BOARD (SIDE B)


| | |
|-------|-----|
| D902 | B-3 |
| D903 | B-4 |
| D904 | A-3 |
| D905 | A-2 |
| D906 | A-2 |
| D907 | B-6 |
| D908 | A-6 |
| D909 | B-6 |
| D911 | A-6 |
| D915 | A-6 |
| D918 | A-2 |
| D919 | A-2 |
| D920 | A-3 |
| D921 | A-3 |
| D922 | A-3 |
| D923 | A-3 |
| D926 | A-4 |
| D927 | A-5 |
| D931 | A-4 |
| IC902 | A-5 |
| IC903 | A-5 |
| Q904 | A-6 |
| Q909 | A-4 |
| Q911 | B-6 |
| Q912 | B-3 |
| Q913 | B-4 |
| Q914 | A-3 |
| Q915 | A-2 |
| Q916 | B-2 |
| Q917 | B-6 |

MC-Service

ER-9 (EURO AV1) SCHEMATIC DIAGRAM • See page 4-47 for printed wiring board.

- Ref. No.: ER-9 board; 2,000 series -


- DVP-S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU -

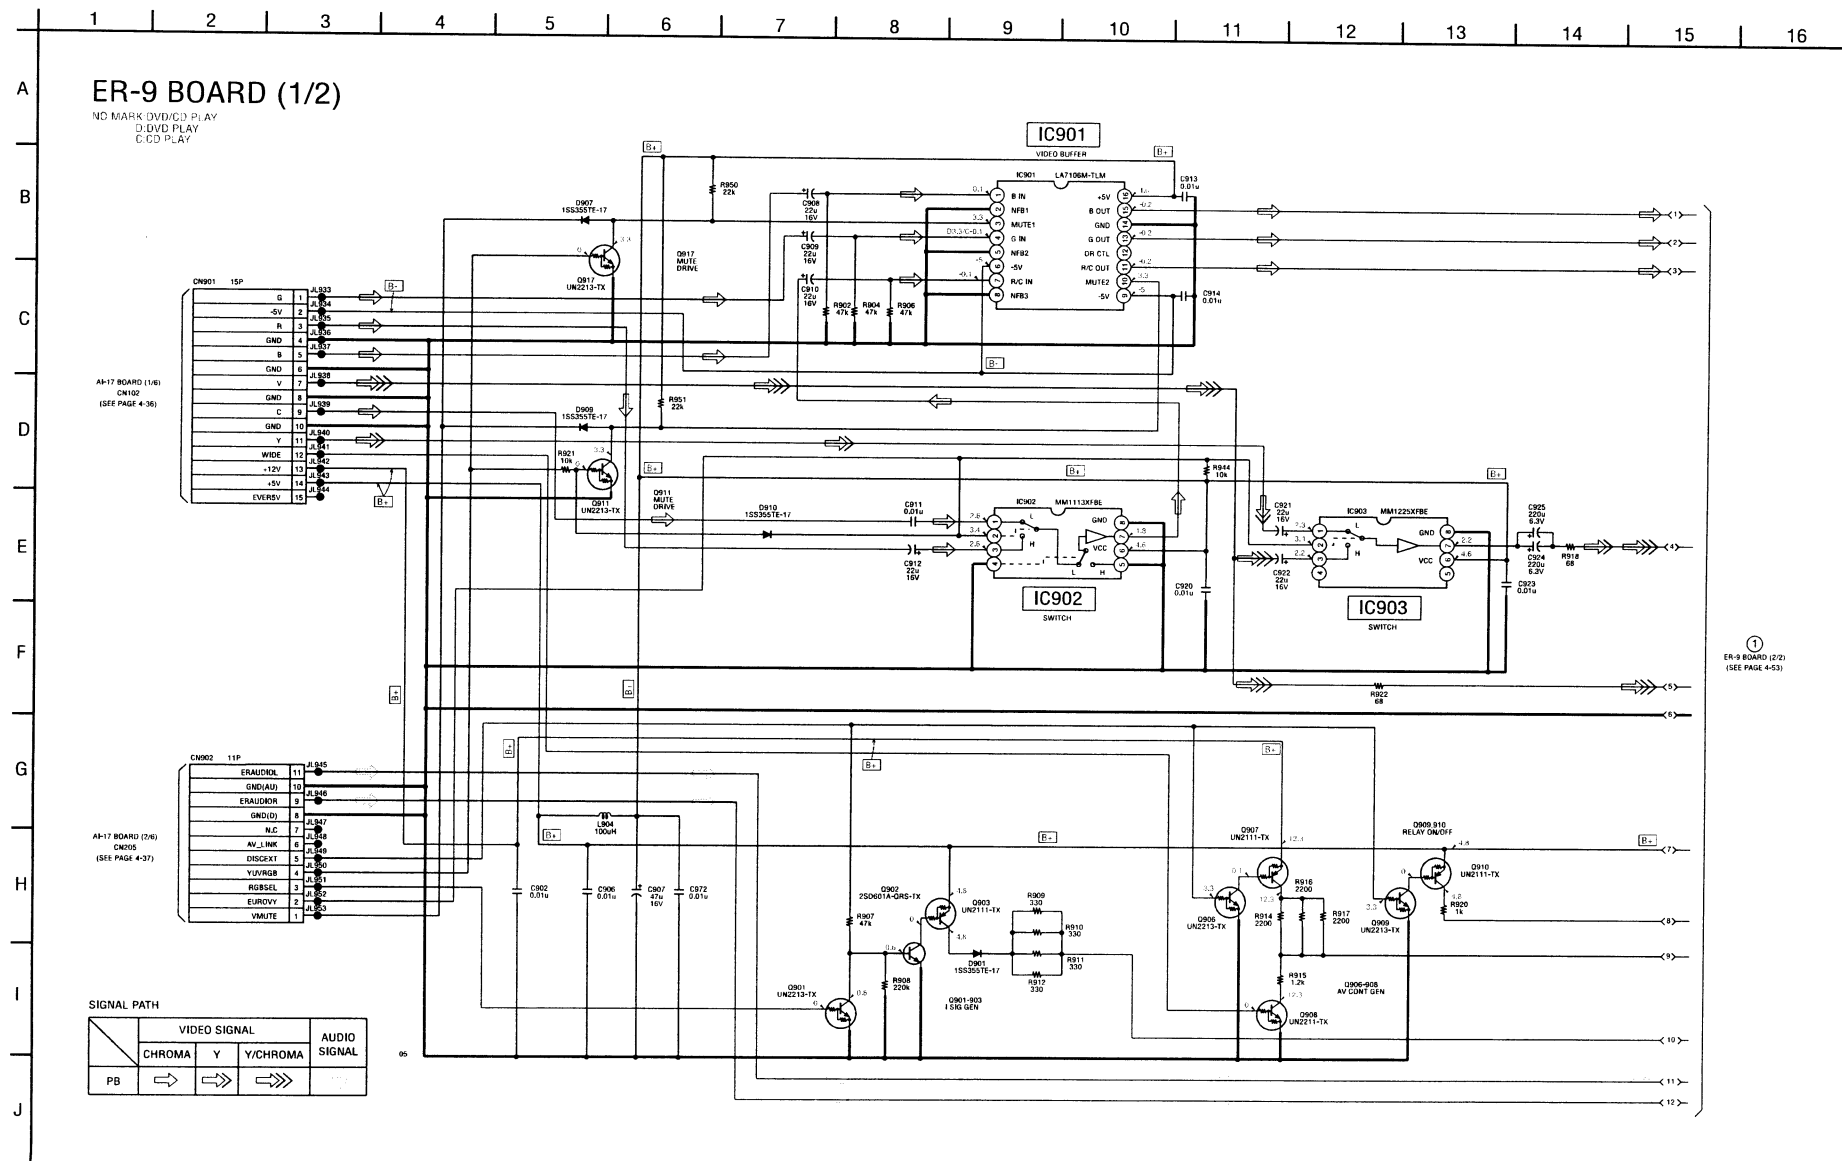

ER-9 (EURO AV2) SCHEMATIC DIAGRAM • See page 4-47 for printed wiring board.

– Ref. No.: ER-9 board; 2,000 series –


– DVP-S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU –

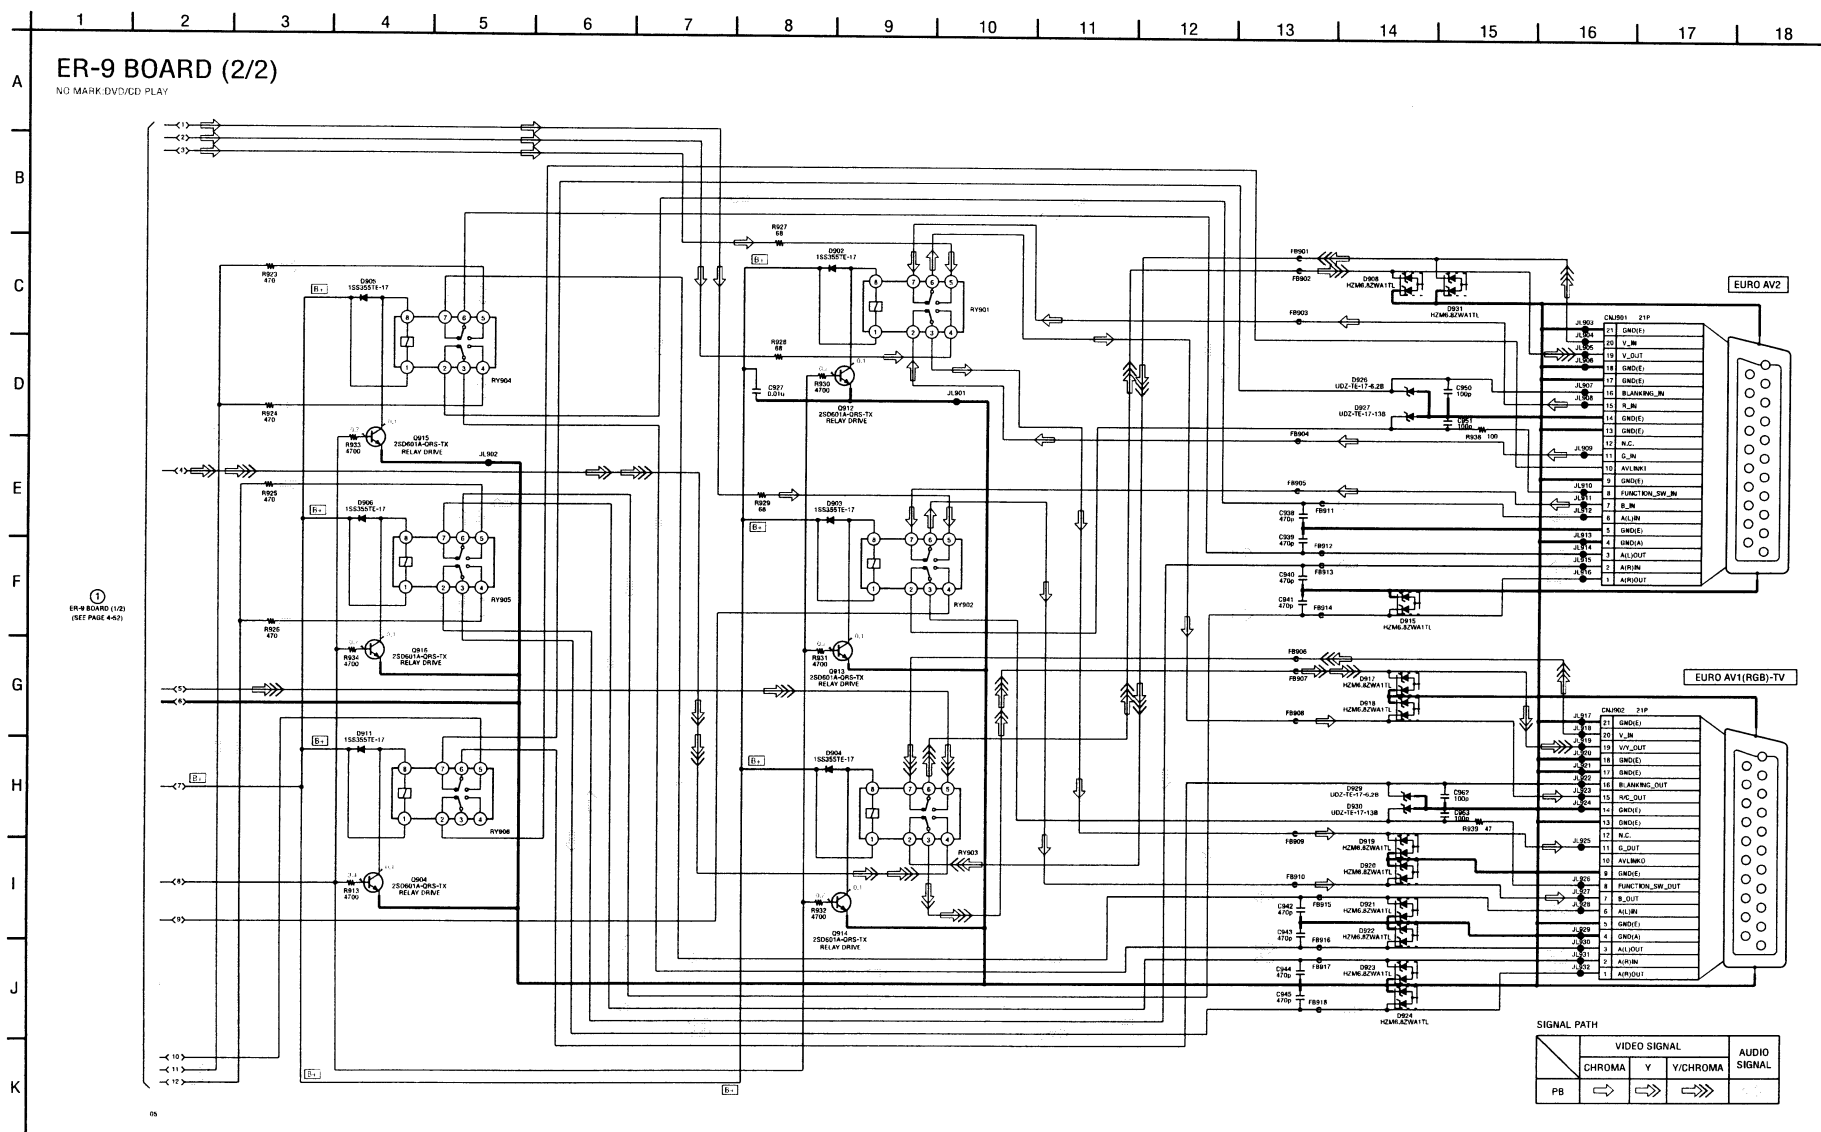

MC-Service

HP-127 (HEADPHONE) SCHEMATIC DIAGRAM


– Ref. No.: HP-127 board; 2,000 series –
 – DVP-S535D/S735D –

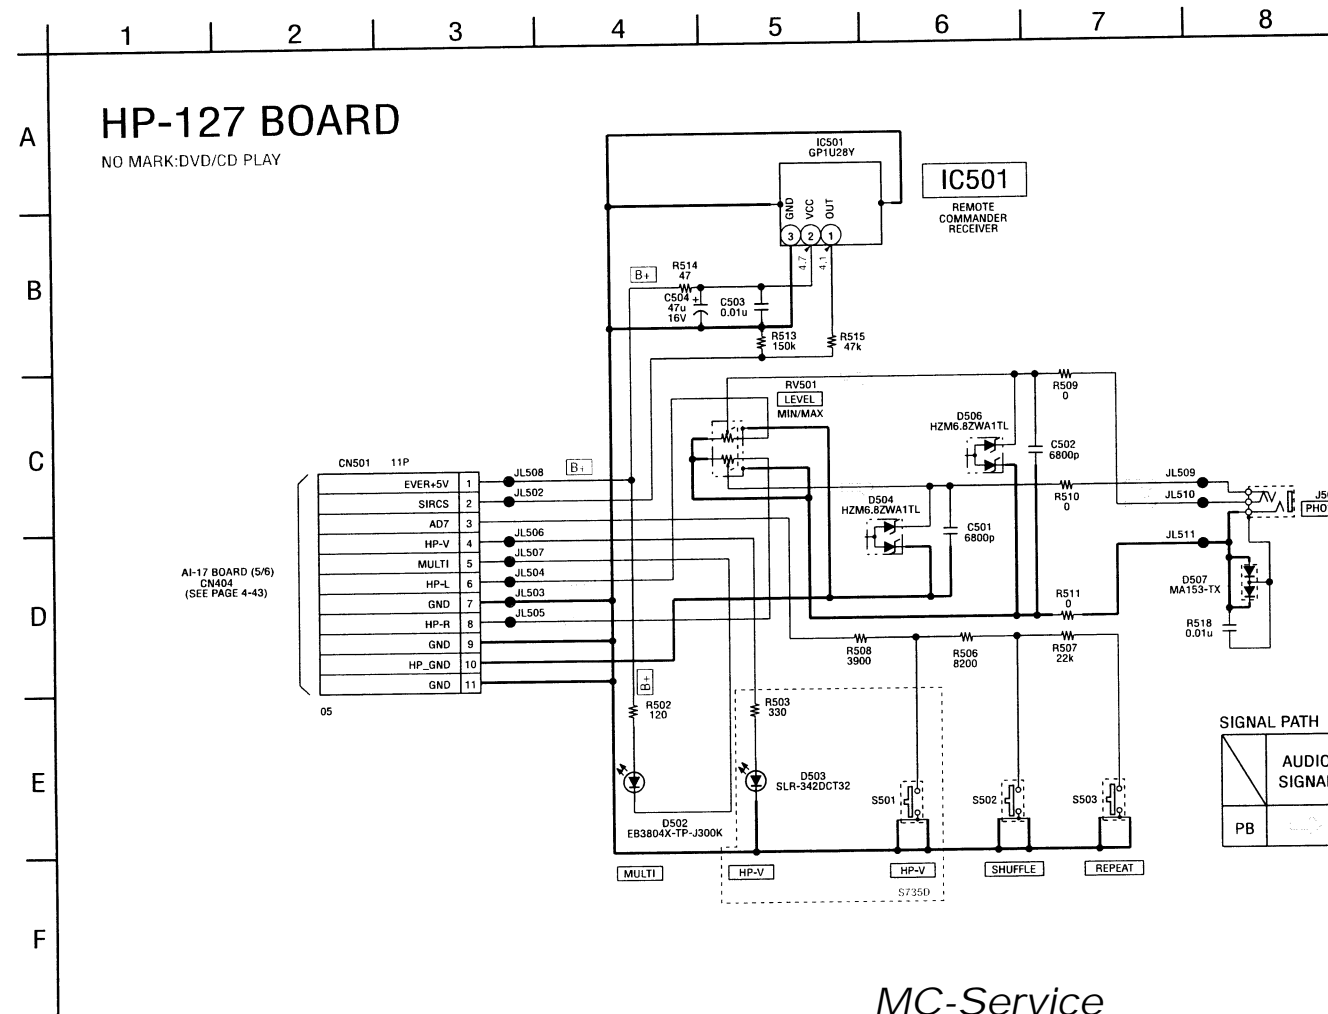


HP-127 (HEADPHONE) PRINTED WIRING BOARD

– Ref. No.: HP-127 board; 2,000 series –
– DVP-S535D/S735D –

There are few cases that the part isn't mounted in this model is printed on this diagram.

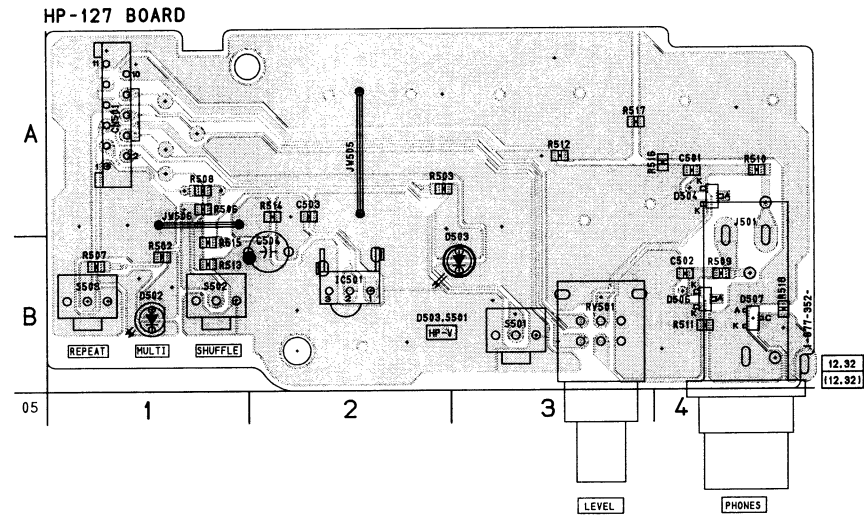

MC-Service

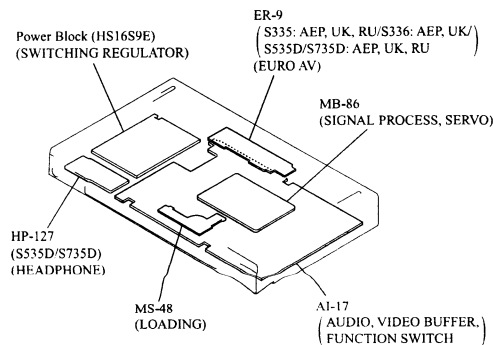

HP-127 BOARD



| | |
|-------|-----|
| CN501 | A-1 |
| D502 | B-1 |
| D503 | B-3 |
| D504 | A-4 |
| D506 | B-4 |
| D507 | B-4 |
| IC501 | B-2 |

HS16S9E (SWITCHING REGULATOR) PRINTED WIRING BOARD
- Ref. No.: HS16S9E board; 3,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

HS16S9E BOARD

| | |
|-------|-----|
| CN101 | C-4 |
| CN201 | A-1 |
| D101 | A-3 |
| D102 | A-3 |
| D104 | A-3 |
| D105 | A-3 |
| D211 | B-2 |
| D212 | B-1 |
| D311 | B-2 |
| D315 | C-2 |
| D511 | B-2 |
| D611 | B-2 |
| D613 | C-2 |
| D615 | C-1 |
| IC301 | A-2 |
| Q101 | B-3 |
| Q102 | A-3 |
| Q211 | A-1 |
| Q312 | C-2 |
| Q511 | A-1 |
| Q611 | B-1 |
| Q615 | C-1 |
| Q621 | C-1 |
| Q711 | A-2 |

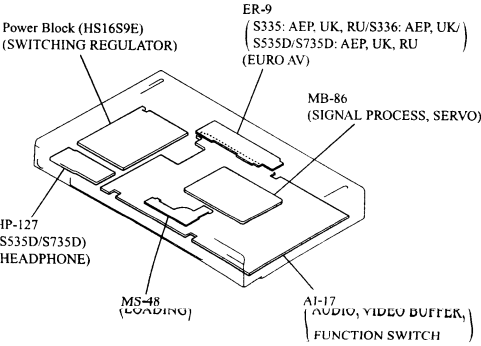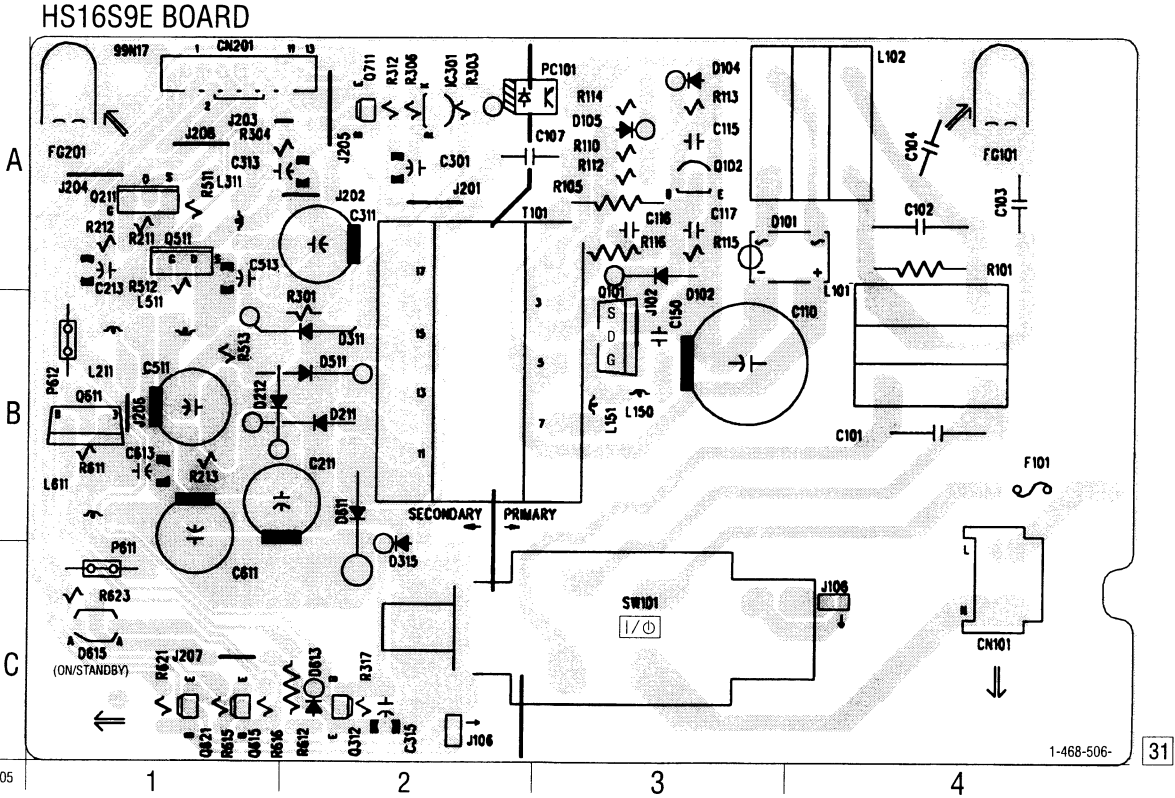

SWITCHING REGULATOR
HS16S9E

MC-Service

SWITCHING REGULATOR
HS16S9E

4-61



MC-Service

SECTION 5

IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL PIN FUNCTION (MB-86 BOARD IC102)

| Pin No. | Pin name | I/O | Function |
|---------|--------------------|-----|---|
| 1-5 | HA17-HA21 | I/O | Address bus A17-A21 |
| 6 | HA22 | - | Not used |
| 7 | GAIN/RGBSEL | O | Color difference signal/RGB signal select signal output |
| 8 | DACMUTE/FS | | Filter control signal output |
| 9 | AVCC | - | Power supply |
| 10 | AVRH | - | Reference power supply (+3.3 V) |
| 11 | AVSS | - | Ground |
| 12 | AN0 | I | Set of mode 0 |
| 13 | AN1 | I | Set of mode 1 |
| 14 | AN2 | I | Set of mode 2 |
| 15 | AN3 | I | Set of mode 3 |
| 16 | XRST | O | System reset signal output |
| 17 | OEB | - | Not used |
| 18 | CS6 | O | Chip select signal for servo DSP |
| 19 | NC | - | Not used |
| 20 | EUROV/Y | O | EURO V/Y select signal output |
| 21 | CLAPSW0/DISEXT | O | Line input select signal output (DISC: "H", EXT: "L") |
| 22 | ARRST | O | Reset signal output for ARP |
| 23 | DRVMUTE | O | Drive mute signal output |
| 24 | VCC | - | Power supply |
| 25 | INT0 | I | Input of interrupt from AV DEC |
| 26 | INT1 | I | Input of interrupt from ARP |
| 27 | INT2 | I | Input of interrupt from FGA |
| 28 | INT3 | I | Input of interrupt from EEPROM |
| 29 | INT4 | I | Input of interrupt from IF CON |
| 30 | CKSW2/OTASUKE/INT5 | I | Input of interrupt from audio DSP |
| 31 | CLAPBSY/INT6 | I | Input of interrupt from audio DSP |
| 32 | INT7 | I | Input of interrupt from servo DSP |
| 33 | SIO | I | Serial data input from IF CON and EEPROM |
| 34 | VSS | - | Ground |
| 35 | SO0 | O | Serial data output to IF CON and EEPROM |
| 36 | SC0 | O | Serial clock output to IF CON and EEPROM |
| 37 | SII | I | Serial bus 1 (for data input) |
| 38 | SO1 | O | Serial bus 1 (for data output) |

| Pin No. | Pin name | I/O | Function |
|---------|----------------|-----|--|
| 39 | SCI | O | Serial clock output |
| 40 | SI2 | I | Serial bus 2 (for data input) |
| 41 | SO2 | O | Serial bus 2 (for data output) |
| 42 | YUVRGB/CLAPSW1 | O | Mute signal output to video buffer and EURO C/R select signal output |
| 43 | DREQ0 | I | Input of DMA-REQ 0 from AV DEC |
| 44 | DACK0 | O | Output of DMA-ACK 0 to AV DEC |
| 45 | IFCS | O | Chip select signal to IF CON |
| 46 | DREQ1 | I | Input of DMA-REQ 1 from AV DEC |
| 47 | DACK1 | O | Output of DMA-ACK 1 to AV DEC |
| 48 | EWG | O | Write control signal output to EEPROM |
| 49 | ECS | O | Chip select signal output to EEPROM |
| 50 | KCS/39CS | O | Chip select signal output to audio DSP |
| 51 | AURST | O | Reset signal output to audio DAC |
| 52 | VSS | - | Ground |
| 53 | X1 | O | Clock output (12.5 MHz) |
| 54 | X0 | I | Clock input (12.5 MHz) |
| 55 | VCC | - | Power supply |
| 56 | CKSW1 | I | Chuck sensor input |
| 57 | OCSW1 | I | Tray sensor input |
| 58 | OCSW2 | I | Tray sensor input |
| 59 | DACCS0 | O | Chip select signal output to DAC (2ch) |
| 60 | DACCS1 | O | Chip select signal output to DAC (6ch) and DSP |
| 61 | 48/44.1K | O | PLL FS control signal output |
| 62 | MAMUTE | O | Audio mute signal output |
| 63 | WIDE | O | WIDE select signal output |
| 64 | C | - | Capacitor (0.1uF) connect between ground |
| 65 | CS0X | O | External ROM chip select signal output |
| 66 | CS1X | - | Not used |
| 67 | CS2X | O | Chip select signal output (for AV DEC) |
| 68 | CS3X | O | Chip select signal output (for AV DEC) |
| 69 | CS4X | O | Chip select signal output (for ARP) |
| 70 | CS5X | O | Chip select signal output (for FGA) |

| Pin No. | Pin name | I/O | Function |
|---------|----------|-----|---|
| 71 | CPUCK | O | CPU clock signal output |
| 72 | NMIX | - | Not used (fixed at "H") |
| 73 | HSTX | - | Not used (fixed at "H") |
| 74 | FRRSTIN | I | Reset signal input from IF CON |
| 75 | VSS | - | Ground |
| 76 | MD0 | I | Input of mode select 0 (fixed at "1") |
| 77 | MD1 | - | Ground |
| 78 | MD2 | - | Ground |
| 79 | XWAIT | I | Wait signal input |
| 80 | BGRNTX | - | Test terminal (fixed at "H") |
| 81 | BRQ | - | Test terminal (fixed at "H") |
| 82 | RD | O | Read enable signal output |
| 83 | WRH | O | High byte write enable signal output (16 bit and 8 bit) |
| 84 | NC | - | Not used |
| 85-92 | HD0-HD7 | I/O | Data bus D0-D7 (16 bit only) |
| 93-100 | HD8-HD15 | I/O | Data bus D8-D15 (16 bit), D0-D7 (8 bit) |
| 101 | VSS | - | Ground |
| 102-109 | HA0-HA7 | O | Address bus A00-A07 |
| 110 | VCC | - | Power supply |
| 110-118 | HA8-HA15 | O | Address bus A08-A15 |

SECTION 6 TEST MODE

6-1. GENERAL DESCRIPTION

The Test Mode allows you to make diagnosis and adjustment easily using the remote commander and monitor TV. The instructions, diagnostic results, etc. are given on the on-screen display (OSD).

6-2. STARTING TEST MODE

Press **[TITLE]**, **[CLEAR]**, **[POWER]** buttons on the remote commander in this order with the power of main unit in OFF status, and the Test Mode starts, then the menu shown below will be displayed on the TV screen. At the bottom of menu screen, the model name and revision number are displayed.

To execute each function, select the desired menu and press its number on the remote commander.

To exit from the Test Mode, press the POWER button.

```

Test Mode Menu

0. Syscon Diagnosis
1. Drive Auto Adjustment
2. Drive Manual Operation
3. Mecha Aging
4. Emergency History
5. Version Information
6. Video Level Adjustment
   Exit: Power Key

-
Model      : DPX13xxxx
Revision   : 1.xxxx

```

6-3. SYSCON DIAGNOSIS

The same contents as board detail check by serial interface can be checked from the remote commander.

On the Test Mode Menu screen, press **[0]** key on the remote commander, and the following check menu will be displayed.

```

### Syscon Diagnosis ###
Check Menu

0. Quit
1. All
2. Version
3. Peripheral
4. Servo
5. Supply
6. AV Decoder
7. Video
8. Audio

-

```

0. Quit

Quit the Syscon Diagnosis and return to the Test Mode Menu.

1. All

All items continuous check

This menu checks all diagnostic items continuously. Normally, all items are checked successively one after another automatically unless an error is found, but at a certain item that requires judgment through a visual check to the result, the following screen is displayed for the key entry.

```

### Syscon Diagnosis ###

Diag All Check
No. 2 Version

2-3. ROM Check Sum
Check Sum = xxxx

Press NEXT Key to Continue
Press PREV Key to Repeat

-

```

For the ROM Check, the check sum calculated by the Syscon is output, and therefore you must compare it with the specified value for confirmation.

Following the message, press **[NEXT]** key to go to the next item, or **[PREV]** key to repeat the same check again. To quit the diagnosis and return to the Check Menu screen, press **[STOP]** or **[ENTER]** key. If an error occurred, the diagnosis is suspended and the error code is displayed as shown below.

```

### Syscon Diagnosis ###

3-2. EEPROM Check
Error 03: EEPROM Write/Read N
Address   : 00000001
Write Data : 2492
Read Data  : 2490
Press NEXT Key to Continue
Press PREV Key to Repeat

-

```

Press **[STOP]** key to quit the diagnosis, or **[PREV]** key to repeat the same item where an error occurred, or **[NEXT]** key to continue the check from the item next to faulty item.

Submenu

Selecting 2 and subsequent items calls the submenu screen of each item.

For example, if "5. Supply" is selected, the following submenu will be displayed.

```

### Syscon Diagnosis ###
Check Menu
No. 5 Supply

0. Quit
1. All
2. ARP Register Check
3. ARP to RAM Data Bus
4. ARP to RAM Address Bus
5. ARP RAM Check

-

```

0. Quit

Quit the submenu and return to the main menu.

1. All

All submenu items continuous check

This submenu checks 2 and subsequent items successively. At the item where visual check is required for judgment or an error occurred, the checking is suspended and the message is output for key entry.

Normally, all items are checked successively one after another automatically unless an error is found.

Selecting 2 and subsequent items executes respective menus and outputs the results.

For the contents of each submenu, see "Check Items List".

General Description of Checking Method

2. Version

(2-2) Revision

ROM revision number is displayed.

Error: Not detected.

The revision number defined in the source file of ROM (IC104) is displayed with four digits.

(2-3) ROM Check Sum

Check sum is calculated.

Error: Not detected.

The data are added of ROM (IC104) and the result is displayed with 4-digit hexadecimal number. Error is not detected. Compare the result with the specified value.

(2-4) Model Type

Model code is displayed.

Error: Not detected.

The model code is displayed with 2-digit hexadecimal number.

| | Model Type | |
|-----------------------|------------|---|
| DVP-S335 (AEP50, UK) | 0 | 3 |
| DVP-S335 (AEP51) | 0 | 4 |
| DVC-S335 (RU) | 0 | 5 |
| DVC-S335 (E, EA) | 0 | 9 |
| DVC-S336 (AEP06, UK) | 0 | 3 |
| DVC-S336 (AEP08) | 0 | 4 |
| DVC-S336 (AUS) | 0 | A |
| DVC-S345 (E) | 0 | 9 |
| DVP-S535D (AEP53, UK) | 1 | 3 |
| DVP-S535D (AEP52) | 1 | 4 |
| DVP-S735D (AEP51, UK) | 2 | 3 |
| DVP-S735D (AEP50) | 2 | 4 |
| DVP-S735D (RU) | 2 | 5 |
| DVP-S735D (E, EA) | 2 | 9 |
| DVP-S735D (AUS) | 2 | A |

• Abbreviation

AUS : Australian
EA : Saudi Arabia
RU : Russian

• Description about destination (AEP model)

AEP50

└ This number indicates the suffix number of its "model code".

(2-5) Region

Region code is displayed.

Error: Not detected.

The region code determined from the model code is displayed.

3. Peripheral

(3-2) EEPROM Check

Data write → read, and accord check

Error 03: EEPROM write/read discord

Before writing, the data are saved, then after checking, they are written to restore the contents of EEPROM.

(3-3) Gate Array Check

Data write → read, and accord check

Error 02: Gate array write/read discord

(3-4) NAND Flash Check

Data clear → write → read, and accord check

This check is conducted to the DVP-S735D only.

Error 04: Clear error

05: Write error

06: Read data discord

21: Faulty blocks exceed 10

The data clear, write, read, and check are executed to the block 0 of Flash memory (IC802).

In case of a faulty block, its address is displayed.

4. Servo

(4-2) Servo DSP Check

Data write → read, and accord check

Error 12: Read data discord

(4-3) DSP Driver Test

Test signal data → DSP Driver

Error: Not detected.

5. Supply

Caution: Do not conduct this check with a mechanical deck connected.

An access is made to the stream supply and servo control IC (IC302) and external RAM (IC303) using check data. If mechanical deck is connected, the motor and optics could be damaged. This check is also executed by the "All" menu item.

Supplement: How to disconnect mechanical deck

Disconnect flexible flat cables connected to the CN201 and CN202 of MB-86 board. Also, disconnect flat cable from the CN401.

(5-2) ARP Register Check

Data write → read, and accord check

Error 08: ARP register write, and read data discord

(5-3) ARP to RAM Data Bus

Data write → read, and accord check

Error 09: ARP ↔ RAM data bus error

Data 0x0001 to 0x8000 where one bit each is set to 1 are written to the address 0 of RAM (IC303) connected to the ARP (IC302) through the bus, then they are read and checked. In case of discord, written bit pattern and read data are displayed. If data where multiple bits are 1 are read, the bits concerned may touch each other. Further, if data where certain bit is always 1 or 0 regardless of written data, the line could be disconnected or shorted.

(5-4) ARP to RAM Address Bus

Data write → other address read discord check

Error 10: ARP → RAM address bus error

Caution: Address and data display in case of an error is different from the display of other diagnosis (described later).

Before starting the test, all addresses of RAM (IC303) are cleared to 0x0000.

First, 0xA55A is written to the address 0x00000, and the address data are read and checked from addresses 0x00001 to 0x80000 while shifting 1 bit each. Next, the data at that address is cleared, and it is written to the address 0x00001, and read and checked in the same manner. This check is repeated up to the address 0x80000 while shifting the address data by 1 bit each.

If data other than 0 is read at the addresses except written address, an error is given because all addresses were already cleared to 0. In this check, the error display pattern is different from that of other diagnosis; read data, written address, and read address are displayed in this order. However, the message uses same template, and accordingly exchange Address and Data when reading. The following display, for example,

```

### Syscon Diagnosis ###

5-4. ARP to RAM Address Bus
Error 10: ARP - RAM Address B
Address   : 0000A55A
Write Data: 00000000
Read Data : 00080000
Press NEXT Key to Continue
Press PREV Key to Repeat
—

```

shows the data 0xA55A was read from address 0x00080000 though it was written to the address 0x00000000. This implies that these addresses are in the form of shadow. Also, if the read data is not 0xA55A, another error will be present.

(5-5) ARP RAM Check

Data write → read, and accord check
Error 11: ARP RAM read data discord

The program code data stored in ROM are copied to all areas of RAM (IC303) connected to the ARP (IC302) through the bus, then they are read and checked if they accord. If the detail check was selected initially, the data are written to all areas and read, then the same test is conducted once again with the data where all bits are inverted between 1 and 0. If discord is detected, faulty address, written data, and read data are displayed following the error code 11, and the test is suspended.

6. AV Decoder

(6-2) 1930 RAM

Data write → read, and accord check
Error 13: AVD RAM read data discord

The program code data stored in ROM (IC104) are copied to all areas of RAM (IC504, IC505) connected to the AVD (IC502) through the bus, then they are read and checked if they accord. Further, the same test is conducted once again with the data where all bits are inverted between 1 and 0. If discord is detected, faulty address, written data, and read data are displayed following the error code 13, and the test is suspended.

(6-3) 1930 SP

ROM → AVD RAM → Video OUT
Error: Not detected.

The data including sub picture streams in ROM (IC104) are transferred to the RAM (IC504, IC505) in AVD (IC502), and output as video signals from the AVD (IC502). They are output from all video terminals (Composite, Y/C, Component) except EURO AV terminal.

7. Video

(7-2) Color Bar

AVD color bar command write → Video OUT
Error: Not detected.

The command is transferred to the AVD, and the color bar signals are output from video terminals. They are output from all video terminals (Composite, Y/C, Component) except EURO AV terminal.

(7-3) Composite Out

EURO-AV Composite video output check
AVD color bar command write → Video (EURO-AV Composite) OUT
Error: Not detected.

With the Component of video output turned off, the color bar signals are output from the EURO-AV terminal.

(7-4) Y/C Out

EURO-AV Y/C video output check
AVD color bar command write → Video (EURO-AV Y/C) OUT
Error: Not detected.
With the Y/C of video output turned on, the color bar signals are output from the EURO-AV terminal.

(7-5) RGB Out

EURO-AV RGB video output check
AVD color bar command write → Video (EURO-AV RGB) OUT
Error: Not detected.
With the RGB of video output turned on, the color bar signals are output from the EURO-AV terminal.

(7-6) Component Out

EURO-AV Component video output check
AVD color bar command write → Video (EURO-AV Component) OUT
Error: Not detected.
With the Component of video output turned on, the color bar signals are output from the EURO-AV terminal.

(7-7) Euro AV Through

Euro-AV2 input check.
Check video and audio signal pass through from Euro-AV2 to Euro-AV1.
Error: Not detected.

8. Audio

(8-2) ARP → 1930

Error 14 : ARP → 1930 video NG

15 : ARP → 1930 audio NG

(8-3) Test Tone

A pink noise signal is output from the AVD (IC502) through optical coaxial digital terminal and analog audio terminal.
Error: Not detected.

All channels → 2ch Left → 2ch Right → Front Left → Front Right → Rear Left → Rear Right → Center → Sub Woofer are checked in this order.

Caution: Sub Woofer is checked only for low-frequency components, and no sound will be heard unless a proper super woofer is connected.

Check Items List

2) Version

(2-2) Revision

(2-3) ROM Check Sum

(2-4) Model Type

(2-5) Region

3) Peripheral

(3-2) EEPROM Check

(3-3) Gate Array Check

(3-4) NAND Flash Check
(DVP-S735D)

4) Servo

(4-2) Servo DSP Check

(4-3) DSP Driver Test

5) Supply

(5-2) ARP Register Check

(5-3) ARP to RAM Data Bus

(5-4) ARP to RAM Address Bus

(5-5) ARP RAM Check

6) AV Decoder

(6-2) 1930 RAM

(6-3) 1930 SP

7) Video

(7-2) Color Bar

(7-3) Composite Out

(7-4) Y/C Out

(7-5) RGB Out

(7-6) Component Out

(7-7) Euro AV Through

8) Audio

(8-2) ARP → 1930

(8-3) Test Tone

Error Codes List

00: Error not detected

01: RAM write/read data discord

02: Gate array NG

03: EEPROM NG

04: Flash memory clear error

05: Flash memory write error

06: Flash memory read data discord

08: ARP register read data discord

09: ARP ↔ RAM data bus error

10: ARP ↔ RAM address bus error

11: ARP RAM read data discord

12: Servo DSP NG

13: 1930 SDRAM NG

14: ARP → 1930 video NG

15: ARP → 1930 audio NG

16: 1939 UCODE download NG

17: System call error (function not supported)

18: System call error (parameter error)

19: System call error (illegal ID number)

20: System call error (time out)

21: NAND Flash faulty blocks exceed 10


90: Error occurred

91: User verification NG

92: Diagnosis cancelled

6-4. DRIVE AUTO ADJUSTMENT

On the Test Mode Menu screen, press **[1]** key on the remote commander, and the drive auto adjustment menu will be displayed.

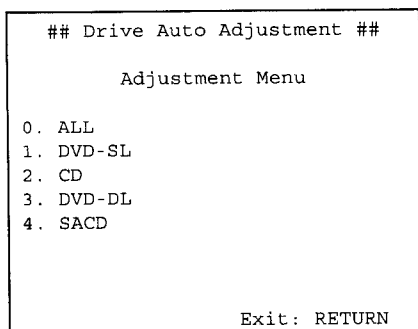

Normally, **[0]** is selected to adjust DVD (single layer), CD, DVD (dual layer), and SACD in this order. But, individual items can be adjusted for the case where adjustment is suspended due to an error. In this mode, the adjustment can be made easily through the operation following the message displayed on the screen. The disc used for adjustment must be the one specified for adjustment. However, for SACD disc, use the player with initial data if the disc is not available.

0. ALL

You will be asked if EEPROM data are initialized or not, and for this prompt, select **[0]** and press the **[ENTER]** key, and the servo set data in EEPROM will be initialized. Then, 1. DVD-SL disc, 2. CD disc, 3. DVD-DL disc, and 4. SACD disc are adjusted in this order. Each time one disc was adjusted, it is ejected. Replace it with the specified disc following the message. Though the message to confirm whether discs other than SACD disc are adjusted is not displayed, you can finish the adjustment if pressing the **[STOP]** button. The S curve level, RF level, and jitter value can be confirmed during adjustment, and if OK, press the **[ENTER]** key and continue adjustment. (If NG, press the **[STOP]** button) During adjustment of each disc, the measurement for disc type judgment is made. As automatic adjustment does not judge the disc type unlike conventional models, take care not to insert wrong type discs. Also, do not give a shock during adjustment.

1. DVD-SL (single layer)

Select **[1]**, insert DVD single layer disc, and press **[ENTER]** key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

DVD Single Layer Disc Adjustment Steps

1. SLED TILT Reset
2. Disc Check Memory SL
3. Wait 500 msec
4. Set Disc Type SL
5. LD ON
6. Spdl Start
7. Wait 1 sec
8. Focus Search ON
9. Focus Search OFF
10. Focus Servo ON 1
11. Auto Track Offset Adjust
12. Tracking ON
13. CLVA ON
14. Wait 1 sec
15. Sled ON
16. Check CLV Lock
17. Auto LFO Adjust
18. Auto Focus Offset Adjust
19. Auto Tilt Position Adjust
20. Auto Focus Gain Adjust
21. Auto Focus Offset Adjust
22. EQ Boost Adjust
23. Auto LFO Adjust
24. Auto Track Gain Adjust
25. All Servo Stop
26. Eep Copy Loop Filter Offset

2. CD

Select [2], insert CD disc, and press [ENTER] key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

CD Adjustment Steps

1. Sled Tilt Rest
2. Disc Check Memory CD
3. Wait 500 msec
4. Set Disc Type CD
5. LD ON
6. Spdl Start
7. Wait 1 sec
8. Focus Search ON
9. Focus Search OFF
10. Focus Servo ON 1
11. Auto Track Offset Adjust
12. Tracking ON
13. (TC Display Start)
14. CLVA ON
15. Wait 1 sec
16. Jitter Display Start
17. Sled ON
18. Check CLV ON
19. Auto LFO Adjust
20. Auto Focus Offset Adjust
21. Auto Focus Gain Adjust
22. Auto Focus Offset Adjust
23. Eq Boost Adjust
24. Auto LFO Adjust
25. Auto Track Gain Adjust
26. All Servo Stop

3. DVD-DL (dual layer)

Select [3], insert DVD dual layer disc, and press [ENTER] key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM.

DVD Dual Layer Disc Adjustment Steps

1. Sled Tilt Reset
2. Disc Check Memory DL
3. Wait 500 msec
4. Set Disc Type DL
5. LD ON
6. Spdl Start
7. Wait 1 sec
8. Focus Servo ON 1
9. Auto Track Offset Adjust
10. Tracking ON
11. Clva ON
12. Wait 1 sec
13. Sled ON
14. Check CLV Lock
15. Auto Loop Filter Offset Adjust
16. Auto Focus Offset Adjust
17. Auto Focus Gain Adjust
18. Auto Focus Offset Adjust
19. Eq Boost Adjust
20. Auto Loop Filter Offset
21. Auto Track Gain Adjust
22. Layer 0 Adjust
23. Fj (L1 → L0)
24. Auto Track Offset Adjust L0
25. Tracking ON
26. Clva ON
27. Wait 1 sec
28. Sled ON
29. Check CLV Lock
30. Auto Loop Filter Offset Adjust
31. Auto Focus Offset Adjust
32. Auto Focus Gain Adjust
33. Auto Focus Offset Adjust
34. Eq Boost Adjust
35. Auto Loop Filter Offset
36. Auto Track Gain Adjust
37. All Servo Stop

4. SACD

Select [4], insert SACD disc, and press [ENTER] key, and the adjustment will be made through the following steps, then adjusted values will be written to the EEPROM. However, if SACD disc is not available, use the player with initial data, skipping the SACD adjustment. In this case, you can finish the adjustment if pressing the [STOP] button.

SACD Adjustment Steps

1. Sled Tilt Reset
2. Set Disc Type CD
3. LD ON
4. Spdl Start
5. Wait 1 sec
6. Focus Servo ON 0
7. Auto track Offset Adjust
8. Tracking ON
9. CLVA ON
10. Wait 1 sec
11. Sled ON
12. Check CLV ON
13. Auto LFO Adjust
14. Auto Focus Offset Adjust
15. Auto Focus Gain Adjust
16. Auto Focus Offset Adjust
17. Eq Boost Adjust
18. Auto LFO Adjust
19. Auto Track Gain Adjust
20. All Servo Stop

6-5. DRIVE MANUAL OPERATION

On the Test Mode Menu screen, select [2], and the manual operation menu will be displayed. For the manual operation, each servo on/off control and adjustment can be executed manually.

```
## Drive Manual Operation ##

      Operation Menu

1. Disc type
2. Servo Control
3. Track/Layer Jump
4. Manual Adjustment
5. Auto Adjustment
6. Memory Check

0. Disc Check Memory

Exit: Return
```


In using the manual operation menu, take care of the following points. These commands do not provide protection, thus requiring correct operation. The sector address or time code field is displayed when a disc is loaded.

1. Set correctly the disc type to be used on the Disc Type screen.
The disc type must be set after a disc was loaded.
The set disc type is cleared when the tray is opened.
2. After power ON, if the Drive Manual Operation was selected, first perform "Reset SLED TILT" by opening 1. Disc Type screen.
3. In case of an alarm, immediately press the [STOP] button to stop the servo operation, and turn the power OFF.

Basic operation (controllable from front panel or remote commander)

| | |
|-----------------|--|
| [POWER] | Power OFF |
| [STOP] | Servo stop |
| [OPEN/CLOSE] | Stop+Eject/Loading |
| [RETURN] | Return to Operation Menu or Test Mode Menu |
| [NEXT], [PREV] | Transition between sub modes of menu |
| [1] to [9], [0] | Selection of menu items |
| Cursor UP/DOWN | Increase/Decrease in manually adjusted value |

0. Disc Check Memory

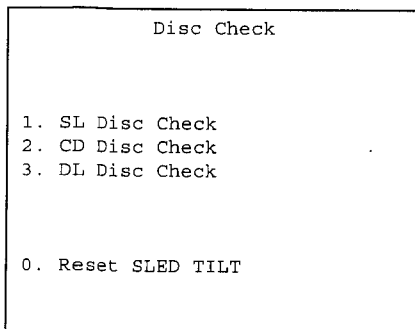

On this screen, the mirror time is measured to judge the disc and it is written to the EEPROM. First load DVD SL disc and press [1], next load CD disc and press [2], and finally load DVD DL disc and press [3].


The adjustment must be executed more than once after default data were written. External vibration or shock to the player must not be given. Reference value for DVD is from 10 to 20, and for CD, from 28 to 4F.

Check that the value of CD is larger than that of DVD.

When those values are beyond a range perform this adjustment again.

From this screen, you can go to another mode by pressing [NEXT] or [PREV] key, but you cannot enter this mode from another mode. You can enter this mode from the Operation Menu screen only.


1. Disc Type

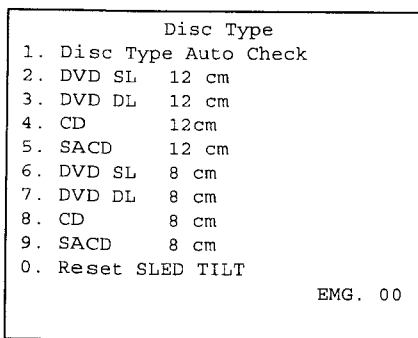


On this screen, select the disc type. To select the disc type, press the number of the loaded disc. The selected disc type is displayed at the bottom. Selecting [1] automatically selects and displays the disc type. In case of wrong display, retry "Disc Check Memory". Also, opening the tray causes the set disc type to be cleared. In this case, set the disc type again after loading.

In performing manual operation, the disc type must be set.

Once the disc type has been selected, the sector address or time code display field will appear as shown below. These values are displayed when PLL is locked.

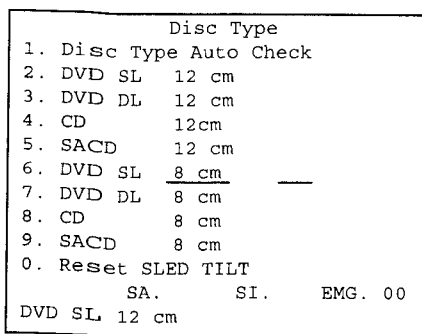

Display when DVD SL 12cm disc was selected

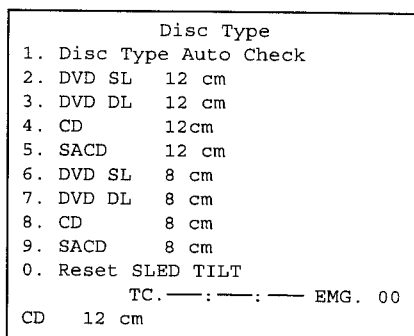

Display when CD 12cm disc was selected


[0] Reset SLED TILT Reset the Sled and Tilt to initial position.

[1] Disk Type Check Judge automatically the loaded disc. As the judged result is displayed at the bottom of screen, make sure that it is correct.

If Disc Check Memory menu has not been executed after EEPROM default setting, the disc type cannot be judged. In this case, return to the initial menu and make a check for three types of discs (SL, DL, CD).

[2] to [9] Select the loaded disc. The adjusted value is written to the address of selected disc. No further entry is necessary if [1] was selected.

2. Servo Control

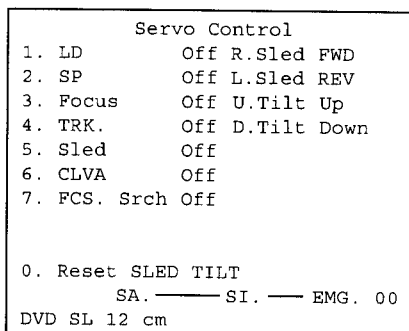

On this screen, the servo on/off control necessary for replay is executed. Normally, turn on each servo from 1 sequentially and when CLVA is turned on, the usual trace mode becomes active. In the trace mode, DVD sector address or CD time code is displayed. This is not displayed where the spindle is not locked.

The spindle could run overriding the control if the spindle system is faulty or RF is not present. In such a case, do not operate CLVA.

- | | | |
|-----|-----------------|--|
| [0] | Reset SLED TILT | Reset the Sled and Tilt to initial position. |
| [1] | LD | Turn ON/OFF the laser. |
| [2] | SP | Turn ON/OFF the spindle. |
| [3] | Focus | Search the focus and turn on the focus. |
| [4] | TRK | Turn ON/OFF the tracking servo. |
| [5] | Sled | Turn ON/OFF the sled servo. |
| [6] | CLVA | Turn ON/OFF normal servo of spindle servo. |
| [7] | FCS. Srch | Apply same voltage as that of focus search to the focus drive to check the focus drive system. |
| [→] | Sled FWD | Move the sled outward. Perform this operation with the tracking servo turned off. |
| [←] | Sled REV | Move the sled inward. Perform this operation with the tracking servo turned off. |
| [↑] | Tilt UP | Move the tilt upward. |
| [↓] | Tilt DOWN | Move the tilt downward. |

The following menus are normally not used.

3. Track/Layer Jump

4. Manual Adjustment

5. Auto Adjustment

The persons who do not know well about these menus should not use them.

6. Memory Check

| EEPROM DATA | | -- | DL | -- |
|--------------------|---------|----|----|----|
| | CD SACD | SL | L0 | L1 |
| Focus Gain | xx xx | xx | xx | xx |
| TRK. Gain | xx xx | xx | xx | xx |
| Focus Offset | xx xx | xx | xx | xx |
| TRK. Offset | xx xx | xx | xx | xx |
| L. F. Offset | xx xx | xx | xx | xx |
| Analog FRSW | xx xx | xx | xx | xx |
| PLL DAC Gain | xx xx | xx | xx | xx |
| EQ Boost | xx xx | xx | xx | xx |
| Jitter | xx xx | xx | xx | xx |
| Mirror Time | xx | xx | xx | |
| CLEAR: Default Set | | | | |

This screen displays current servo adjusted data stored in the EEPROM. Though adjusted data can be initialized with the [CLEAR] key, they cannot be restored after initialization.

So, before clearing, make a note of the adjusted data.

For reference, the drive has been designed so that the gain center value is 20 and offset value is 80. Other values will be in a range of 10 to 80. If extreme value such as 00 or FF is set, adjustment will be faulty. In such a case, check for disc scratch or cable disconnection, then perform adjustment again.

6-6. MECHA AGING

```

### Mecha Aging ###

Press OPEN key

Abort: STOP key

```

On the Test Mode Menu screen, selecting [3] executes the aging of mechanism. First, open the tray and load a disc. Press the [PLAY] key, and the aging will start. When the tray is closed, the disc type and size are judged and displayed. During aging, the repeat cycle is displayed. Aging can be aborted at any time by pressing the [STOP] key. After the operation has stopped, unload the disc and press again the [STOP] key or the [RETURN] key to return to the Test Mode Menu.

6-7. EMERGENCY HISTORY

```

### MEG. History ###

Laser Hours      CD  xxxxxxxh
                  DVD  xxxxxxxh

1. 00 00 00 00 00 00 00 00
   00 00 00 00 00 00 00 00

2. 00 00 00 00 00 00 00 00
   00 00 00 00 00 00 00 00

Select: 1 - 9  Scroll: UP/DOWN
(1: Last EMG.) Exit: Return

```

On the Test Mode Menu screen, selecting [4] displays the information such as servo emergency history. The history information from last 1 up to 10 can be scrolled with [↑] key or [↓] key. Also, specific information can be displayed by directly entering that number with ten keys.

The upper two lines display the laser ON total hours. Data below minutes are omitted.

Clearing History Information

Clearing laser hours

- ◎ Press [DISPLAY] and [CLEAR] keys in this order. Both CD and DVD data are cleared.


Clearing emergency history

- ◎ Press [TITLE] and [CLEAR] keys in this order. Initializing set up data

- ◎ Press [DVD] and [CLEAR] keys in this order.

The data have been initialized when "Set Up Initialize" message is displayed. The EMG. History screen will be stored soon.

How to see Emergency History

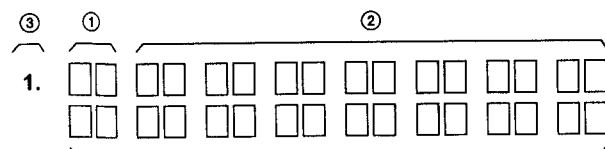

①: Emergency Code

②: Don't Care

These codes are used for verification of software designing.

③: Historical order 1 to 9

Emergency Codes List

- 10: Communication to IC201 (MB-86 board) failed.
- 11: Each servo for focus, tracking, and spindle is unlocked.
- 12: Communication to EEPROM, IC101 (MB-86 board) failed.
- 13: Writing of hours meter data to EEPROM, IC101 (MB-86 board) failed.
- 14: Communication to Servo DSP IC404 (MB-86 board) failed, or Servo DSP is faulty.
- 20: Initialization of tilt servo and sled servo failed. They are not placed in the initial position.
- 21: Tilt servo operation error
- 22: Syscon made a request to move the tilt servo to wrong position.
- 23: Sled servo operation error
- 24: Syscon made a request to move the sled servo to wrong position.
- 30: Tracking balance adjustment error
- 31: Tracking gain adjustment error
- 32: Focus balance adjustment error
- 33: Focus bias adjustment error
- 34: Focus gain adjustment error
- 35: Tilt servo adjustment error
- 36: RF equalizer adjustment error
- 37: RF group delay adjustment error
- 38: Jitter value after adaptive servo operation is too large.
- 40: Focus servo does not operate.
- 41: With a dual layer (DL) disc, focus jump failed.50: CLV (spindle) servo does not operate.
- 51: Spindle does not stop.
- 60: With a DVD disc, Syscon made a request to seek nonexistent address.
- 61: With a CD disc, Syscon made a request to seek nonexistent address.
- 62: With a CD disc, Syscon made a request to seek nonexistent track No. and index No.
- 63: With a DVD disc, seeking of target address failed.
- 64: With a CD disc, seeking of target address failed.
- 65: With a CD disc, seeking of target index failed.
- 70: With a DVD disc, physical information data could not be read.
- 71: With a CD disc, TOC data could not be read.
- 80: Disc type judgment failed.
- 81: As disc type judgment failed, retry was repeated.
- 82: As disc type judgment failed, a measurement error occurred.
- 83: Disc type could not be judged within the specified time.
- 84: Illegal command code was received from Syscon.
- 85: Illegal command was received from Syscon.

6-8. VERSION INFORMATION

| ## Version Information ## | | | |
|---------------------------|--------------------|-------|----|
| IF con. | Ver. x. xxx (xxxx) | Group | 00 |
| SYScon. | Ver. x. xxx (xxxx) | Model | xx |
| | Region | 0x | |
| Servo DSP. | Ver. 1. xxxx | | |
| Exit: RETURN | | | |


On the Test Mode Menu screen, selecting [5] displays the ROM version and region code.

The parenthesized hexadecimal number in version field is checksum value of ROM.

6-9. VIDEO LEVEL ADJUSTMENT

On the Test Mode Menu screen, selecting [6] displays color bars for video level adjustment. During display of color bars, OSD disappears but the menu screen will be restored if pressing any key.

Measurement point : LINE OUT VIDEO
(75 Ω terminating resistance)
Measuring instrument : Oscilloscope
Adjustment device : RV501 on MB-86 board
Specified value : 1.0 ± 0.02 Vp-p

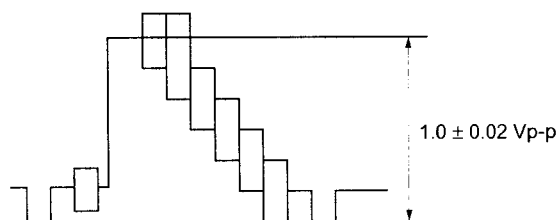

6-10. IF CON SELF DIAGNOSTIC FUNCTION

1. AI-17 BOARD (IF CON) TEST MODE

The front board test mode is the IF CON self diagnostic mode. The IF CON can diagnose the functions of the front panel boards that the IF CON controls. Normally, the IF CON makes a serial communication with the SYSTEM CONTROL and operates following the commands from the SYSTEM CONTROL, but in the Test mode, the IF CON operates independently from the SYSTEM CONTROL.

In the Test mode, the following functions can be checked.

1. Button function
2. Remocon receiving function
3. SYSTEM CONTROL-IF CON serial communication
4. Click shuttle function
5. Fluorescent display tube lighting check
 - Grid check
 - Anode check
6. LED control function

In the Test mode, the set operates same as usual, except voltage monitoring, communication monitoring, display of fluorescent display tube, and LED control.

1. The routine that monitors +3.3 V (PCONT) of MB-86 board is not provided.
2. The monitoring timer for serial communication with the SYSTEM CONTROL is not provided. The set is not placed in the Standby mode, even if the communication with SYSTEM CONTROL is normal.
3. Display of fluorescent display tube (normally, display is made following the commands from SYSTEM CONTROL)
4. LED control (normally, control is made following the commands from SYSTEM CONTROL)

2. OPERATION OF SELF CHECK MODE

The Self Check mode is the function to conduct the basic test to the FL display and DVD panel section.


2-1. Self Check Mode Transition Processing

At the AC Power ON after IF CON was reset, the input to 8pin (P60) is judged and if "Low" is entered, the main unit transits to the Self Check mode. In this port input judgment, the result of 3-time attempts must be same (assuming that the MB-86 board is not connected). While pressing the **[STOP]** key on the main unit with the IF CON in STANDBY mode, enter **[RETURN] → [DISPLAY]** (or **[SET UP]**) on the remote commander, and the unit transits to the Self Check Mode. The Self Check mode terminates when the IF CON transits to the STANDBY mode.


2-2. Operation of Auto Self Check

When the Self Check mode becomes active at the AC Power ON or by key input, the test display of the following steps (1) to (4) is repeated.

(1) FLD and LED all ON (for 5 seconds)

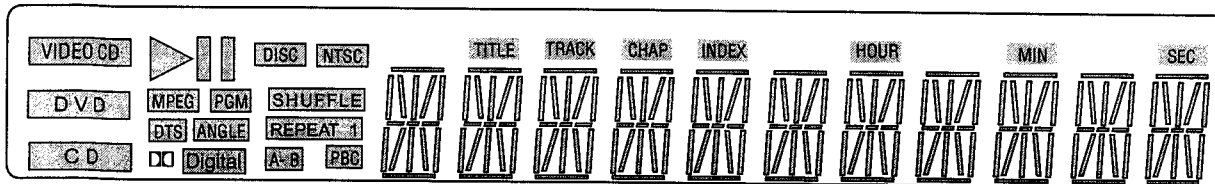

(2) MODEL display (for 2 seconds)

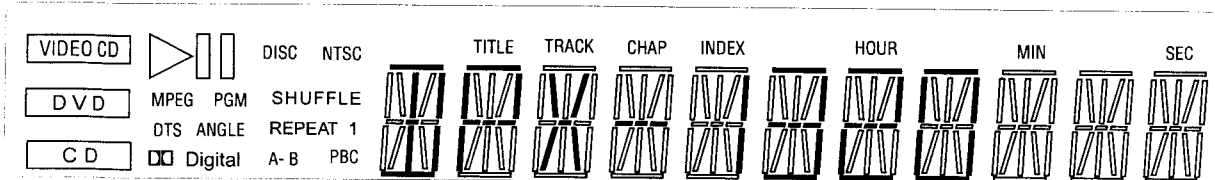

If MODEL is judged as Step UP-DD


Contents of display

"DPX-1300" Basic


"DPX-1310" Entry-DD

"DPX-1320" Step UP-DD

(3) Version display (for 2 seconds)

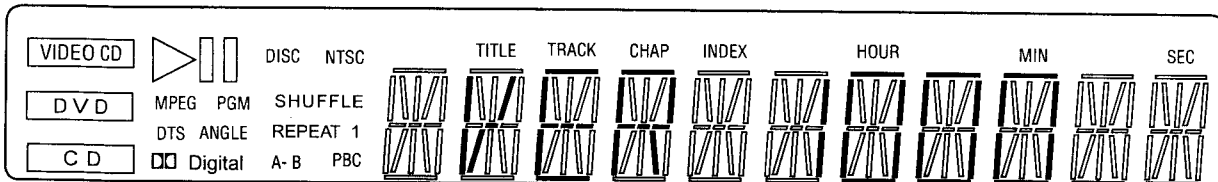

(4) ROM creation date display (for 2 seconds)

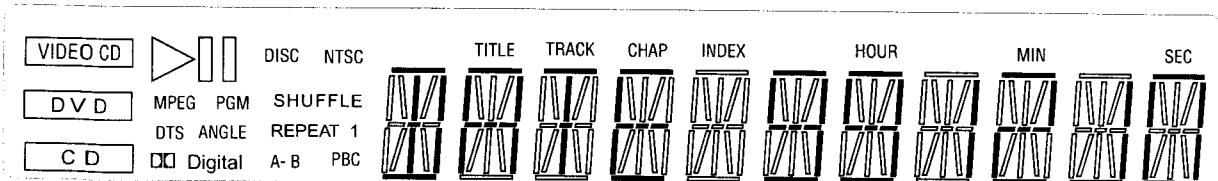

2-3. Each Self Check Function

Each Self Check function tests the FLD display, LED display, and key input.

Basic, Entry-DD, Step Up-DD

| Input Voltage [V] | IC404: Pin No. (Signal) | | | |
|-------------------|-------------------------|-------------|-------------|-------------|
| | Pin ③ (AN3) | Pin ② (AN4) | Pin ① (AN5) | Pin ⑦ (AN7) |
| 0 | STOP | TITLE | RIGHT | V_3D |
| 0.70 | PAUSE | DVD MENU | UP | DVE |
| 1.31 | DISP | NEXT | ENTER | HP_V |
| 1.97 | RETURN | PREV | DOWN | SHUFFLE |
| 2.59 | JOG | | LEFT | REPEAT |
| 3.3 | | | | |

1-3-1. FLD and LED All ON


1-3-1-1. Transition Keys in Self Check Mode

- **STOP** key and **PLAY** key on the main unit
- **LEFT** key on the main unit and the remote commander

2-3-1-2. Operation and Display

In this mode, all LEDs except STANDBY LED and all segments of FLD turn ON.

Example of FLD all ON

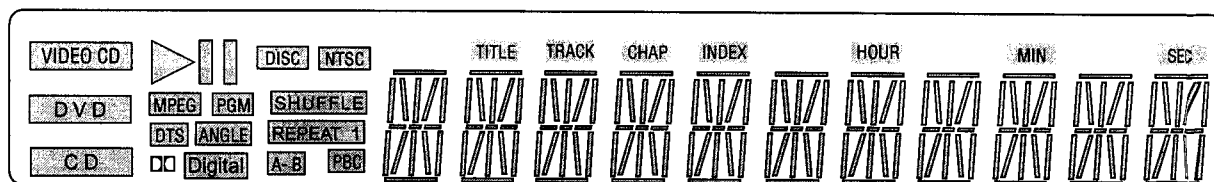

2-3-2. Main Unit Key Name Display and Key Code Display


2-3-2-1. Transition Keys in Self Check Mode

- Keys on main unit except keys transitioned in self check


2-3-2-2. Operation and Display

When a key on the main unit is pressed in the Self Check mode, the name of that key is displayed on the FLD. Also, the key name display and the key code display can be switched with the **DIS-PLAY** key on the remote commander. "NOTHING" is displayed when nothing is entered. Also, VIDEO CD, DVD, and CD segments turn on when a communication error occurred.


FLD display (at input of **PLAY** key on the main unit)

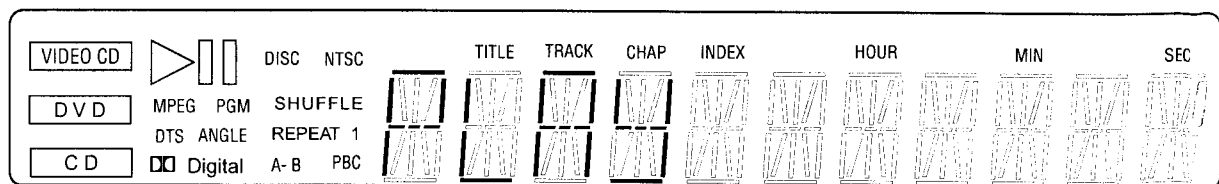


Key code display (at input of **PLAY** key, Key code: 0Ah)

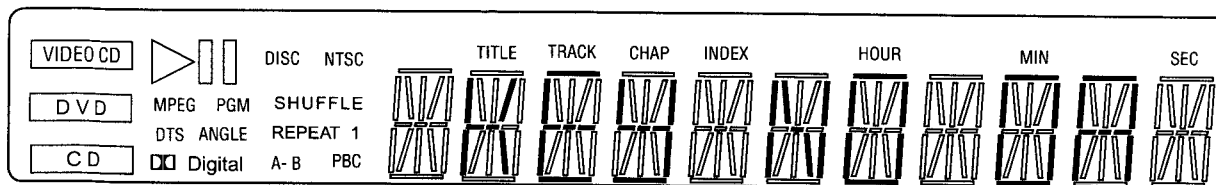

At input of faulty voltage

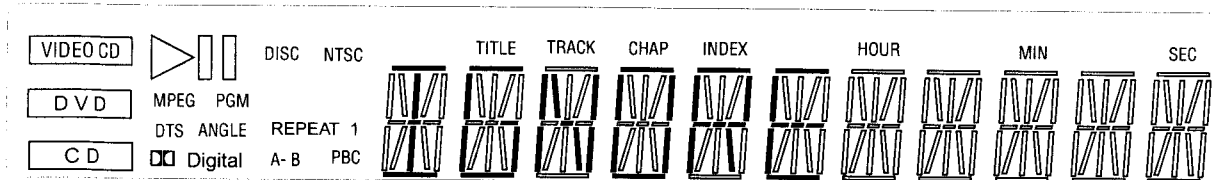

When two keys are pressed

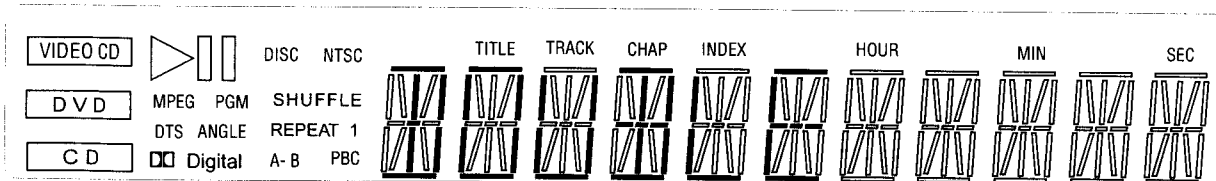

1-3-3. Remote Commander Key Name Display and Key Code Display


1-3-3-1. Transition Keys in Self Check Mode

- Remote commander keys except keys transited in self check


2-3-3-2. Operation and Display

When a key on the remote commander is pressed in the Self Check mode, the name of that key is displayed on the FLD. Also, the key name display and the key code display can be switched with the **DISPLAY** key on the remote commander. "NOTHING" is displayed when nothing is entered. Also, VIDEO CD, DVD, and CD segments turn on when a communication error occurred.

Remote commander key name display (at input of **PAUSE** key)

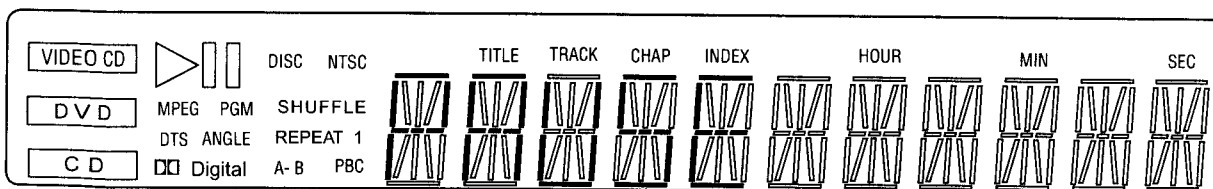


Remote commander key code display (at input of **PAUSE** key, Key code: 39h)

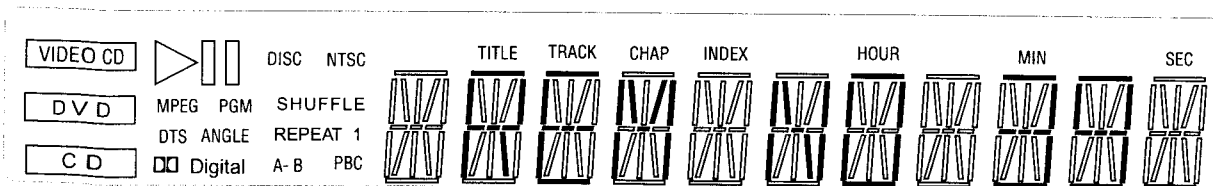


2-3-4. Communication Monitoring Display

The communication state is monitored and displayed while the key name on the main unit and the remote commander is displayed. When the communication to the System Controller failed, VIDEO CD, DVD, and CD segments turn on.

Communication error display (at no key input)

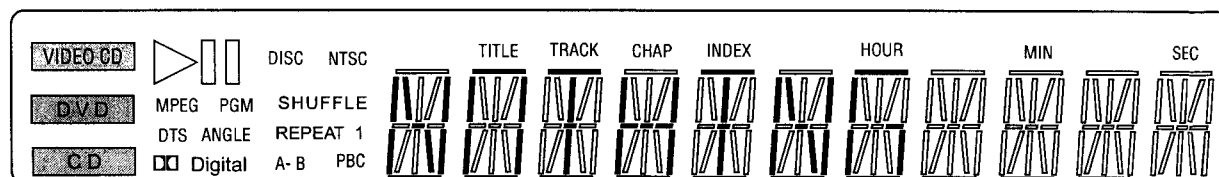

Communication error display (at code display without input of the remote commander)

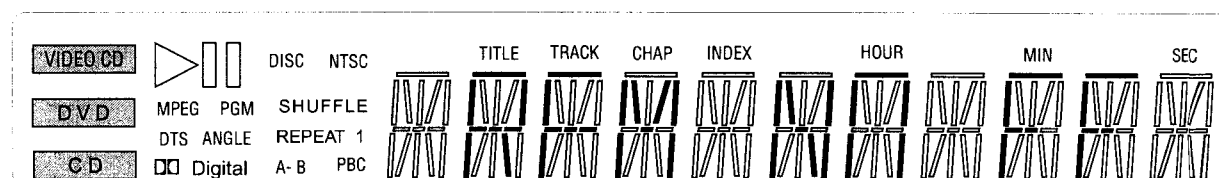

2-3-5. FLD Anode Test Display and SHUTTLE Click

Operation Test


2-3-5-1. Transition Keys in Self Check Mode

- **RIGHT** on the main unit and the remote commander
- **SHUTTLE** on the main unit and the remote commander during Anode Test display


2-3-5-2. Operation and Display

The Self Check mode transits to this mode when **RIGHT** key is entered. Only the first segment of each grid of FLD turns on, and each time the SHUTTLE is entered, the segment of each grid is switched in order. When SHUTTLE input is clockwise, the segment switches in 1 → 2 → 3 direction, or counterclockwise it switches in 3 → 2 → 1 direction. This tests whether each segment turns on individually. Also, if the main unit does not have the JOG/SHUTTLE, use the remote commander JOG/SHUTTLE to switch over the segment display position.

Display at the start of Anode Test

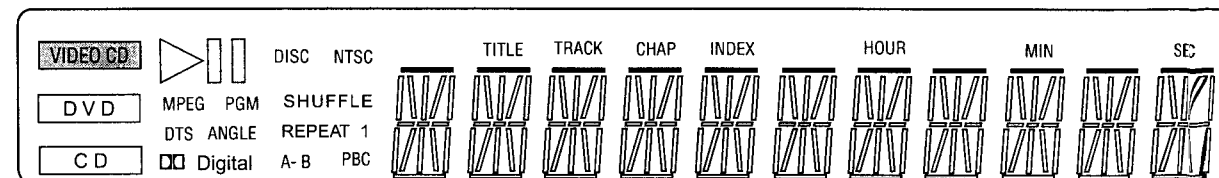

↓ (Input in CW direction)

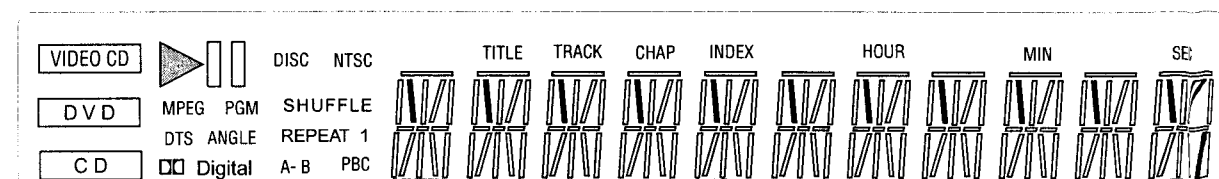

2-3-6. FLD Grid Test Display and SHUTTLE Click

Operation Test


2-3-6-1. Transition Keys in Self Check Mode

- **[UP]** on the main unit and the remote commander
- **SHUTTLE** on the main unit and the remote commander during Grid Test display

2-3-6-2. Operation and Display

The Self Check mode transits to this mode when **[UP]** key is entered. The first grid of FLD all turns on and other grids turn off. Each time the **SHUTTLE** is entered, the grid is switched in order. When **SHUTTLE** input is clockwise, the grid switches in 1 → 2 → 3 direction, or counterclockwise it switches in 3 → 2 → 1 direction. This tests whether each grid turns on individually.

Display at the start of Grid Test

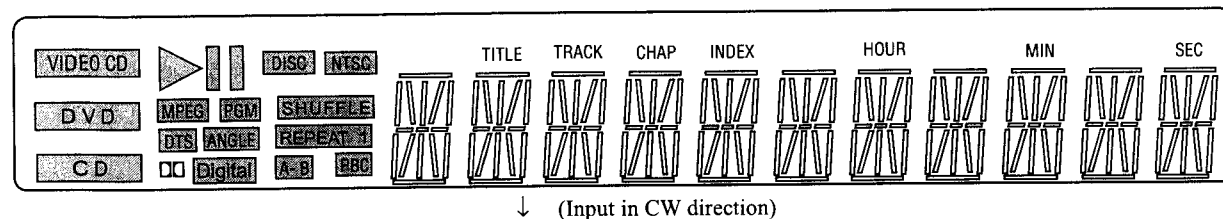

2-3-7. LED Test Display


2-3-7-1. Transition Keys in Self Check Mode

- **[DOWN]** on the main unit and the remote commander
- **SHUTTLE** on the main unit and the remote commander during LED Test display

2-3-7-2. Operation and Display

LED is switched in order by the input of **JOG/SHUTTLE**. Also, LED ON/OFF is switched by the input of same key as the function that turns on the LED concerned. For the **MULTI LED** only, there is no key which switches that function, and therefore use the **[RE-TURN]** key on the main unit.

FLD display during LED Test

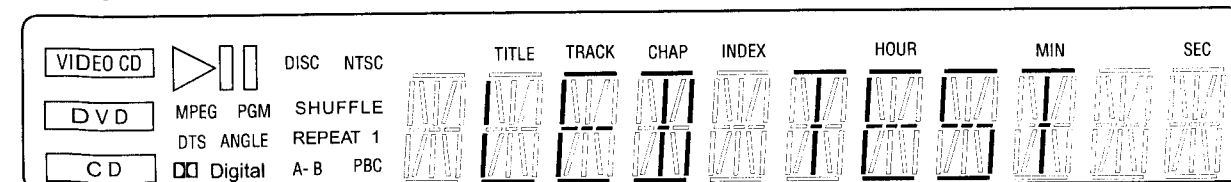



2-3-8. Beep Sound Test

2-3-8-1. Transition Keys in Self Check Mode

- Input of a key on main unit

2-3-8-2. Operation and Display

In the Self Check mode, each time a key on the main unit is entered, a beep sound of 2kHz (100ms) is generated.

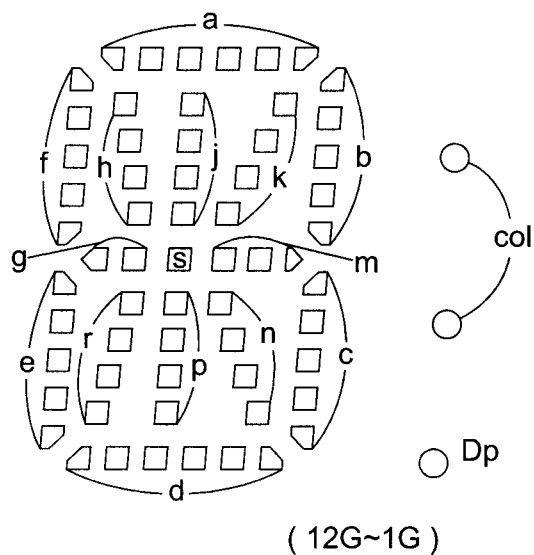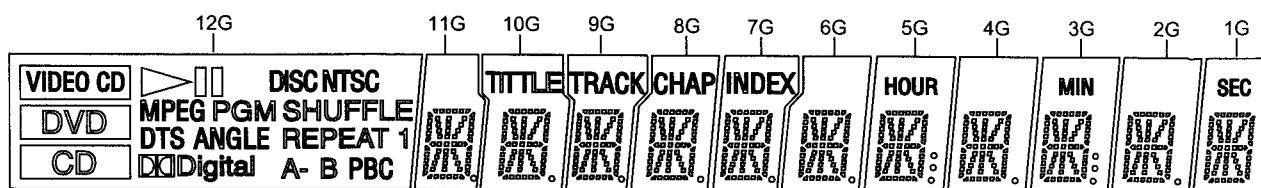

ANODE CONNECTION

| | 12G | 11G | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|-----|----------|-----|-------|-------|------|-------|----|------|----|-----|----|-----|
| P1 | VIDEO CD | a | a | a | a | a | a | a | a | a | a | a |
| P2 | ▶ | h | h | h | h | h | h | h | h | h | h | h |
| P3 | ▬▬ | j | j | j | j | j | j | j | j | j | j | j |
| P4 | DISC | k | k | k | k | k | k | k | k | k | k | k |
| P5 | NTSC | b | b | b | b | b | b | b | b | b | b | b |
| P6 | DVD | f | f | f | f | f | f | f | f | f | f | f |
| P7 | MPEG | m | m | m | m | m | m | m | m | m | m | m |
| P8 | PGM | s | s | s | s | s | s | s | s | s | s | s |
| P9 | SHUFFLE | g | g | g | g | g | g | g | g | g | g | g |
| P10 | DTS | e | e | e | e | e | e | e | e | e | e | e |
| P11 | ANGLE | n | n | n | n | n | n | n | n | n | n | n |
| P12 | REPEAT | p | p | p | p | p | p | p | p | p | p | p |
| P13 | 1 | r | r | r | r | r | r | r | r | r | r | r |
| P14 | PBC | c | c | c | c | c | c | c | c | c | c | c |
| P15 | B | d | d | d | d | d | d | d | d | d | d | d |
| P16 | A- | Dp | Dp | Dp | Dp | Dp | Dp | Dp | Dp | Dp | Dp | - |
| P17 | Digital | - | - | - | - | - | - | col | - | col | - | - |
| P18 | CD | - | TITLE | TRACK | CHAP | INDEX | - | HOUR | - | MIN | - | SEC |

3. TROUBLESHOOTING

3-1. Test Mode is not activated

With the set assembled in the front panel, the Test mode does not become active if any button was pressed by any reason. Under this condition, the power is not turned on even in the normal status. (The set is kept in Standby status = Red LED is kept on) Not only the buttons are inactive, but also a signal from remote commander is not accepted. To check this condition, with the self check port (pin ⑧ of IF CON) kept in "Low" status, supply the AC power, so that the Test mode is forcibly activated. On the board, short the lands where SELF is printed. The IF CON checks the self check port only after the power on reset (only when AC is supplied; not in Standby status). If any button was pressed, the button name should be displayed on the FL display tube. Though no button is pressed this time, display of other than NOTHING implies that the button was pressed.

3-2. Power is not turned on

- ① Red (STANDBY) LED does not light up when AC was supplied. The power (EVER 3.3 V) is not supplied.
X401 is oscillating.
- ② Red (STANDBY) LED is kept on though POWER button was pressed. Any button is kept pressed.
PONCHK (IF CON pin ⑥) is over 0.1 V.
- ③ Green LED lights up when POWER button was pressed, but red LED lights up again after several seconds. PONCHK (IF CON pin ⑥) is abnormal. (Slow rise time from 0.1 V to 1.5 V. Voltage must be less than 1.5 V)
SYSTEM CONTROL does not operate normally.

3-3. Power is turned on and off repeatedly

EVER 3.3 V may not be supplied normally. Check that D430 is not broken.

DVP-S335/S336/S345/S535D/S735D

SECTION 7 ELECTRICAL ADJUSTMENT

In making adjustment, refer to 7-3. Adjustment Related Parts Arrangement.

Note: During diagnostic check, the characters and color bars can be seen only with the NTSC monitor. Therefore, for diagnostic check, use the monitor that supports both NTSC and PAL modes.

Use the reference disc for PAL for check, and use the reference disc for NTSC for adjustment.

This section describes procedures and instructions necessary for adjusting electrical circuits in this set.

Instruments required:

- 1) Color monitor TV
- 2) Oscilloscope 1 or 2 phenomena, band width over 100 MHz, with delay mode
- 3) Frequency counter (over 8 digits)
- 4) Digital voltmeter
- 5) Standard commander (RMT-D115E/D115P/D116P/D120E/D120O/D120P)
- 6) DVD reference disc
 - HLX-501 (J-6090-071-A) (dual layer) (NTSC)
 - HLX-503 (J-6090-069-A) (single layer) (NTSC)
 - HLX-504 (J-6090-088-A) (single layer) (NTSC)
 - HLX-505 (J-6090-089-A) (dual layer) (NTSC)
 - HLX-506 (J-6090-077-A) (single layer) (PAL)
 - HLX-507 (J-6090-078-A)(dual layer) (PAL)
- 7) SACD reference disc
 - HLXA-509 (J-6090-090-A)

Abbreviation:

AUS : Australian
EA : Saudi Arabia

7-1. POWER SUPPLY ADJUSTMENT

1. HS16S9E Board

| | |
|-----------------|---------------------------|
| Mode | E-E |
| Instrument | Digital voltmeter |
| EVER +3 V Check | |
| Test point | CN201 pin ① |
| Specification | 3.6 ± 0.2 Vdc |
| SW +3 V Check | |
| Test point | CN201 pin ②, ③ |
| Specification | 3.4 ± 0.2 Vdc |
| EVER+5 V Check | |
| Test point | CN201 pin ④ |
| Specification | 5.3 ± 0.3 Vdc |
| SW +10 V Check | |
| Test point | CN201 pin ⑦, ⑧ |
| Specification | $10.5^{+1.0}_{-1.5}$ Vdc |
| SW -10 V Check | |
| Test point | CN201 pin ⑩ |
| Specification | $-10.0^{+1.5}_{-1.0}$ Vdc |

Checking method:

- 1) Confirm that each voltage satisfies the specification.

7-2. ADJUSTMENT OF VIDEO SYSTEM

1. Video Level Adjustment (MB-86 BOARD)

<Purpose>

This adjustment is made to satisfy the NTSC standard, and if not adjusted correctly, the brightness will be too large or small.

| Mode | Video level adjustment in test mode |
|-------------------|--|
| Signal | Color bars |
| Test point | LINE OUT (VIDEO) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Adjusting element | RV501 |
| Specification | 1.0 ± 0.02 Vp-p |

Adjusting method:

- 1) In the test mode initial menu "6" Video Level Adjustment, set so that color bars are generated.
- 2) Adjust the RV501 to attain 1.0 ± 0.02 Vp-p.



Figure 7-1

2. S-terminal Output Check (MB-86 BOARD)

<Purpose>

Check S-terminal video output. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with a S-terminal cable.

| Mode | Video level adjustment in test mode |
|---------------|---|
| Signal | Color bars |
| Test point | S VIDEO OUT (S-Y) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 1.0 ± 0.1 Vp-p |

Checking method:

- 1) In the test mode initial menu "6" Video Level Adjustment, set so that color bars are generated.
- 2) Confirm that the S-Y level is 1.0 ± 0.1 Vp-p.

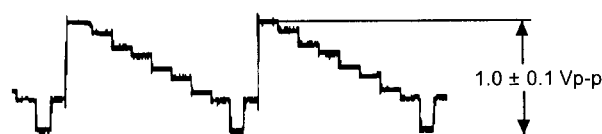


Figure 7-2

3. Checking Component Video Output B-Y (MB-86 BOARD) (DVP-S335: E, EA/S336: AUS/S345/S735D)

<Purpose>

This checks component video output B-Y. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

| Mode | Video level adjustment in test mode |
|---------------|---|
| Signal | Color bars |
| Test point | COMPONENT VIDEO OUT (B-Y) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 700 ± 70 mVp-p |

Checking method:

- 1) Confirm that the B-Y level is 700 ± 70 mVp-p.

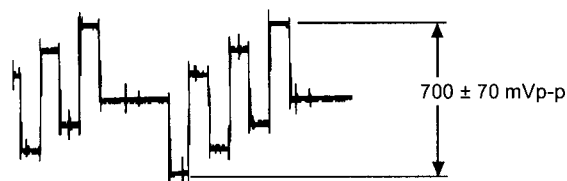


Figure 7-3

4. Checking Component Video Output R-Y (MB-86 BOARD) (DVP-S335: E, EA/S336: AUS/S345/S735D)

<Purpose>

This checks component video output R-Y. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

| Mode | Video level adjustment in test mode |
|---------------|---|
| Signal | Color bars |
| Test point | COMPONENT VIDEO OUT (R-Y) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 700 ± 70 mVp-p |

Checking method:

- 1) Confirm that the R-Y level is 700 ± 70 mVp-p.



Figure 7-4

5. Checking Component Video Output Y (MB-86 BOARD) (DVP-S335: E, EA/S336: AUS/S345/S735D)

<Purpose>

This checks component video output Y. If it is incorrect, correct brightness will not be attained when connected to, for instance, projector.

| | |
|---------------|---|
| Mode | In test mode, Push [0] for Syscon Diagnosis and push [7] for Video and push [5] for RGB out |
| Signal | Color bars |
| Test point | COMPONENT VIDEO OUT (Y) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 1.0 ± 0.1 Vp-p |

Checking method:

- 1) Confirm that the Y level is 1.0 ± 0.1 Vp-p.

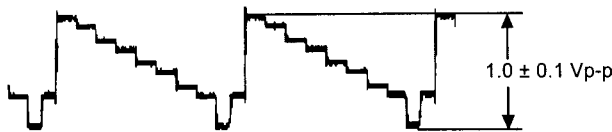


Figure 7-5

6. Checking RGB Output R (MB-86 BOARD)

<Purpose>

This checks RGB output R. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with an EURO AV connecting cord.

| | |
|---------------|---|
| Mode | In test mode, Push [0] for Syscon Diagnosis and push [7] for Video and push [5] for RGB out |
| Signal | Color bars |
| Test point | EURO AV 1 (RGB)-TV connector pin ⑩ (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 700 ± 70 mVp-p |

Checking method:

- 1) Confirm that the R level is 700 ± 70 mVp-p.

 


Figure 7-6

7. Checking RGB Output G (MB-86 BOARD)

<Purpose>

This checks RGB output G. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with an EURO AV connecting cord.

| | |
|---------------|---|
| Mode | In test mode, Push [0] for Syscon Diagnosis and push [7] for Video and push [5] for RGB out |
| Signal | Color bars |
| Test point | EURO AV 1 (RGB)-TV connector pin ⑪ (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 700 ± 70 mVp-p |

Checking method:

- 1) Confirm that the G level is 700 ± 70 mVp-p.



Figure 7-7

8. Checking RGB Output B (MB-86 BOARD)

<Purpose>

This checks RGB output B. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with an EURO AV connecting cord.

| | |
|---------------|---|
| Mode | In test mode, Push [0] for Syscon Diagnosis and push [7] for Video and push [5] for RGB out |
| Signal | Color bars |
| Test point | EURO AV 1 (RGB)-TV connector pin ⑫ (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 700 ± 70 mVp-p |

Checking method:

- 1) Confirm that the B level is 700 ± 70 mVp-p.



Figure 7-8

9. Checking S Video Output S-C (MB-86 BOARD)

<Purpose>

This checks whether the S-C satisfies the NTSC Standard. If it is not correct, the colors will be too dark or light.

| | |
|---------------|---|
| Mode | Video level adjustment in test mode |
| Signal | Color bars |
| Test point | S VIDEO OUT (S-C) connector (75 Ω terminated) |
| Instrument | Oscilloscope |
| Specification | 286 \pm 50 mVp-p (NTSC) 300 \pm 100 mVp-p (PAL) |

Checking method:


- 1) In the test mode initial menu "6" Video Level Adjustment, set so that color bars are generated.
- 2) Confirm that the S-C burst is 300 \pm 100 mVp-p.




Figure 7-9

7-3. ADJUSTMENT RELATED PARTS ARRANGEMENT


MB-86 BOARD (SIDE A)

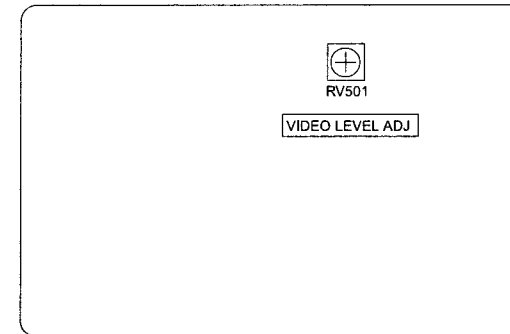

MB-86 BOARD (SIDE B)

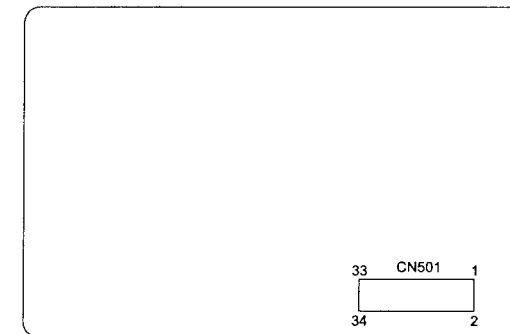

HS16S9E BOARD

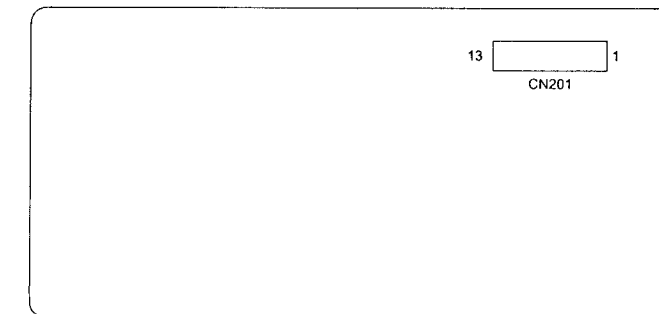

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)


↑ ↑
Parts Color Cabinet's Color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


- Abbreviation
AUS : Australian
EA : Saudi Arabia
RU : Russian

8-1-1. CASE ASSEMBLY (S335/S336/S345/S535D)

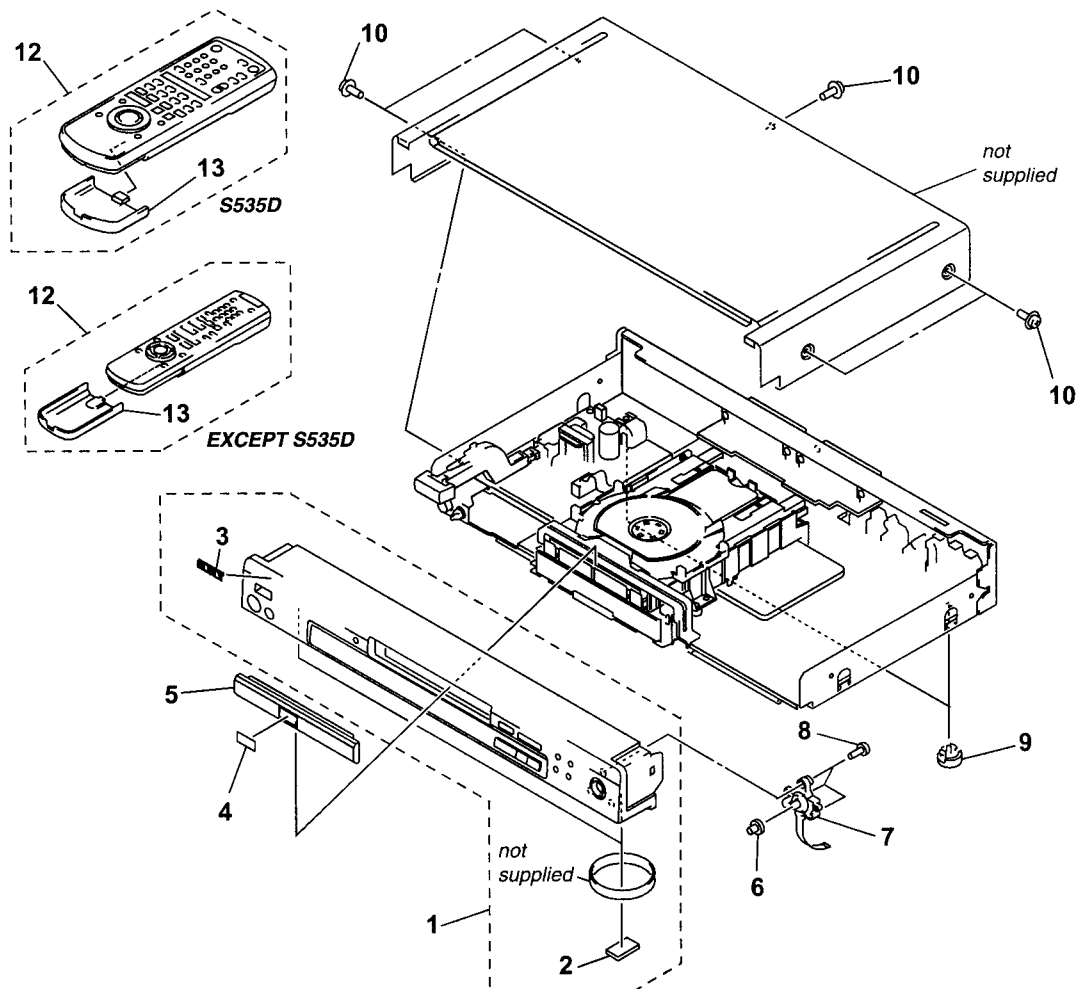


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------------------|--------|----------|--------------|-----------------------------------|--------|
| 1 | X-3950-398-1 | PANEL ASSY, FRONT (S345) | | 6 | 3-059-322-31 | STICK, CURSOR (S335/S535D) | |
| 1 | X-3950-399-1 | PANEL ASSY, FRONT (S335) | | 6 | 3-059-322-41 | STICK, CURSOR (S336) | |
| 1 | X-3950-400-1 | PANEL ASSY, FRONT (S336) | | 6 | 3-059-322-51 | STICK, CURSOR (S345) | |
| 1 | X-3950-412-1 | PANEL ASSY, FRONT (S535D) | | 7 | 1-771-913-11 | SWITCH, TACTILE | |
| 2 | 3-059-349-11 | CUSHION, FOOT | | 8 | 3-970-608-51 | SUMITITE (B3), +BV | |
| 3 | 4-217-485-01 | EMBLEM (5-A), SONY (S336) | | 9 | 3-059-389-01 | CUSHION (REAR), FOOT | |
| 3 | 4-963-404-21 | EMBLEM (5-A), SONY (S335/S535D) | | 10 | 3-710-901-11 | SCREW, TAPPING (S335/S535D) | |
| 3 | 4-963-404-41 | EMBLEM (5-A), SONY (S345) | | 10 | 3-710-901-61 | SCREW, TAPPING (S336/S345) | |
| 4 | 3-975-726-61 | EMBLEM, DVD (S336) | | 12 | 1-418-988-21 | COMMANDER, STANDARD (RMT-D115P) | |
| 4 | 3-975-726-71 | EMBLEM, DVD (S335/S535D) | | | | (S335: AEP, UK, RU/S336: AEP, UK) | |
| 4 | 3-975-726-81 | EMBLEM, DVD (S345) | | 12 | 1-418-988-31 | COMMANDER, STANDARD (RMT-D115E) | |
| | | | | | | (S335: E, EA/S336: AEP/S345) | |
| 5 | 3-059-323-41 | COVER, TRAY (S336) | | 12 | 1-418-991-21 | COMMANDER, STANDARD (RMT-D115P) | |
| 5 | 3-059-323-51 | COVER, TRAY (S345) | | | | (S535D) | |
| 5 | 3-059-377-01 | COVER, TRAY (S535D) | | 13 | 3-053-633-01 | COVER, BATTERY | |
| 5 | 3-061-152-01 | COVER, TRAY (S335) | | | | (for RMT-D115E/D115P/D116P) | |

8-1-2. CASE ASSEMBLY (S735D)

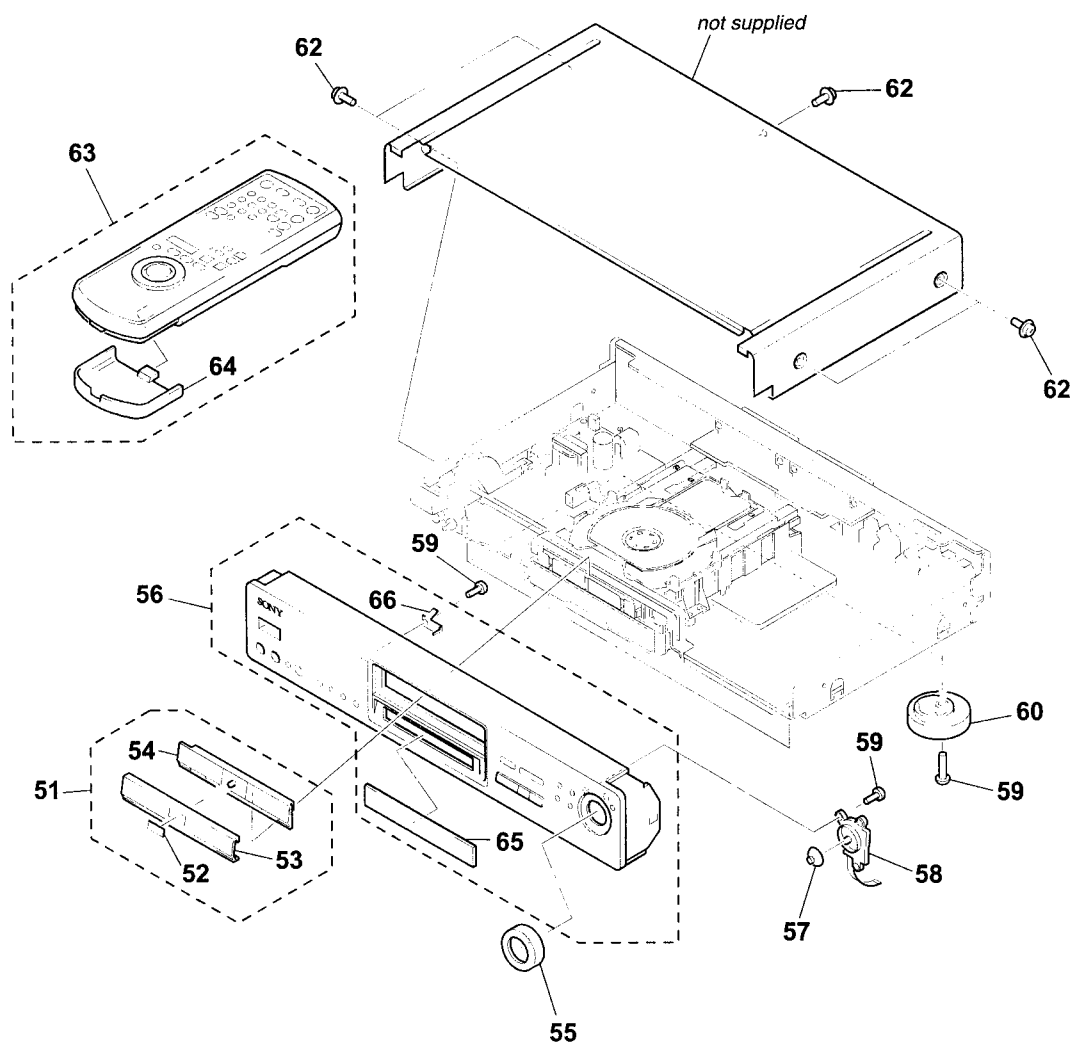

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------|--------|----------|--------------|--------------------------------------|--------|
| 51 | X-3950-318-1 | COVER ASSY, TRAY | | 62 | 3-710-901-61 | SCREW, TAPPING | |
| 52 | 3-975-726-31 | EMBLEM, DVD | | 63 | 1-418-989-31 | COMMANDER, STANDARD (RMT-D120P) | |
| 53 | 3-058-936-01 | COVER (AL), TRAY | | | | (AEP, UK, RU, E) | |
| 54 | 3-058-935-01 | COVER (M), TRAY | | 63 | 1-418-989-41 | COMMANDER, STANDARD (RMT-D1200) | |
| 55 | 3-058-939-01 | RING, SHUTTLE | | | | (E, AUS) | |
| 56 | X-3950-479-1 | PANEL ASSY, FRONT | | 63 | 1-418-989-51 | COMMANDER, STANDARD (RMT-D120E) (EA) | |
| 57 | 3-058-938-01 | STICK, CURSOR | | 64 | 3-055-539-01 | COVER, BATTERY | |
| 58 | 1-418-097-11 | ENCORE, ROTARY | | | | (for RMT-D120E/D1200/D120P) | |
| 59 | 3-970-608-51 | SUMITITE (B3), +BV | | 65 | 3-058-947-01 | WINDOW, FL | |
| 60 | X-3950-447-1 | FOOT ASSY (AEP, UK, RU) | | 66 | 3-058-944-01 | PLATE (T), GROUND | |
| 60 | X-3950-449-1 | FOOT ASSY (E, EA, AUS) | | | | | |


8-1-3. CHASSIS ASSEMBLY

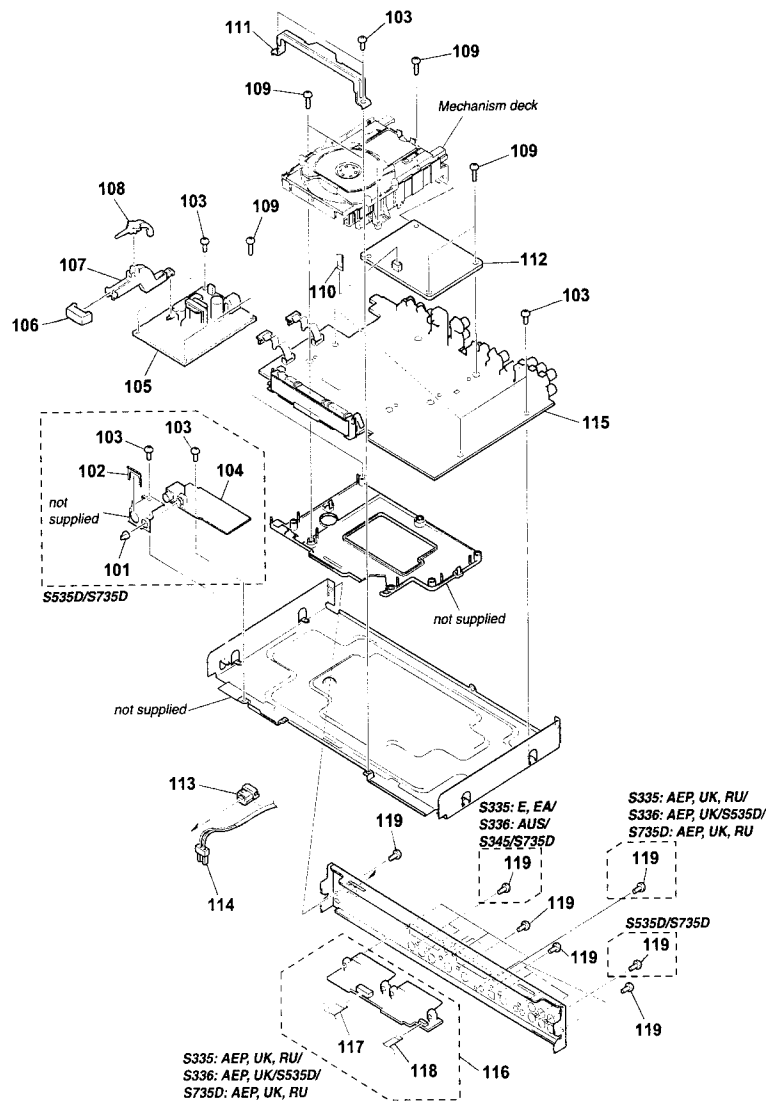

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|--------|----------|--------------|---|--------|
| 101 | 3-059-379-01 | KNOB, VOLUME (S535D) | | * 112 | A-6065-479-A | MB-86 BOARD, COMPLETE (S735D: AEP8) | |
| 101 | 3-059-379-11 | KNOB, VOLUME (S735D) | | * 112 | A-6065-480-A | MB-86 BOARD, COMPLETE (S735D: RU) | |
| * 102 | 3-684-436-01 | PLATE, MOUNT (S535D/S735D) | | * 112 | A-6065-484-A | MB-86 BOARD, COMPLETE (S735D: E) | |
| 103 | 3-970-608-01 | SUMITITE (B3), +BV | | * 112 | A-6065-485-A | MB-86 BOARD, COMPLETE (S735D: EA) | |
| * 104 | A-6065-455-A | HP-127 BOARD, COMPLETE (S535D) | | * 112 | A-6065-486-A | MB-86 BOARD, COMPLETE (S735D: AUS) | |
| * 104 | A-6065-470-A | HP-127 BOARD, COMPLETE (S735D: E, EA, AUS) | | 113 | 4-966-267-11 | BUSHING (FBS001), CORD | |
| * 104 | A-6065-476-A | HP-127 BOARD, COMPLETE (S735D: AEP, UK, RU) | | △ 114 | 1-769-744-91 | CORD, POWER (EXCEPT S336: AUS/S735D: AUS) | |
| * 105 | 1-468-506-31 | POWER BLOCK (HS16S9E) | | △ 114 | 1-790-588-11 | CORD, POWER (S336: AUS/S735D: AUS) | |
| 106 | 3-059-319-21 | BUTTON, POWER (S735D) | | * 115 | A-6065-442-A | AI-17 BOARD, COMPLETE (S335: AEP, UK, RU/S336: AEP, UK) | |
| 106 | 3-059-319-31 | BUTTON, POWER (S335/S535D) | | * 115 | A-6065-453-A | AI-17 BOARD, COMPLETE (S535D) | |
| 106 | 3-059-319-41 | BUTTON, POWER (S336) | | * 115 | A-6065-463-A | AI-17 BOARD, COMPLETE (S335: E, EA/S336: AUS/S345) | |
| 106 | 3-059-319-51 | BUTTON, POWER (S345) | | * 115 | A-6065-477-A | AI-17 BOARD, COMPLETE (S735D: AEP, UK, RU) | |
| 107 | 3-059-320-11 | JOINT (P) | | * 115 | A-6065-482-A | AI-17 BOARD, COMPLETE (S735D: E, EA, AUS) | |
| 108 | 3-059-321-11 | INDICATOR (P) | | * 116 | A-6065-444-A | ER-9 BOARD, COMPLETE (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| 109 | 3-061-608-01 | POINT (GROUND), +BV S TITE FRONT | | 117 | 1-792-455-11 | CABLE, FLEXIBLE FLAT (FAE-1) (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| 110 | 1-792-457-11 | CABLE, FLEXIBLE FLAT (FMM-33) | | 118 | 1-792-456-11 | CABLE, FLEXIBLE FLAT (FEA-5) (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| 111 | 3-059-388-01 | PILLAR, MULTI | | 119 | 3-970-608-51 | SUMITITE (B3), +BV | |
| * 112 | A-6065-443-A | MB-86 BOARD, COMPLETE (S335: AEP2, UK2/S336: AEP4, UK) | | 120 | 3-058-948-11 | PANEL, REAR (S735D: AEP, UK, RU) | |
| * 112 | A-6065-445-A | MB-86 BOARD, COMPLETE (S335: AEP3/S336: AEP5) | | 120 | 3-059-326-61 | PANEL, REAR (S735D: E, EA, AUS) | |
| * 112 | A-6065-446-A | MB-86 BOARD, COMPLETE (S335: RU) | | 120 | 3-059-326-71 | PANEL, REAR (S535D) | |
| * 112 | A-6065-448-A | MB-86 BOARD, COMPLETE (S345) | | 120 | 3-059-390-11 | PANEL, REAR (S335: E, EA/S336: AUS/S345) | |
| * 112 | A-6065-449-A | MB-86 BOARD, COMPLETE (S335: E, EA) | | 120 | 3-059-390-21 | PANEL, REAR (S335: AEP, UK, RU/S336: AEP, UK) | |
| * 112 | A-6065-450-A | MB-86 BOARD, COMPLETE (S336: AUS) | | | | | |
| * 112 | A-6065-452-A | MB-86 BOARD, COMPLETE (S535D: AEP6) | | | | | |
| * 112 | A-6065-454-A | MB-86 BOARD, COMPLETE (S535D: AEP7, UK) | | | | | |
| * 112 | A-6065-478-A | MB-86 BOARD, COMPLETE (S735D: AEP9, UK) | | | | | |

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

8-1-4. MECHANISM DECK SECTION

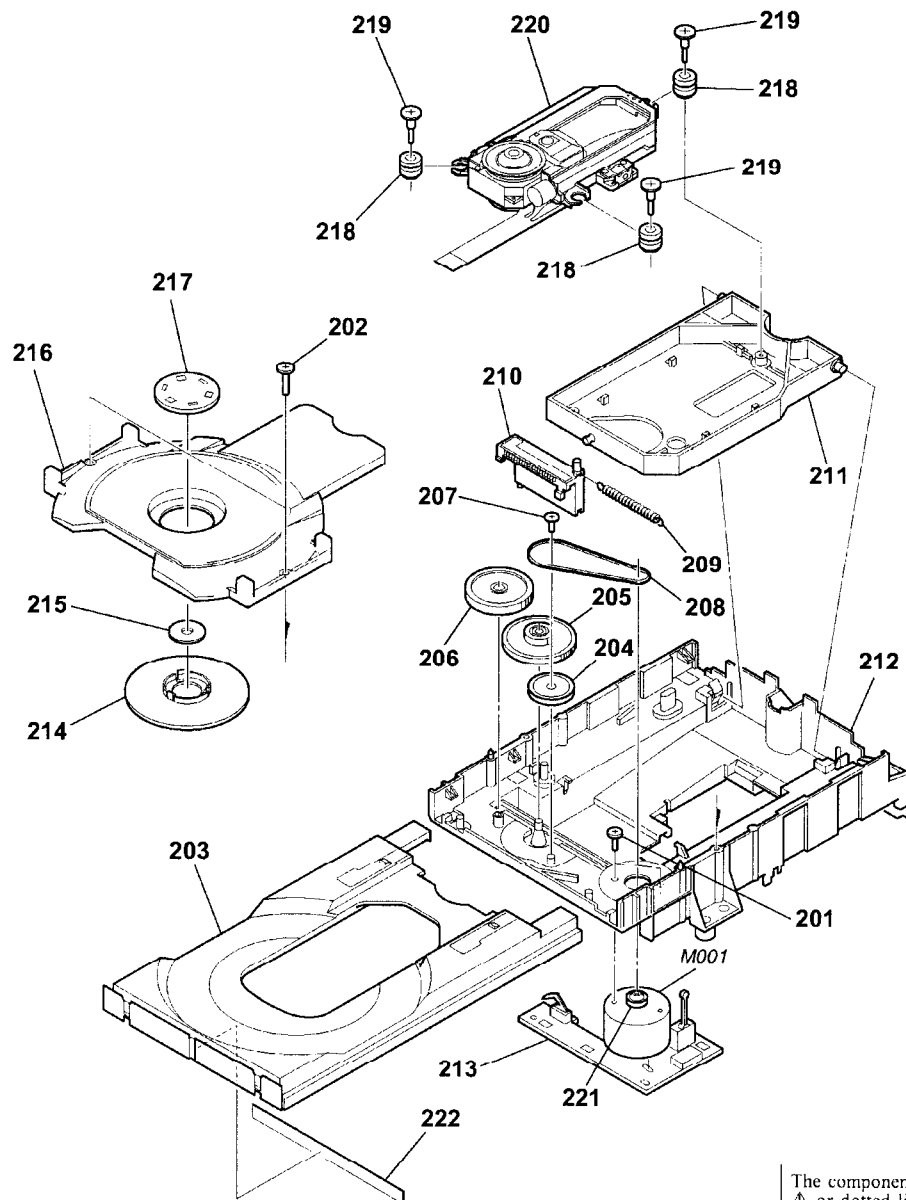

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------------------|--------|--------------|--------------|---------------------------------|--------|
| 201 | 7-621-775-10 | SCREW +B 2.6X4 | | * 213 | A-6066-016-A | MS-48 BOARD, COMPLETE | |
| 202 | 7-685-648-79 | SCREW +BVIP 3X12 TYPE2 II-3 | | 214 | 3-053-845-01 | CHUCK PLATE | |
| 203 | 3-053-837-11 | TRAY | | 215 | 3-053-844-01 | YOKE | |
| 204 | 3-053-841-01 | PULLEY GEAR | | 216 | 3-059-558-11 | HOLDER, CHUCK | |
| 205 | 3-053-840-01 | CAM DRIVING GEAR | | 217 | 3-053-846-01 | YOKE HOLDER | |
| 206 | 3-053-839-01 | TRAY DRIVING GEAR | | 218 | 3-053-847-01 | INSULATOR | |
| 207 | 4-974-711-01 | SCREW (2X5) (P TYIGHT), (+) PTTWH | | 219 | 4-981-923-01 | SCREW (M), STEP | |
| 208 | 3-053-842-01 | BELT | | Δ 220 | A-6062-397-A | OPTICAL PICK-UP KHM-220AAA/J1RP | |
| 209 | 3-053-849-01 | SPRING, TENSION | | 221 | 3-053-843-01 | MOTOR PULLEY | |
| 210 | 3-053-838-01 | CHUCK CAM | | 222 | 3-055-097-01 | SEAL, TRAY DUST | |
| 211 | 3-059-557-11 | HOLDER, BASE UNIT | | M001 | 1-541-632-11 | MOTOR, DC (LOADING) | |
| 212 | 3-059-556-11 | BASE, LOADING | | | | | |

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Not all of the parts for POWER BLOCK (HS16S9E) are listed.

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A... uPA... : μ PA...
uPB... : μ PB... uPC... : μ PC...
uPD... : μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H
- Abbreviation
AUS : Australian
EA : Saudi Arabia
RU : Russian

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

- Abbreviation
AUS : Australian
EA : Saudi Arabia
RU : Russian
- Description about destination (AEP model)
AEP⁵⁰
This number indicates the suffix number of its “model code”.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|--------|----------|--------------|---|--------|
| * | A-6065-442-A | AI-17 BOARD, COMPLETE (S335: AEP, UK, RU/S336: AEP, UK) | | C202 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% 50V (S335/S336/S345) | |
| * | A-6065-453-A | AI-17 BOARD, COMPLETE (S535D) | | C203 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% 50V | |
| * | A-6065-463-A | AI-17 BOARD, COMPLETE (S335: E, EA/S336: AUS/S345) | | C204 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% 50V | |
| * | A-6065-477-A | AI-17 BOARD, COMPLETE (S735D: AEP, UK, RU) | | C205 | 1-106-343-00 | MYLAR 1000PF 5% 200V (S735D) | |
| * | A-6065-482-A | AI-17 BOARD, COMPLETE (S735D: E, EA, AUS) ***** (Ref.No. 2, 000 Series) | | C206 | 1-106-343-00 | MYLAR 1000PF 5% 200V (S735D) | |
| | 3-059-329-01 | HOLDER (T), FL | | C207 | 1-107-737-11 | MYLAR 560PF 5% 50V (S535D/S735D) | |
| | 3-059-330-01 | HOLDER (U), FL | | C208 | 1-107-737-11 | MYLAR 560PF 5% 50V (S535D/S735D) | |
| | | < BUZZER > | | C209 | 1-137-256-11 | MYLAR 150PF 5% 50V (S535D/S735D) | |
| BZ401 | 1-504-920-11 | BUZZER | | C210 | 1-137-256-11 | MYLAR 150PF 5% 50V (S535D/S735D) | |
| | | < CAPACITOR > | | C211 | 1-163-135-00 | CERAMIC CHIP 560PF 5% 50V (S335/S336/S345) | |
| C110 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | C212 | 1-130-472-00 | MYLAR 0.0012uF 5% 50V (S735D) | |
| C114 | 1-104-664-11 | ELECT 47uF 20% 25V | | C213 | 1-104-664-11 | ELECT 47uF 20% 16V (S335/S336/S345/S535D) | |
| C116 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | C214 | 1-104-664-11 | ELECT 47uF 20% 16V (S335/S336/S345/S535D) | |
| C119 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | C215 | 1-128-200-11 | ELECT 47uF 20% 63V (S735D) | |
| C120 | 1-115-340-11 | CERAMIC CHIP 0.22uF 10% 25V | | C216 | 1-128-200-11 | ELECT 47uF 20% 63V (S735D) | |
| C121 | 1-104-665-11 | ELECT 100uF 20% 25V | | C217 | 1-106-351-00 | MYLAR 2200PF 5% 200V (S735D) | |
| C122 | 1-110-501-11 | CERAMIC CHIP 0.33uF 10% 16V | | C217 | 1-106-353-00 | MYLAR 0.0027uF 5% 50V (S535D) | |
| C123 | 1-124-589-11 | ELECT 47uF 20% 16V | | C217 | 1-130-478-00 | MYLAR 0.0039uF 5% 50V (S335/S336/S345) | |
| C124 | 1-128-551-11 | ELECT 22uF 20% 25V | | C218 | 1-106-351-00 | MYLAR 2200PF 5% 200V (S735D) | |
| C125 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | C218 | 1-106-353-00 | MYLAR 0.0027uF 5% 50V (S535D) | |
| C126 | 1-124-248-00 | ELECT 22uF 20% 35V | | C218 | 1-130-478-00 | MYLAR 0.0039uF 5% 50V (S335/S336/S345) | |
| C127 | 1-128-551-11 | ELECT 22uF 20% 25V | | C218 | 1-106-351-00 | MYLAR 2200PF 5% 200V (S735D) | |
| C128 | 1-124-248-00 | ELECT 22uF 20% 35V | | C219 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% 50V | |
| C129 | 1-124-248-00 | ELECT 22uF 20% 35V | | C220 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% 50V | |
| C160 | 1-124-234-00 | ELECT 22uF 20% 16V (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | C221 | 1-126-052-11 | ELECT 100uF 20% 16V (S735D) | |
| C162 | 1-163-017-00 | CERAMIC CHIP 0.0047uF 5% 50V (S335: AEP, UK, RU/S336: AEP, UK/S535D) | | C221 | 1-126-933-11 | ELECT 100uF 20% 16V (S335/S336/S345/S535D) | |
| C162 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% 50V (S735D: AEP, UK, RU) | | | | | |
| C163 | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | | | | |
| C164 | 1-128-131-11 | ELECT 22uF 20% 50V (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | | | | |

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|--------------|----------|-----|---|----------|--------------|--------------|-----------|-----|-------------------------|
| C222 | 1-126-052-11 | ELECT | 100uF | 20% | 16V (S735D) | C261 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C222 | 1-126-933-11 | ELECT | 100uF | 20% | 16V (S335/S336/S345/S535D) | C262 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C223 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | C263 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C224 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | C264 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C225 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | C265 | 1-126-176-11 | ELECT | 220uF | 20% | 10V (S535D/S735D) |
| C226 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | C266 | 1-126-176-11 | ELECT | 220uF | 20% | 10V (S535D/S735D) |
| C227 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345) | C267 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345) |
| C228 | 1-126-964-11 | ELECT | 10uF | 20% | 50V (S335/S336/S345) | C268 | 1-126-963-11 | ELECT | 4.7uF | 20% | 50V (S535D/S735D) |
| C229 | 1-107-823-11 | CERAMIC CHIP | 0.47uF | 10% | 16V | C269 | 1-124-261-00 | ELECT | 10uF | 20% | 50V (S535D/S735D) |
| C230 | 1-124-584-00 | ELECT | 100uF | 20% | 10V (S335/S336/S345/S535D) | C270 | 1-124-261-00 | ELECT | 10uF | 20% | 50V (S535D/S735D) |
| C230 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) | C271 | 1-126-965-11 | ELECT | 22uF | 20% | 50V |
| C231 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345/S535D) | C272 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| C232 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345/S535D) | C273 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S335/S336/S345) |
| C233 | 1-104-665-11 | ELECT | 100uF | 20% | 10V (S335/S336/S345/S535D) | C274 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S335/S336/S345) |
| C234 | 1-107-823-11 | CERAMIC CHIP | 0.47uF | 10% | 16V (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D) | C275 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S335/S336/S345) |
| C235 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345) | C276 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S335/S336/S345) |
| C236 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V | C277 | 1-163-135-00 | CERAMIC CHIP | 560PF | 5% | 50V (S335/S336/S345) |
| C237 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V | C302 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D/S735D) |
| C238 | 1-128-202-11 | ELECT | 220uF | 20% | 63V (S735D) | C303 | 1-126-933-11 | ELECT | 100uF | 20% | 16V (S535D/S735D) |
| C239 | 1-126-960-11 | ELECT | 1uF | 20% | 50V | C304 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V (S735D) |
| C240 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345) | C305 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V (S735D) |
| C241 | 1-126-960-11 | ELECT | 1uF | 20% | 50V | C306 | 1-126-960-11 | ELECT | 1uF | 20% | 50V (S735D) |
| C242 | 1-130-472-00 | MYLAR | 0.0012uF | 5% | 50V (S735D) | C307 | 1-115-340-11 | CERAMIC CHIP | 0.22uF | 10% | 25V (S535D/S735D) |
| C243 | 1-137-256-11 | MYLAR | 150PF | 5% | 50V (S535D/S735D) | C308 | 1-163-009-11 | CERAMIC CHIP | 0.001uF | 10% | 50V (S535D/S735D) |
| C244 | 1-137-256-11 | MYLAR | 150PF | 5% | 50V (S535D/S735D) | C309 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D/S735D) |
| C247 | 1-130-467-00 | MYLAR | 470PF | 5% | 50V (S735D) | C310 | 1-115-340-11 | CERAMIC CHIP | 0.22uF | 10% | 25V (S535D/S735D) |
| C248 | 1-130-467-00 | MYLAR | 470PF | 5% | 50V (S735D) | C311 | 1-107-823-11 | CERAMIC CHIP | 0.47uF | 10% | 16V |
| C252 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) | C312 | 1-137-605-11 | MYLAR | 0.00022uF | 5% | 50V (S535D/S735D) |
| C254 | 1-126-964-11 | ELECT | 10uF | 20% | 50V (S535D/S735D) | C313 | 1-137-605-11 | MYLAR | 0.00022uF | 5% | 50V (S535D/S735D) |
| C255 | 1-126-964-11 | ELECT | 10uF | 20% | 50V (S535D/S735D) | C314 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S535D/S735D) |
| C256 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | C315 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S535D/S735D) |
| C257 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V | C316 | 1-137-256-11 | MYLAR | 150PF | 5% | 50V (S535D/S735D) |
| C258 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) | C317 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V |
| C259 | 1-109-982-11 | CERAMIC CHIP | 1uF | 10% | 10V (S335/S336/S345/S535D) | C318 | 1-130-470-00 | MYLAR | 820PF | 5% | 50V (S535D/S735D) |
| C260 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) | | | | | | |

AI-17



| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|--------------|-----------|-----|-------------------------------|----------|--------------|--------------|----------|-----|--------------------------------|
| C319 | 1-163-145-00 | CERAMIC CHIP | 0.0015uF | 5% | 50V (S535D/S735D) | C348 | 1-104-664-11 | ELECT | 47uF | 20% | 16V (S335/S336/S345/S535D) |
| C321 | 1-130-470-00 | MYLAR | 820PF | 5% | 50V (S535D/S735D) | C348 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) |
| C322 | 1-163-145-00 | CERAMIC CHIP | 0.0015uF | 5% | 50V (S535D/S735D) | C349 | 1-104-664-11 | ELECT | 47uF | 20% | 16V |
| C323 | 1-106-343-00 | MYLAR | 1000PF | 5% | 200V (S535D/S735D) | C352 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C324 | 1-137-605-11 | MYLAR | 0.00022uF | 5% | 50V (S535D/S735D) | C353 | 1-126-935-11 | ELECT | 470uF | 20% | 6.3V (S335/S336/S345/S535D) |
| C325 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S535D/S735D) | C353 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) |
| C326 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | C354 | 1-128-197-11 | ELECT | 10uF | 20% | 50V (S735D) |
| C327 | 1-137-605-11 | MYLAR | 0.00022uF | 5% | 50V (S535D/S735D) | C356 | 1-128-197-11 | ELECT | 10uF | 20% | 50V (S735D) |
| C328 | 1-163-255-11 | CERAMIC CHIP | 150PF | 5% | 50V (S535D/S735D) | C357 | 1-126-964-11 | ELECT | 10uF | 20% | 50V (S335/S336/S345/S535D) |
| C329 | 1-137-256-11 | MYLAR | 150PF | 5% | 50V (S535D/S735D) | C357 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) |
| C330 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D) | C368 | 1-126-964-11 | ELECT | 10uF | 20% | 50V (S335/S336/S345/S535D) |
| C330 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C369 | 1-163-243-11 | CERAMIC CHIP | 47PF | 5% | 50V |
| C331 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D) | C370 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D/S735D) |
| C331 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C371 | 1-115-340-11 | CERAMIC CHIP | 0.22uF | 10% | 25V (S535D/S735D) |
| C332 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D) | C381 | 1-104-664-11 | ELECT | 47uF | 20% | 16V (S335/S336/S345/S535D) |
| C332 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C381 | 1-128-200-11 | ELECT | 47uF | 20% | 63V (S735D) |
| C333 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D) | C382 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% | 25V (S335/S336/S345/S535D) |
| C333 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C383 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C334 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S535D) | C384 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C334 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C385 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| C335 | 1-126-965-11 | ELECT | 22uF | 20% | 50V (S335/S336/S345/S535D) | C386 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) |
| C335 | 1-128-198-11 | ELECT | 22uF | 20% | 50V (S735D) | C387 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) |
| C336 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S535D/S735D) | C388 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) |
| C337 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S535D/S735D) | C389 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) |
| C338 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S535D/S735D) | C390 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C339 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S535D/S735D) | C391 | 1-136-850-11 | MYLAR | 0.1uF | 5% | 63V (S735D) |
| C340 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | C392 | 1-119-774-11 | ELECT | 100uF | 20% | 16V |
| C341 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | C393 | 1-126-926-11 | ELECT | 1000uF | 20% | 10V (S535D/S735D) |
| C342 | 1-163-259-91 | CERAMIC CHIP | 220PF | 5% | 50V | C393 | 1-126-934-11 | ELECT | 220uF | 20% | 16V (S335/S336/S345) |
| C343 | 1-137-605-11 | MYLAR | 0.00022uF | 5% | 50V (S535D/S735D) | C401 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S335/S336/S345) |
| C344 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) | C403 | 1-124-584-00 | ELECT | 100uF | 20% | 10V |
| C345 | 1-164-182-11 | CERAMIC CHIP | 0.0033uF | 10% | 50V (S535D/S735D) | C404 | 1-104-664-11 | ELECT | 47uF | 20% | 16V (S335/S336/S345/S535D) |
| C346 | 1-106-343-00 | MYLAR | 1000PF | 5% | 200V (S535D/S735D) | C405 | 1-124-234-00 | ELECT | 22uF | 20% | 16V |
| C347 | 1-106-343-00 | MYLAR | 1000PF | 5% | 200V (S535D/S735D) | C406 | 1-128-057-11 | ELECT | 330uF | 20% | 6.3V |
| | | | | | | C407 | 1-104-664-11 | ELECT | 47uF | 20% | 16V (S335/S336/S345/S535D) |
| | | | | | | C408 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V (S735D) |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|---------------|--------------|--|----------------------|--------------------|--------------|---|--------|
| C409 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V (S735D) | D161 | 8-719-041-97 | DIODE MA113- (TX) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | |
| C410 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V | D162 | 8-719-041-97 | DIODE MA113- (TX) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | |
| C411 | 1-104-665-11 | ELECT 100uF 20% | 10V | D163 | 8-719-041-97 | DIODE MA113- (TX) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | |
| C413 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V | D164 | 8-719-421-21 | DIODE MA8120-L-TX (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | |
| C416 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V | D201 | 8-719-914-43 | DIODE DAN202K-T-146 (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D) | |
| C417 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% | 25V | D202 | 8-719-914-43 | DIODE DAN202K-T-146 | |
| C418 | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% | 50V | D203 | 8-719-914-43 | DIODE DAN202K-T-146 | |
| C419 | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% | 50V | D205 | 8-719-988-61 | DIODE 1SS355TE-17 | |
| C420 | 1-128-131-11 | ELECT 22uF 20% | 50V | D302 | 8-719-914-43 | DIODE DAN202K-T-146 (S535D/S735D) | |
| C421 | 1-104-664-11 | ELECT 47uF 20% | 16V (S335/S336/S345) | D303 | 8-719-988-61 | DIODE 1SS355TE-17 (S335/S336/S345) | |
| C422 | 1-126-964-11 | ELECT 10uF 20% | 50V | D306 | 8-719-072-27 | DIODE MA2Z748001S0 | |
| C423 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V | D406 | 8-719-056-06 | DIODE SLR-342DCT32 (JOG) (S735D) | |
| C426 | 1-163-021-91 | CERAMIC CHIP 0.01uF 10% | 50V | D407 | 8-719-041-97 | DIODE MA113- (TX) | |
| C430 | 1-124-589-11 | ELECT 47uF 20% | 16V | D408 | 8-719-041-97 | DIODE MA113- (TX) | |
| C431 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% | 25V | D409 | 8-719-041-97 | DIODE MA113- (TX) | |
| C432 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% | 25V | D410 | 8-719-041-97 | DIODE MA113- (TX) | |
| C433 | 1-109-982-11 | CERAMIC CHIP 1uF 10% | 10V | D411 | 8-719-988-61 | DIODE 1SS355TE-17 | |
| C434 | 1-109-982-11 | CERAMIC CHIP 1uF 10% | 10V | D412 | 8-719-056-06 | DIODE SLR-342DCT32 (DVE) (S535D/S735D) | |
| C450 | 1-128-201-11 | ELECT 100uF 20% | 63V (S735D) | D413 | 8-719-056-06 | DIODE SLR-342DCT32 (VES) (S335/S336/S345) | |
| C451 | 1-163-133-00 | CERAMIC CHIP 470PF 5% | 50V | D413 | 8-719-056-06 | DIODE SLR-342DCT32 (VIRTUAL 3D SURROUND) (S535D/S735D) | |
| C490 | 1-163-259-91 | CERAMIC CHIP 220PF 5% | 50V | D415 | 8-719-422-62 | DIODE MA8062-L-TX | |
| C491 | 1-163-259-91 | CERAMIC CHIP 220PF 5% | 50V | D416 | 8-719-914-44 | DIODE DAP202K-T-146 | |
| C492 | 1-163-259-91 | CERAMIC CHIP 220PF 5% | 50V | D417 | 8-719-069-54 | DIODE UDZS-TE17-5.1B | |
| C493 | 1-128-201-11 | ELECT 100uF 20% | 63V (S735D) | D430 | 8-719-058-24 | DIODE RB501V-40TE-17 | |
| < CONNECTOR > | | | | < EARTH TERMINAL > | | | |
| CN101 | 1-794-325-11 | CONNECTOR, BOARD TO BOARD 34P | | * ET401 | 1-537-738-21 | TERMINAL, EARTH | |
| CN102 | 1-785-696-11 | CONNECTOR, FFC/FPC 15P (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | * ET402 | 1-537-738-21 | TERMINAL, EARTH | |
| CN201 | 1-794-325-11 | CONNECTOR, BOARD TO BOARD 34P | | * ET403 | 1-537-738-21 | TERMINAL, EARTH | |
| CN205 | 1-794-196-11 | CONNECTOR, FFC/FPC 11P (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | < FERRITE BEAD > | | | |
| CN401 | 1-778-317-21 | CONNECTOR, BOARD TO BOARD 13P | | FB101 | 1-414-766-22 | INDUCTOR CHIP 0uH | |
| CN403 | 1-568-788-21 | PIN, CONNECTOR 11P (S535D/S735D) | | FB102 | 1-414-766-22 | INDUCTOR CHIP 0uH | |
| * CN403 | 1-568-938-11 | PIN, CONNECTOR 11P (S335/S336/S345) | | FB103 | 1-414-766-22 | INDUCTOR CHIP 0uH | |
| CN404 | 1-784-641-21 | CONNECTOR, BOARD TO BOARD 11P (S535D/S735D) | | FB104 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | |
| CN405 | 1-785-694-11 | CONNECTOR, FFC/FPC 7P (S335/S336/S345/S535D) | | FB105 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | |
| CN405 | 1-793-481-11 | CONNECTOR, FFC/FPC 9P (S735D) | | FB106 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | |
| < DIODE > | | | | FB107 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/ S345/S735D) | |
| D101 | 8-719-914-44 | DIODE DAP202K-T-146 (S335: AEP, UK, RU/S336: AEP, UK/S535D/ S735D: AEP, UK, RU) | | FB108 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/ S345/S735D) | |
| D103 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | FB109 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/ S336: AUS/S345/S735D) | |
| D104 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | FB201 | 1-414-230-22 | INDUCTOR CHIP 0uH (S335/S336/S345/S535D) | |
| D105 | 8-719-071-15 | DIODE HZM6.8ZWA1TL (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | | | | | |
| D106 | 8-719-071-15 | DIODE HZM6.8ZWA1TL (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | | | | | |
| D160 | 8-719-041-97 | DIODE MA113- (TX) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | | | | | |

AI-17

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|-----------|--------------|--|--------|
| FB202 | 1-414-230-22 | INDUCTOR CHIP 0uH (S335/S336/S345/S535D) | | J102 | 1-793-475-21 | JACK, PIN 2P (VIDEO OUT) (S335: E, EA/S336: AUS/S345) | |
| FB203 | 1-414-230-22 | INDUCTOR CHIP 0uH | | J103 | 1-794-198-11 | CONNECTOR, S TERMINAL (S VIDEO OUT) (S335: AEP, UK, RU/S336: AEP, UK/S535D) | |
| FB204 | 1-414-230-22 | INDUCTOR CHIP 0uH (S535D/S735D) | | J103 | 1-794-198-21 | CONNECTOR, S TERMINAL (S VIDEO OUT) (S735D: AEP, UK, RU) | |
| FB205 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | | J103 | 1-694-484-11 | TERMINAL, S (2P.V) (S VIDEO OUT) (S735D: E, EA, AUS) | |
| FB206 | 1-414-766-22 | INDUCTOR CHIP 0uH | | J103 | 1-694-484-21 | TERMINAL, S (2P.V) (S VIDEO OUT) (S335: E, EA/S336: AUS/S345) | |
| FB207 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335: E, EA/S336: AUS/S345/ S735D: E, EA, AUS) | | J201 | 1-793-526-11 | JACK, PIN 4P (AUDIO OUT) (S735D: E, EA, AUS) | |
| FB208 | 1-414-766-22 | INDUCTOR CHIP 0uH | | J201 | 1-793-526-21 | JACK, PIN 4P (AUDIO OUT) (S335: E, EA/S336: AUS/S345) | |
| FB301 | 1-414-766-22 | INDUCTOR CHIP 0uH (S335/S336/S345) | | J202 | 1-793-525-11 | JACK, PIN 2P (AUDIO OUT) (S735D: AEP, UK, RU) | |
| FB402 | 1-469-324-21 | FERRITE 0uH | | J202 | 1-793-525-21 | JACK, PIN 2P (AUDIO OUT) (S335: AEP, UK, RU/S336: AEP, UK/S535D) | |
| FB405 | 1-469-324-21 | FERRITE 0uH | | J301 | 1-785-489-11 | JACK, PIN 6P (5.1CH OUTPUT) (S735D) | |
| FB406 | 1-469-324-21 | FERRITE 0uH | | J301 | 1-785-536-11 | JACK, PIN 6P (5.1CH OUTPUT) (S535D) | |
| FB407 | 1-469-324-21 | FERRITE 0uH | | J303 | 1-784-432-11 | JACK, PIN 1P (COAXIAL) (S735D) | |
| FB409 | 1-469-324-21 | FERRITE 0uH | | J303 | 1-793-446-21 | JACK, PIN 1P (COAXIAL) (S335/S336/S345/S535D) | |
| FB410 | 1-469-324-21 | FERRITE 0uH | | J304 | 1-793-446-11 | JACK, PIN 1P (WOOFER) (S335/S336/S345) | |
| < IC > | | | | < SHORT > | | | |
| IC101 | 8-759-667-63 | IC LA7109-TLM | | JR001 | 1-216-295-91 | SHORT 0 | |
| IC102 | 8-759-667-18 | IC PQ018EZ01ZP | | JR002 | 1-216-295-91 | SHORT 0 | |
| IC103 | 8-759-667-17 | IC L79M05TLL-SONY-TL | | JR003 | 1-216-296-91 | SHORT 0 | |
| IC201 | 8-759-669-29 | IC CXD9544MR | | JR004 | 1-216-296-91 | SHORT 0 | |
| IC203 | 8-759-587-83 | IC OPA2134UA/2K5 (S735D) | | JR005 | 1-216-296-91 | SHORT 0 | |
| IC204 | 8-759-377-65 | IC LC78817M-TE-L (S335/S336/S345) | | JR006 | 1-216-296-91 | SHORT 0 | |
| IC205 | 7-759-667-85 | IC CXD9545Q (S335/S336/S345) | | JR008 | 1-216-296-91 | SHORT 0 | |
| IC206 | 8-759-052-52 | IC L78M05TLL-SONY-TL | | JR009 | 1-216-296-91 | SHORT 0 (S535D/S735D) | |
| IC207 | 8-759-369-74 | IC NJM4556AM-TE2 (S535D) | | JR010 | 1-216-296-91 | SHORT 0 | |
| IC207 | 8-759-909-71 | IC BA4558F-E2 (S735D) | | JR011 | 1-216-296-91 | SHORT 0 (S535D/S735D) | |
| IC208 | 8-759-587-83 | IC OPA2134UA/2K5 (S735D) | | JR012 | 1-216-296-91 | SHORT 0 | |
| IC208 | 8-759-909-71 | IC BA4558F-E2 (S335/S336/S345/S535D) | | JR013 | 1-216-295-91 | SHORT 0 | |
| IC301 | 8-759-052-52 | IC L78M05TLL-SONY-TL (S735D) | | JR014 | 1-216-296-91 | SHORT 0 | |
| IC302 | 8-759-668-03 | IC CXD9543Q (S535D/S735D) | | JR015 | 1-216-295-91 | SHORT 0 (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) | |
| IC303 | 8-759-587-83 | IC OPA2134UA/2K5 (S735D) | | JR016 | 1-216-296-91 | SHORT 0 | |
| IC303 | 8-759-909-71 | IC BA4558F-E2 (S535D) | | JR017 | 1-216-296-91 | SHORT 0 | |
| IC304 | 8-759-587-83 | IC OPA2134UA/2K5 (S735D) | | JR018 | 1-216-296-91 | SHORT 0 | |
| IC304 | 8-759-909-71 | IC BA4558F-E2 (S535D) | | JR019 | 1-216-295-91 | SHORT 0 | |
| IC305 | 8-759-587-83 | IC OPA2134UA/2K5 (S735D) | | JR020 | 1-216-296-91 | SHORT 0 (S335/S336/S345/S535D) | |
| IC305 | 8-759-909-71 | IC BA4558F-E2 (S335/S336/S345/S535D) | | JR021 | 1-216-296-91 | SHORT 0 | |
| IC306 | 8-749-017-31 | IC GP1FA550TZ (OPTICAL) (S335/S336/S345) | | JR022 | 1-216-296-91 | SHORT 0 | |
| IC306 | 8-749-017-80 | IC GP1FA551TZ (OPTICAL) (S535D/S735D) | | JR023 | 1-216-295-91 | SHORT 0 | |
| IC307 | 8-759-667-19 | IC uPC29M08T-E1 | | JR024 | 1-216-295-91 | SHORT 0 | |
| IC401 | 8-719-066-43 | DIODE GP1U28Y (S335/S336/S345) | | JR025 | 1-216-296-91 | SHORT 0 | |
| IC403 | 8-759-673-34 | IC PST7030MT | | JR026 | 1-216-296-91 | SHORT 0 | |
| IC404 | 8-759-669-95 | IC M38B57M6-147FP | | JR027 | 1-216-296-91 | SHORT 0 | |
| IC406 | 8-759-521-90 | IC PQ05DZ5U | | JR028 | 1-216-296-91 | SHORT 0 | |
| IC407 | 8-759-671-84 | IC AN77033SP- (E1) | | JR029 | 1-216-296-91 | SHORT 0 (S335/S336/S345) | |
| < JACK > | | | | JR030 | 1-216-296-91 | SHORT 0 | |
| J101 | 1-793-445-11 | JACK, PIN 3P (COMPONENT VIDEO OUT) (S335: E, EA/S336: AUS/S345) | | JR031 | 1-216-296-91 | SHORT 0 | |
| J101 | 1-793-445-21 | JACK, PIN 3P (COMPONENT VIDEO OUT) (S735D) | | JR032 | 1-216-295-91 | SHORT 0 | |
| J102 | 1-785-867-21 | JACK, PIN 1P (VIDEO OUT) (S735D: AEP, UK, RU) | | JR033 | 1-216-296-91 | SHORT 0 | |
| J102 | 1-785-867-31 | JACK, PIN 1P (VIDEO OUT) (S335: AEP, UK, RU/S336: AEP, UK/S535D) | | JR034 | 1-216-296-91 | SHORT 0 | |
| J102 | 1-793-475-11 | JACK, PIN 2P (VIDEO OUT) (S735D: E, EA, AUS) | | JR035 | 1-216-296-91 | SHORT 0 | |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|--|--------------|-------------|--------------------------|--|--------------|-------------------------------------|---------------------------|
| JR036 | 1-216-295-91 | SHORT | 0 | JR090 | 1-216-295-91 | SHORT | 0 (S335/S336/S345) |
| JR037 | 1-216-296-91 | SHORT | 0 (S335/S336/S345) | JR091 | 1-216-295-91 | SHORT | 0 |
| JR038 | 1-216-296-91 | SHORT | 0 | < COIL > | | | |
| JR039 | 1-216-296-91 | SHORT | 0 | L160 | 1-408-978-21 | INDUCATOR | 47uH (S735D: AEP, UK, RU) |
| JR040 | 1-216-296-91 | SHORT | 0 | L160 | 1-408-982-11 | INDUCATOR | 100uH |
| JR041 | 1-216-296-91 | SHORT | 0 | (S335: AEP, UK, RU/S336: AEP, UK/S535D) | | | |
| JR042 | 1-216-296-91 | SHORT | 0 | L401 | 1-408-978-21 | INDUCATOR | 47uH |
| JR043 | 1-216-295-91 | SHORT | 0 | L402 | 1-408-978-21 | INDUCATOR | 47uH (S735D) |
| JR044 | 1-216-296-91 | SHORT | 0 | L402 | 1-410-427-11 | INDUCATOR | 47uH (S535D) |
| JR045 | 1-216-296-91 | SHORT | 0 | < FLUORESCENT INDICATOR TUBE > | | | |
| JR046 | 1-216-296-91 | SHORT | 0 (S535D/S735D) | ND401 | 1-517-971-11 | INDICATOR TUBE, FLUORESCENT | |
| JR047 | 1-216-296-91 | SHORT | 0 | (S335/S336/S345/S735D) | | | |
| JR048 | 1-216-296-91 | SHORT | 0 | ND401 | 1-517-972-11 | INDICATOR TUBE, FLUORESCENT (S535D) | |
| JR049 | 1-216-296-91 | SHORT | 0 | < IC LINK > | | | |
| JR050 | 1-216-296-91 | SHORT | 0 | △ PS401 | 1-532-679-00 | LINK, IC (0.6A) | |
| JR051 | 1-216-295-91 | SHORT | 0 (S335/S336/S345/S535D) | △ PS402 | 1-532-605-00 | LINK, IC (0.4A) | |
| JR052 | 1-216-296-91 | SHORT | 0 | < TRANSISTOR > | | | |
| JR053 | 1-216-296-91 | SHORT | 0 | Q106 | 8-729-421-19 | TRANSISTOR | UN2213-TX |
| JR054 | 1-216-296-91 | SHORT | 0 | Q107 | 8-729-424-08 | TRANSISTOR | UN2111-TX |
| JR055 | 1-216-295-91 | SHORT | 0 (S535D/S735D) | Q160 | 8-729-808-42 | TRANSISTOR | 2SD1624-T-TD |
| JR056 | 1-216-295-91 | SHORT | 0 (S535D/S735D) | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | | | |
| JR057 | 1-216-295-91 | SHORT | 0 | Q161 | 8-729-808-42 | TRANSISTOR | 2SD1624-T-TD |
| JR058 | 1-216-295-91 | SHORT | 0 | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | | | |
| JR059 | 1-216-296-91 | SHORT | 0 | Q162 | 8-729-808-42 | TRANSISTOR | 2SD1624-T-TD |
| JR060 | 1-216-296-91 | SHORT | 0 | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | | | |
| JR061 | 1-216-295-91 | SHORT | 0 | Q201 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR062 | 1-216-295-91 | SHORT | 0 | (S735D) | | | |
| JR063 | 1-216-296-91 | SHORT | 0 | Q202 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR064 | 1-216-296-91 | SHORT | 0 | (S735D) | | | |
| JR065 | 1-216-296-91 | SHORT | 0 | Q203 | 8-729-023-22 | TRANSISTOR | 2SD2114KT146 |
| JR066 | 1-216-296-91 | SHORT | 0 | (S335/S336/S345) | | | |
| JR067 | 1-216-296-91 | SHORT | 0 | Q203 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR068 | 1-216-296-91 | SHORT | 0 | (S535D/S735D) | | | |
| JR069 | 1-216-296-91 | SHORT | 0 | Q204 | 8-729-023-22 | TRANSISTOR | 2SD2114KT146 |
| JR070 | 1-216-296-91 | SHORT | 0 | (S335/S336/S345) | | | |
| JR071 | 1-216-295-91 | SHORT | 0 | Q204 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR072 | 1-216-296-91 | SHORT | 0 | (S535D/S735D) | | | |
| JR073 | 1-216-295-91 | SHORT | 0 | Q205 | 8-729-421-19 | TRANSISTOR | UN2213-TX |
| (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | | | | Q206 | 8-729-027-53 | TRANSISTOR | DTC124TKA-T146 |
| JR074 | 1-216-296-91 | SHORT | 0 | Q207 | 8-729-216-22 | TRANSISTOR | 2SB709A-QRS-TX |
| JR075 | 1-216-295-91 | SHORT | 0 | Q208 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG-TE85L |
| JR076 | 1-216-295-91 | SHORT | 0 | (S535D/S735D) | | | |
| JR077 | 1-216-296-91 | SHORT | 0 | Q209 | 8-729-421-19 | TRANSISTOR | UN2213-TX (S535D/S735D) |
| JR078 | 1-216-296-91 | SHORT | 0 | Q210 | 8-729-424-18 | TRANSISTOR | UN2113-TX (S735D) |
| JR079 | 1-216-296-91 | SHORT | 0 (S535D/S735D) | Q211 | 8-729-027-53 | TRANSISTOR | DTC124TKA-T146 |
| JR080 | 1-216-295-91 | SHORT | 0 | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D) | | | |
| JR081 | 1-216-296-91 | SHORT | 0 | Q212 | 8-729-216-22 | TRANSISTOR | 2SB709A-QRS-TX |
| (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D) | | | |
| JR082 | 1-216-296-91 | SHORT | 0 (S335/S336/S345) | Q213 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR083 | 1-216-296-91 | SHORT | 0 | (S535D/S735D) | | | |
| JR084 | 1-216-296-91 | SHORT | 0 (S535D/S735D) | Q214 | 8-729-046-97 | TRANSISTOR | 2SD1938 (F)-T (TX).S0 |
| JR085 | 1-216-296-91 | SHORT | 0 | (S535D/S735D) | | | |
| JR086 | 1-216-295-91 | SHORT | 0 | | | | |
| JR087 | 1-216-295-91 | SHORT | 0 | | | | |
| JR088 | 1-216-296-91 | SHORT | 0 | | | | |
| JR089 | 1-216-296-91 | SHORT | 0 | | | | |

  The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

AI-17

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| Q215 | 8-729-424-18 | TRANSISTOR UN2113-TX (S535D/S735D) | |
| Q220 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q221 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q301 | 8-729-421-19 | TRANSISTOR UN2213-TX (S535D/S735D) | |
| Q302 | 8-729-027-53 | TRANSISTOR DTC124TKA-T146 | |
| Q303 | 8-729-216-22 | TRANSISTOR 2SB709A-QRS-TX | |
| Q304 | 8-729-023-22 | TRANSISTOR 2SD2114KT146 (S335/S336/S345) | |
| Q304 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q305 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q306 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q307 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q308 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q309 | 8-729-046-97 | TRANSISTOR 2SD1938 (F)-T (TX).SO (S535D/S735D) | |
| Q311 | 8-729-230-72 | TRANSISTOR 2SA1362-YG-EL | |
| Q312 | 8-729-230-49 | TRANSISTOR 2SC2712-YG-TE85L (S735D) | |
| Q313 | 8-729-230-49 | TRANSISTOR 2SC2712-YG-TE85L | |
| Q314 | 8-729-216-22 | TRANSISTOR 2SA1162-YG-TE85L (S735D) | |
| Q401 | 8-729-808-42 | TRANSISTOR 2SD1624-T-TD | |
| Q402 | 8-729-808-42 | TRANSISTOR 2SD1624-T-TD | |

< RESISTOR >

| | | | | | |
|------|--------------|------------|-----|--|-------|
| R101 | 1-216-296-91 | SHORT | 0 | | |
| R109 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R110 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R111 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R112 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345/S735D) | |
| | | | | (S335: E, EA/S336: AUS/S345/S735D) | |
| R113 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345/S735D) | |
| R114 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345/S735D: E, EA, AUS) | |
| R114 | 1-216-295-91 | SHORT | 0 | | |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| R115 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R116 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R117 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R118 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R119 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R122 | 1-216-295-91 | SHORT | 0 | | |
| | | | | (S335: E, EA/S336: AUS/S345/S735D: E, EA, AUS) | |
| R126 | 1-216-295-91 | SHORT | 0 | | |
| R127 | 1-216-295-91 | SHORT | 0 | | |
| R128 | 1-216-295-91 | SHORT | 0 | | |
| R145 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| R147 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R148 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R149 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R150 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R151 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |

| | | | | | |
|------|--------------|------------|------|--|-------|
| R152 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R165 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| R166 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| R167 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D: AEP, UK, RU) | |
| R201 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | |
| R204 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W |
| R205 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W |
| R206 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W |
| R210 | 1-216-295-91 | SHORT | 0 | | |
| R211 | 1-216-295-91 | SHORT | 0 | (S535D/S735D) | |
| R212 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| | | | | (S735D) | |
| R213 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R229 | 1-216-673-11 | METAL CHIP | 8.2K | 0.5% | 1/10W |
| R230 | 1-208-806-11 | RES, CHIP | 10K | 2% | 1/10W |
| R231 | 1-216-053-00 | METAL CHIP | 1.5K | 5% | 1/10W |
| R232 | 1-208-806-11 | RES, CHIP | 10K | 2% | 1/10W |
| R233 | 1-216-053-00 | METAL CHIP | 1.5K | 5% | 1/10W |
| R234 | 1-216-673-11 | METAL CHIP | 8.2K | 0.5% | 1/10W |
| R235 | 1-208-806-11 | RES, CHIP | 10K | 2% | 1/10W |
| R236 | 1-216-053-00 | METAL CHIP | 1.5K | 5% | 1/10W |
| R237 | 1-216-053-00 | METAL CHIP | 1.5K | 5% | 1/10W |
| R238 | 1-208-806-11 | RES, CHIP | 10K | 2% | 1/10W |
| R239 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W |
| | | | | (S735D) | |
| R240 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W |
| | | | | (S735D) | |
| R241 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W |
| | | | | (S735D) | |
| R242 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W |
| | | | | (S735D) | |
| R243 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R244 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R245 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R246 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R247 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R248 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345) | |
| R251 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W |
| R252 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345/S735D: E, EA, AUS) | |
| R253 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R254 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| | | | | (S335: E, EA/S336: AUS/S345/S735D: E, EA, AUS) | |
| R255 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R256 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R257 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R258 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R259 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| | | | | (S335: AEP, UK, RU/S336: AEP, UK/S535D/S735D) | |
| R260 | 1-216-673-11 | METAL CHIP | 8.2K | 0.5% | 1/10W |
| R263 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W |
| | | | | (S535D/S735D) | |

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-------------|--------|---------------|--|--------------|--------------|-------------|------------------|------------------------|---------------------------|
| R264 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R307 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R266 | 1-216-295-91 | SHORT | 0 | (S535D/S735D) | R311 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S535D/S735D) | |
| R267 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W (S535D/S735D) | R312 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W (S535D/S735D) |
| R268 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D/S735D) | R313 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S535D/S735D) |
| R269 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R314 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W (S535D/S735D) |
| R270 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W | R316 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D/S735D) |
| R271 | 1-216-673-11 | METAL CHIP | 8.2K | 0.5% | 1/10W | R318 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D/S735D) |
| R276 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R321 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345/S535D) | |
| R277 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D) | R323 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D/S735D) |
| R278 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D) | R324 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R279 | 1-216-009-91 | RES, CHIP | 22 | 5% | 1/10W (EXCEPT S735D) | R325 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R279 | 1-216-295-91 | SHORT | 0 | (S735D) | R326 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | |
| R280 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D) | R327 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) |
| R281 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | R328 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) |
| R282 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R329 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) |
| R283 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W (S535D/S735D) | R330 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) |
| R284 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D) | R331 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) |
| R284 | 1-216-077-91 | RES, CHIP | 15K | 5% | 1/10W (S735D) | R332 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) |
| R285 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R333 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) |
| R286 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W (S535D) | R334 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W (S535D/S735D) |
| R286 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W (S735D) | R335 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W (S535D/S735D) |
| R287 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R336 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W (S535D/S735D) |
| R288 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W (S535D/S735D) | R336 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S335/S336/S345) |
| R289 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S535D) | R337 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W (S535D/S735D) |
| R289 | 1-216-077-91 | RES, CHIP | 15K | 5% | 1/10W (S735D) | R337 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S335/S336/S345) |
| R290 | 1-216-085-00 | METAL CHIP | 33K | 5% | 1/10W (S535D/S735D) | R338 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) |
| R291 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W (S535D) | R339 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) |
| R291 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W (S735D) | R340 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W |
| R295 | 1-216-295-91 | SHORT | 0 | (S535D/S735D) | R341 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) | |
| R297 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W (S535D/S735D) | R342 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) |
| R301 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W (S335/S336/S345/S535D) | R343 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) |
| R302 | 1-216-295-91 | SHORT | 0 | (S535D/S735D) | R343 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | |
| R303 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | R344 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) |
| R304 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W (S535D/S735D) | R345 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) |
| R306 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S535D/S735D) | R347 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) |

AI-17

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | | |
|----------|--------------|-------------|--------|------------------|------------------------|----------|--------------|--------------|------------|------|---------------------------|---------------------------------|
| R348 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R389 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W (S735D) | |
| R349 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R391 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | |
| R350 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R392 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W | |
| R351 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R393 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W (S735D) | |
| R351 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | | R394 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W (S335/S336/S345/S535D) |
| R353 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W | R395 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W (S535D/S735D) | |
| R354 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R396 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W (S535D/S735D) | |
| R355 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) | R401 | 1-216-017-91 | RES, CHIP | 47 | 5% | 1/10W (S335/S336/S345) | |
| R356 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R402 | 1-216-101-00 | METAL CHIP | 150K | 5% | 1/10W (S335/S336/S345) | |
| R357 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) | R403 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S335/S336/S345) | |
| R358 | 1-216-055-00 | METAL CHIP | 1.8K | 5% | 1/10W (S535D/S735D) | R405 | 1-216-295-91 | SHORT | 0 | | | |
| R358 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | | R407 | 1-216-059-00 | METAL CHIP | 2.7K | 5% | 1/10W |
| R359 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W | R408 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W (S735D) | |
| R360 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W (S535D/S735D) | R409 | 1-216-295-91 | SHORT | 0 | | | |
| R361 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) | R410 | 1-216-071-00 | METAL CHIP | 8.2K | 5% | 1/10W | |
| | | | | | | R411 | 1-216-071-00 | METAL CHIP | 8.2K | 5% | 1/10W | |
| | | | | | | R412 | 1-216-295-91 | SHORT | 0 | | | |
| R362 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W (S535D/S735D) | R413 | 1-216-013-00 | METAL CHIP | 33 | 5% | 1/10W | |
| R362 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | | R414 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W |
| R363 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | R415 | 1-216-295-91 | SHORT | 0 | | | |
| R364 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | R416 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W | |
| R365 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S535D/S735D) | R417 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | |
| R366 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W (S535D/S735D) | R418 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| R371 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | R420 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W | |
| R372 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | R421 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W | |
| R373 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W | R422 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S735D) | |
| R374 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W (S535D/S735D) | R423 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S735D) | |
| | | | | | | R424 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W | |
| R375 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W | R426 | 1-216-059-00 | METAL CHIP | 2.7K | 5% | 1/10W | |
| R376 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W (S535D/S735D) | R427 | 1-216-059-00 | METAL CHIP | 2.7K | 5% | 1/10W | |
| R377 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W (S535D/S735D) | R428 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W (S735D) | |
| R378 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W (S535D/S735D) | R429 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W (S735D) | |
| R379 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W (S535D/S735D) | | | | | | | |
| R380 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W (S535D/S735D) | R432 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| R381 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W | R434 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| R382 | 1-216-295-91 | SHORT | 0 | | | R435 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| R384 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W | R436 | 1-216-295-91 | SHORT | 0 | | | |
| R385 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W | R438 | 1-216-295-91 | SHORT | 0 | | | |
| R386 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W | R439 | 1-216-015-00 | METAL CHIP | 39 | 5% | 1/10W | |
| R387 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W (S735D) | R443 | 1-216-027-00 | METAL CHIP | 120 | 5% | 1/10W (S735D) | |
| R388 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (S735D) | R444 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W | |
| | | | | | | R449 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | |
| | | | | | | R450 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W | |
| | | | | | | R451 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| | | | | | | R452 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| | | | | | | R453 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| | | | | | | R454 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| | | | | | | R455 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |
| | | | | | | R456 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | |

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-------------|--------|------------------|-------|----------|--------------|---------------------------------------|------------------|---------------------|-----------------------------------|
| R457 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R579 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W |
| R458 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | | | | | | (S535D/S735D) |
| R459 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | R580 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W |
| R460 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | | | | | | (S535D/S735D) |
| R461 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | R582 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| R462 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | R583 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| R463 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | R584 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| R464 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W | R585 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| R465 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R586 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| | | | | | | R587 | 1-414-766-22 | INDUCTOR CHIP | 0uH | (S535D/S735D) | |
| R466 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R606 | 1-216-295-91 | SHORT | 0 | | |
| R469 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R607 | 1-216-295-91 | SHORT | 0 | | |
| R470 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W | R608 | 1-216-295-91 | SHORT | 0 | | |
| R472 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W | R611 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | |
| | | | | | | R612 | 1-216-295-91 | SHORT | 0 | (S535D) | |
| R473 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W | R613 | 1-216-295-91 | SHORT | 0 | (S735D) | |
| | | | | | | | | | | | |
| R473 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W | R615 | 1-216-295-91 | SHORT | 0 | | |
| | | | | | | | | | | | (S335: E, EA/S336: AUS/S345/ |
| R475 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | | | | | | S535D/S735D: AEP, UK, RU) |
| R476 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | R616 | 1-216-295-91 | SHORT | 0 | (S735D: E, EA, AUS) | |
| R477 | 1-216-295-91 | SHORT | 0 | | | R617 | 1-216-295-91 | SHORT | 0 | | |
| R478 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | | | | | | (S335: AEP, UK, RU/S336: AEP, UK) |
| | | | | | | | | | | | |
| R479 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | | | | | | < SWITCH > |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| R480 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | S401 | 1-771-574-21 | SWITCH, TACTILE (DVE) | (S535D/S735D) | | |
| R481 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | S402 | 1-771-574-21 | SWITCH, TACTILE (JOG) | (S735D) | | |
| R482 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | S403 | 1-771-574-21 | SWITCH, TACTILE (VES) | (S335/S336/S345) | | |
| | | | | | | S403 | 1-771-574-21 | SWITCH, TACTILE (VIRTUAL 3D SURROUND) | | | |
| R483 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | | | | | | (S535D/S735D) |
| R484 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | S404 | 1-771-574-21 | SWITCH, TACTILE (PREV ◀◀) | (S535D) | | |
| | | | | | | | | | | | |
| R485 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W | S405 | 1-771-574-21 | SWITCH, TACTILE (RETURN) | | | |
| R487 | 1-216-027-00 | METAL CHIP | 120 | 5% | 1/10W | S407 | 1-771-574-21 | SWITCH, TACTILE (NEXT ▶▶) | (S535D) | | |
| R489 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | S408 | 1-771-574-21 | SWITCH, TACTILE (DISPLAY) | | | |
| R490 | 1-216-059-00 | METAL CHIP | 2.7K | 5% | 1/10W | S410 | 1-771-574-21 | SWITCH, TACTILE (DVD MENU) | | | |
| R491 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W | S411 | 1-771-574-21 | SWITCH, TACTILE (■) | | | |
| R492 | 1-216-071-00 | METAL CHIP | 8.2K | 5% | 1/10W | S413 | 1-771-574-21 | SWITCH, TACTILE (TITLE) | | | |
| R493 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W | S414 | 1-771-574-21 | SWITCH, TACTILE (■) | | | |
| R494 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | S415 | 1-771-574-21 | SWITCH, TACTILE (▷) | | | |
| R495 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | S416 | 1-771-574-21 | SWITCH, TACTILE (OPEN/CLOSE ☰) | (S535D) | | |
| R496 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | S417 | 1-771-574-21 | SWITCH, TACTILE (OPEN/CLOSE ☰) | | | |
| | | | | | | | | | | | (S335/S336/S345/S735D) |
| R497 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | S418 | 1-771-574-21 | SWITCH, TACTILE (PREV ◀◀) | | | |
| R498 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | | | | | | (S335/S336/S345/S735D) |
| R499 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | S419 | 1-771-574-21 | SWITCH, TACTILE (NEXT ▶▶) | | | |
| R557 | 1-216-295-91 | SHORT | 0 | (S335/S336/S345) | | | | | | | (S335/S336/S345/S735D) |
| R569 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | | | | | | < TRANSFORMER > |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| R571 | 1-216-097-91 | RES, CHIP | 100K | 5% | 1/10W | T160 | 1-435-411-11 | TRANSFORMER, DC-DC CONVERTER | | | |
| | | | | | | | | | | | (S335: AEP, UK, RU/S336: AEP, UK/ |
| R572 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W | | | | | | S535D/S735D: AEP, UK, RU) |
| | | | | | | T401 | 1-435-411-11 | TRANSFORMER, DC-DC CONVERTER | | | |
| | | | | | | | | | | | < VIBRATOR > |
| R573 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W | | | | | | |
| | | | | | | | | | | | |
| R574 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W | X401 | 1-781-853-21 | VIBRATOR, CERAMIC (2MHz) | | | |
| | | | | | | | | | | | |
| R575 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W | | | | | | |
| | | | | | | | | | | | |
| R576 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W | | | | | | |
| | | | | | | | | | | | (S535D/S735D) |

ER-9

| Ref. No. | Part No. | Description | Remark | | | | Ref. No. | Part No. | Description | Remark | | | |
|------------------|--------------|---|--------|-----|------|--|----------------|--------------|----------------------|----------------|----|-------|--|
| * | A-6065-444-A | ER-9 BOARD, COMPLETE (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) ***** (Ref.No. 2,000 Series) | | | | | D921 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | |
| < CAPACITOR > | | | | | | | D922 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | |
| C902 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | D923 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | |
| C906 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | D924 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | |
| C907 | 1-126-204-11 | ELECT CHIP | 47uF | 20% | 16V | | D926 | 8-719-056-82 | DIODE UDZ-TE-17-6.2B | | | | |
| C908 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | D927 | 8-719-977-40 | DIODE UDZ-TE-17-13B | | | | |
| C909 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | D929 | 8-719-056-82 | DIODE UDZ-TE-17-6.2B | | | | |
| < FERRITE BEAD > | | | | | | | D930 | 8-719-977-40 | DIODE UDZ-TE-17-13B | | | | |
| C910 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | D931 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | |
| C911 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB901 | 1-414-553-11 | FERRITE | 0uH | | | |
| C912 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | FB902 | 1-414-553-11 | FERRITE | 0uH | | | |
| C913 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB903 | 1-414-553-11 | FERRITE | 0uH | | | |
| C914 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB904 | 1-414-553-11 | FERRITE | 0uH | | | |
| C920 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB905 | 1-414-553-11 | FERRITE | 0uH | | | |
| C921 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | FB906 | 1-414-553-11 | FERRITE | 0uH | | | |
| C922 | 1-126-395-11 | ELECT CHIP | 22uF | 20% | 16V | | FB907 | 1-414-553-11 | FERRITE | 0uH | | | |
| C923 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB908 | 1-414-553-11 | FERRITE | 0uH | | | |
| C924 | 1-128-390-11 | ELECT CHIP | 220uF | 20% | 6.3V | | FB909 | 1-414-553-11 | FERRITE | 0uH | | | |
| C925 | 1-128-390-11 | ELECT CHIP | 220uF | 20% | 6.3V | | FB910 | 1-414-553-11 | FERRITE | 0uH | | | |
| C927 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | FB911 | 1-414-553-11 | FERRITE | 0uH | | | |
| C938 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB912 | 1-414-553-11 | FERRITE | 0uH | | | |
| C939 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB913 | 1-414-553-11 | FERRITE | 0uH | | | |
| C940 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB914 | 1-414-553-11 | FERRITE | 0uH | | | |
| C941 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB915 | 1-414-553-11 | FERRITE | 0uH | | | |
| C942 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB916 | 1-414-553-11 | FERRITE | 0uH | | | |
| C943 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB917 | 1-414-553-11 | FERRITE | 0uH | | | |
| C944 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | FB918 | 1-414-553-11 | FERRITE | 0uH | | | |
| C945 | 1-163-133-00 | CERAMIC CHIP | 470PF | 5% | 50V | | < IC > | | | | | | |
| C950 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | | IC901 | 8-759-663-94 | IC LA7106M-TLM | | | | |
| C951 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | | IC902 | 8-759-446-66 | IC MM1113XFBE | | | | |
| C962 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | | IC903 | 8-759-567-33 | IC MM1225XFBE | | | | |
| C963 | 1-163-251-11 | CERAMIC CHIP | 100PF | 5% | 50V | | < COIL > | | | | | | |
| C972 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V | | L904 | 1-412-064-11 | INDUCTOR CHIP | 100uH | | | |
| < CONNECTOR > | | | | | | | < TRANSISTOR > | | | | | | |
| CN901 | 1-794-236-11 | CONNECTOR, FFC/FPC 15P | | | | | Q901 | 8-729-421-19 | TRANSISTOR | UN2213-TX | | | |
| CN902 | 1-794-235-11 | CONNECTOR, FFC/FPC 11P | | | | | Q902 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| CNJ901 | 1-251-780-11 | SOCKET, PIN (21P) (EURO AV2) | | | | | Q903 | 8-729-424-08 | TRANSISTOR | UN2111-TX | | | |
| CNJ902 | 1-251-780-11 | SOCKET, PIN (21P) (EURO AV1 (RGB) -TV) | | | | | Q904 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| < DIODE > | | | | | | | Q906 | 8-729-421-19 | TRANSISTOR | UN2213-TX | | | |
| D901 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q907 | 8-729-424-08 | TRANSISTOR | UN2111-TX | | | |
| D902 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q908 | 8-729-421-22 | TRANSISTOR | UN2211-TX | | | |
| D903 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q909 | 8-729-421-19 | TRANSISTOR | UN2213-TX | | | |
| D904 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q910 | 8-729-424-08 | TRANSISTOR | UN2111-TX | | | |
| D905 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q911 | 8-729-421-19 | TRANSISTOR | UN2213-TX | | | |
| D906 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q912 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| D907 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q913 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| D908 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | Q914 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| D909 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q915 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| D910 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q916 | 8-729-422-27 | TRANSISTOR | 2SD601A-QRS-TX | | | |
| D911 | 8-719-988-61 | DIODE 1SS355TE-17 | | | | | Q917 | 8-729-421-19 | TRANSISTOR | UN2213-TX | | | |
| D915 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | < RESISTOR > | | | | | | |
| D917 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | R902 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | |
| D918 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | R904 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | |
| D919 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | R906 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | |
| D920 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | | | | | | | | | |

| Ref. No. | Part No. | Description | Remark | | |
|---------------|--------------|--------------------------------|----------|-----|-------|
| R907 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R908 | 1-216-105-91 | RES, CHIP | 220K | 5% | 1/10W |
| R909 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W |
| R910 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W |
| R911 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W |
| R912 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W |
| R913 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R914 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R915 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W |
| R916 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R917 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R918 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R920 | 1-216-049-91 | RES, CHIP | 1K | 5% | 1/10W |
| R921 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R922 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R923 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R924 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R925 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R926 | 1-216-041-00 | METAL CHIP | 470 | 5% | 1/10W |
| R927 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R928 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R929 | 1-216-021-00 | METAL CHIP | 68 | 5% | 1/10W |
| R930 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R931 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R932 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R933 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R934 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W |
| R938 | 1-216-025-91 | RES, CHIP | 100 | 5% | 1/10W |
| R939 | 1-216-017-91 | RES, CHIP | 47 | 5% | 1/10W |
| R944 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R950 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R951 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| < RELAY > | | | | | |
| RY901 | 1-755-184-11 | RELAY | | | |
| RY902 | 1-755-184-11 | RELAY | | | |
| RY903 | 1-755-184-11 | RELAY | | | |
| RY904 | 1-755-184-11 | RELAY | | | |
| RY905 | 1-755-184-11 | RELAY | | | |
| RY906 | 1-755-184-11 | RELAY | | | |
| < CAPACITOR > | | | | | |
| C501 | 1-163-019-00 | CERAMIC CHIP | 0.0068uF | 10% | 50V |
| C502 | 1-163-019-00 | CERAMIC CHIP | 0.0068uF | 10% | 50V |
| C503 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| C504 | 1-104-664-11 | ELECT | 47uF | 20% | 16V |
| < CONNECTOR > | | | | | |
| CN501 | 1-784-642-21 | CONNECTOR, BOARD TO BOARD 11P | | | |
| < DIODE > | | | | | |
| D502 | 8-719-066-39 | DIODE EB3804X-TP-J300K (MULTI) | | | |

| Ref. No. | Part No. | Description | Remark | | |
|-------------------------------|--------------|---|--------|-----|---------------|
| D503 | 8-719-056-06 | DIODE SLR-342DCT32 (HP-V) (S735D) | | | |
| D504 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | |
| D506 | 8-719-071-15 | DIODE HZM6.8ZWA1TL | | | |
| D507 | 8-719-800-76 | DIODE MA153-TX | | | |
| < IC > | | | | | |
| IC501 | 8-719-066-43 | DIODE GP1U28Y | | | |
| < JACK > | | | | | |
| J501 | 1-785-505-31 | JACK, LARGE TYPE (PHONES) (S535D) | | | |
| J501 | 1-785-505-41 | JACK, LARGE TYPE (PHONES) (S735D) | | | |
| < RESISTOR > | | | | | |
| R502 | 1-216-027-00 | METAL CHIP | 120 | 5% | 1/10W |
| R503 | 1-216-037-00 | METAL CHIP | 330 | 5% | 1/10W (S735D) |
| R506 | 1-216-071-00 | METAL CHIP | 8.2K | 5% | 1/10W |
| R507 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R508 | 1-216-063-91 | RES, CHIP | 3.9K | 5% | 1/10W |
| R509 | 1-414-233-22 | INDUCTOR CHIP | 0uH | | |
| R510 | 1-414-233-22 | INDUCTOR CHIP | 0uH | | |
| R511 | 1-216-295-91 | SHORT | 0 | | |
| R513 | 1-216-101-00 | METAL CHIP | 150K | 5% | 1/10W |
| R514 | 1-216-017-91 | RES, CHIP | 47 | 5% | 1/10W |
| R515 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W |
| R518 | 1-163-021-91 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| < VARIABLE RESISTOR > | | | | | |
| RV501 | 1-227-186-11 | RES, VAR, CARBON 500/500 (LEVEL) | | | |
| < SWITCH > | | | | | |
| S501 | 1-771-574-21 | SWITCH, TACTILE (HP-V) (S735D) | | | |
| S502 | 1-771-574-21 | SWITCH, TACTILE (SHUFFLE) | | | |
| S503 | 1-771-574-21 | SWITCH, TACTILE (REPEAT) | | | |
| < BOARD > | | | | | |
| * | A-6065-443-A | MB-86 BOARD, COMPLETE (S335: AEP50, UK/S336: AEP06, UK) | | | |
| * | A-6065-445-A | MB-86 BOARD, COMPLETE (S335: AEP51/S336: AEP08) | | | |
| * | A-6065-446-A | MB-86 BOARD, COMPLETE (S335: RU) | | | |
| * | A-6065-448-A | MB-86 BOARD, COMPLETE (S345) | | | |
| * | A-6065-449-A | MB-86 BOARD, COMPLETE (S335: E, EA) | | | |
| * | A-6065-450-A | MB-86 BOARD, COMPLETE (S336: AUS) | | | |
| * | A-6065-452-A | MB-86 BOARD, COMPLETE (S335D: AEP52) | | | |
| * | A-6065-454-A | MB-86 BOARD, COMPLETE (S535D: AEP53, UK) | | | |
| * | A-6065-478-A | MB-86 BOARD, COMPLETE (S735D: AEP51, UK) | | | |
| * | A-6065-479-A | MB-86 BOARD, COMPLETE (S735D: AEP50) | | | |
| * | A-6065-480-A | MB-86 BOARD, COMPLETE (S735D: RU) | | | |
| * | A-6065-484-A | MB-86 BOARD, COMPLETE (S735D: E) | | | |
| * | A-6065-485-A | MB-86 BOARD, COMPLETE (S735D: E) | | | |
| * | A-6065-486-A | MB-86 BOARD, COMPLETE (S735D: AUS) | | | |
| ***** (Ref.No. 1, 010 Series) | | | | | |
| < CAPACITOR > | | | | | |
| C101 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C102 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C103 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C104 | 1-126-209-11 | ELECT CHIP | 100uF | 20% | 4V |

MB-86

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|--------------|----------|-------|-----|----------|--------------|--------------|----------|-----|------|
| C105 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C308 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C106 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C309 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C107 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C310 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C108 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C311 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C109 | 1-162-916-11 | CERAMIC CHIP | 12PF | 5% | 50V | C312 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C110 | 1-162-916-11 | CERAMIC CHIP | 12PF | 5% | 50V | C313 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C111 | 1-126-209-11 | ELECT CHIP | 100uF | 20% | 4V | C314 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C112 | 1-162-915-11 | CERAMIC CHIP | 10PF | 0.5PF | 50V | C315 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C114 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C316 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C115 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C317 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C116 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C318 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C117 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C319 | 1-126-206-11 | ELECT CHIP | 100uF | 20% | 6.3V |
| C118 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C320 | 1-126-206-11 | ELECT CHIP | 100uF | 20% | 6.3V |
| C119 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C321 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C120 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C322 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C201 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C324 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C202 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | C325 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C203 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | C326 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C204 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | C327 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C205 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | C328 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C206 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C329 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C207 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C330 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C208 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V | C331 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C209 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V | C332 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C210 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V | C401 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C211 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V | C405 | 1-126-204-11 | ELECT CHIP | 47uF | 20% | 16V |
| C212 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C407 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C213 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C408 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C214 | 1-164-172-11 | CERAMIC CHIP | 0.0056uF | 10% | 25V | C409 | 1-164-315-11 | CERAMIC CHIP | 470PF | 5% | 50V |
| C215 | 1-164-739-11 | CERAMIC CHIP | 560PF | 5% | 50V | C410 | 1-162-921-11 | CERAMIC CHIP | 33PF | 5% | 50V |
| C216 | 1-164-172-11 | CERAMIC CHIP | 0.0056uF | 10% | 25V | C411 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C217 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C412 | 1-110-563-11 | CERAMIC CHIP | 0.068uF | 10% | 16V |
| C218 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C413 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C219 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C414 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C221 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V | C415 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C222 | 1-164-730-11 | CERAMIC CHIP | 0.0012uF | 10% | 50V | C416 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C223 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V | C417 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C224 | 1-162-964-11 | CERAMIC CHIP | 0.001uF | 10% | 50V | C418 | 1-162-921-11 | CERAMIC CHIP | 33PF | 5% | 50V |
| C225 | 1-164-217-11 | CERAMIC CHIP | 150PF | 5% | 50V | C419 | 1-110-563-11 | CERAMIC CHIP | 0.068uF | 10% | 16V |
| C226 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C420 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C227 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | C421 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C228 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C422 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C229 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C423 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V |
| C230 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C424 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C231 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C425 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C232 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C426 | 1-164-315-11 | CERAMIC CHIP | 470PF | 5% | 50V |
| C233 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C427 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C234 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C428 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V |
| C235 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V | C429 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V |
| C236 | 1-164-739-11 | CERAMIC CHIP | 560PF | 5% | 50V | C430 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C237 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C431 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C238 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C433 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C239 | 1-162-969-11 | CERAMIC CHIP | 0.0068uF | 10% | 25V | C434 | 1-164-315-11 | CERAMIC CHIP | 470PF | 5% | 50V |
| C301 | 1-110-563-11 | CERAMIC CHIP | 0.068uF | 10% | 16V | C435 | 1-164-315-11 | CERAMIC CHIP | 470PF | 5% | 50V |
| C302 | 1-126-209-11 | ELECT CHIP | 100uF | 20% | 4V | C436 | 1-164-677-11 | CERAMIC CHIP | 0.033uF | 10% | 16V |
| C303 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C437 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C304 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C438 | 1-164-677-11 | CERAMIC CHIP | 0.033uF | 10% | 16V |
| C305 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V | C439 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C306 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C440 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C307 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C441 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|--------------|----------|-----|------|----------|--------------|--------------|--------|-----|----------------------|
| C442 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V | C540 | 1-126-193-11 | ELECT CHIP | 1uF | 20% | 50V |
| C443 | 1-165-176-11 | CERAMIC CHIP | 0.047uF | 10% | 16V | C541 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C444 | 1-126-205-11 | ELECT CHIP | 47uF | 20% | 6.3V | C542 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C445 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C601 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C446 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C602 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C447 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C603 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C448 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V | C604 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C449 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V | C701 | 1-126-209-11 | ELECT CHIP | 100uF | 20% | 4V (S535D/S735D) |
| C450 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V | C702 | 1-126-209-11 | ELECT CHIP | 100uF | 20% | 4V (S535D/S735D) |
| C451 | 1-126-204-11 | ELECT CHIP | 47uF | 20% | 16V | C703 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C452 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C704 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C453 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C705 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C454 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C706 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C455 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C707 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C456 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C708 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C457 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V | C709 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C458 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C710 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C459 | 1-162-964-11 | CERAMIC CHIP | 0.001uF | 10% | 50V | C711 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C460 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C712 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C462 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C713 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C463 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C714 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C465 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C715 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C466 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | C716 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C501 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C717 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C502 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C718 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C503 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C719 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C504 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C720 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C505 | 1-126-206-11 | ELECT CHIP | 100uF | 20% | 6.3V | C721 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C506 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C722 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C507 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C723 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S535D/S735D) |
| C508 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C801 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S735D) |
| C509 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C802 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S735D) |
| C510 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V | C803 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S735D) |
| C511 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | C804 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V (S735D) |
| C512 | 1-126-206-11 | ELECT CHIP | 100uF | 20% | 6.3V | | | | | | |
| C513 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C514 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C515 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C516 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C517 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C518 | 1-107-826-91 | CERAMIC CHIP | 0.1uF | 10% | 16V | | | | | | |
| C519 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C520 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C521 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C522 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C523 | 1-126-246-11 | ELECT CHIP | 220uF | 20% | 4V | | | | | | |
| C524 | 1-126-204-11 | ELECT CHIP | 47uF | 20% | 16V | | | | | | |
| C525 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C528 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C529 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C530 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C531 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C532 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C533 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C534 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C535 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C536 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C537 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C538 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |
| C539 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V | | | | | | |

MB-86

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------------------|-------------|----------|--------------|--|--------|
| C805 | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% | 25V (S735D) | FL507 | 1-233-893-21 | FILTER, CHIP EMI | |
| C806 | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% | 25V (S735D) | FL508 | 1-234-177-21 | FILTER, CHIP EMI | |
| | | | | FL601 | 1-234-177-21 | FILTER, CHIP EMI (S535D/S735D) | |
| | | | | FL801 | 1-234-177-21 | FILTER, CHIP EMI (S735D) | |
| | | < CONNECTOR > | | | | < IC > | |
| * CN102 | 1-764-250-11 | PIN, CONNECTOR (PC BOARD) 4P | | IC101 | 8-759-667-20 | IC BR9080F-E2 (S335/S336/S345) | |
| CN201 | 1-764-530-21 | CONNECTOR, FFC/FPC (ZIF) 23P | | IC101 | 8-759-667-21 | IC BR9160F-E2 (S535D) | |
| CN202 | 1-566-529-11 | CONNECTOR, FPC (ZIF) 13P | | IC101 | 8-759-668-01 | IC BR9040F-D-E2 (S735D) | |
| CN401 | 1-794-234-11 | CONNECTOR, FFC/FPC 6P | | IC102 | 8-759-663-92 | IC MB91107PFV-G-BND | |
| CN402 | 1-779-993-11 | PIN, CONNECTOR (PWB) 5P | | IC103 | 8-759-427-92 | IC PST9126NL | |
| CN501 | 1-794-324-11 | CONNECTOR, BOARD TO BOARD 34P | | IC104 | 8-759-561-60 | IC MBM29LV160B-90PFTN (S335/S336/S345) | |
| CN701 | 1-794-324-11 | CONNECTOR, BOARD TO BOARD 34P | | IC104 | 8-759-594-13 | IC MBM29DL324BD-90PFTN (S535D/S735D) | |
| | | < DIODE > | | IC105 | 8-759-667-86 | IC CXD9572N-E2 | |
| D101 | 8-719-071-34 | DIODE RB521S-30-TE61 | | IC201 | 8-759-567-24 | IC SSI33P3722 | |
| D201 | 8-719-988-61 | DIODE 1SS355TE-17 | | IC301 | 8-759-486-55 | IC NJM2370U33-TE2 | |
| | | < FUSE > | | IC302 | 8-759-666-84 | IC CXD9576R | |
| △ F401 | 1-533-771-21 | FUSE (SMD) (0.8A) | | IC303 | 8-759-643-10 | IC GM71V18160CT-6TR | |
| △ F402 | 1-533-771-21 | FUSE (SMD) (0.8A) | | IC401 | 8-759-660-88 | IC LA6553-TE-L | |
| | | < FERRITE BEAD > | | IC402 | 8-759-660-88 | IC LA6553-TE-L | |
| FB102 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC403 | 8-759-338-78 | IC BA10324AFV-E2 | |
| FB103 | 1-414-226-21 | INDUCTOR CHIP 0uH (S535D/S735D) | | IC404 | 8-759-660-87 | IC CXD9569R | |
| FB104 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC502 | 8-752-399-55 | IC CXD1932Q | |
| FB105 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC503 | 8-759-486-55 | IC NJM2370U33-TE2 | |
| FB106 | 1-414-226-21 | INDUCTOR CHIP 0uH (S535D/S735D) | | IC504 | 8-759-573-19 | IC MT48LC1M16A1TG-7S | |
| FB107 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC505 | 8-759-573-19 | IC MT48LC1M16A1TG-7S | |
| FB109 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC506 | 8-759-669-28 | IC PQ1R18 | |
| FB110 | 1-414-226-21 | INDUCTOR CHIP 0uH | | IC601 | 8-759-663-93 | IC CXD9549R (S535D/S735D) | |
| FB111 | 1-414-226-21 | INDUCTOR CHIP 0uH (S535D/S735D) | | IC701 | 8-752-402-09 | IC CXD1939R (S535D/S735D) | |
| FB117 | 1-414-226-21 | INDUCTOR CHIP 0uH (S735D) | | IC801 | 8-759-670-52 | IC CXD9547Q-TE-B (S735D) | |
| FB501 | 1-469-324-21 | FERRITE 0uH | | IC802 | 8-759-641-58 | IC KM29W16000AT-T (S735D) | |
| FB502 | 1-469-324-21 | FERRITE 0uH | | | | < COIL > | |
| FB503 | 1-469-324-21 | FERRITE 0uH | | L201 | 1-412-031-11 | INDICATOR (CHIP) 47uH | |
| FB504 | 1-469-324-21 | FERRITE 0uH | | | | < TRANSISTOR > | |
| FB505 | 1-469-324-21 | FERRITE 0uH | | Q201 | 8-729-820-86 | TRANSISTOR 2SB1121-T-TD | |
| FB506 | 1-469-324-21 | FERRITE 0uH | | Q203 | 8-729-402-42 | TRANSISTOR UN5213-TX | |
| FB507 | 1-469-324-21 | FERRITE 0uH | | | | < RESISTOR > | |
| FB508 | 1-414-226-21 | INDUCTOR CHIP 0uH | | R002 | 1-216-801-11 | METAL CHIP 22 5% 1/16W | |
| FB509 | 1-414-226-21 | INDUCTOR CHIP 0uH (S535D/S735D) | | R009 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| | | < FILTER > | | R012 | 1-216-833-91 | RES, CHIP 10K 5% 1/16W | |
| FL101 | 1-234-177-21 | FILTER, CHIP EMI | | R013 | 1-216-833-91 | RES, CHIP 10K 5% 1/16W | |
| FL102 | 1-234-177-21 | FILTER, CHIP EMI | | R014 | 1-216-805-11 | METAL CHIP 47 5% 1/16W | |
| FL103 | 1-234-177-21 | FILTER, CHIP EMI | | R015 | 1-216-809-11 | METAL CHIP 100 5% 1/16W | |
| FL201 | 1-234-177-21 | FILTER, CHIP EMI | | R016 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| FL301 | 1-234-177-21 | FILTER, CHIP EMI | | R017 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| FL302 | 1-234-177-21 | FILTER, CHIP EMI | | R019 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | |
| FL303 | 1-234-177-21 | FILTER, CHIP EMI | | R020 | 1-216-295-91 | SHORT 0 | |
| FL402 | 1-234-177-21 | FILTER, CHIP EMI | | R021 | 1-216-296-91 | SHORT 0 | |
| FL501 | 1-234-177-21 | FILTER, CHIP EMI | | R041 | 1-216-797-11 | METAL CHIP 10 5% 1/16W | |
| FL502 | 1-234-177-21 | FILTER, CHIP EMI | | R042 | 1-216-797-11 | METAL CHIP 10 5% 1/16W | |
| FL503 | 1-234-177-21 | FILTER, CHIP EMI | | R101 | 1-216-833-91 | RES, CHIP 10K 5% 1/16W | |
| FL504 | 1-234-177-21 | FILTER, CHIP EMI | | R102 | 1-216-833-91 | RES, CHIP 10K 5% 1/16W | |
| FL505 | 1-234-177-21 | FILTER, CHIP EMI | | R104 | 1-216-801-11 | METAL CHIP 22 5% 1/16W | |
| FL506 | 1-234-177-21 | FILTER, CHIP EMI | | | | | |

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

| Ref. No. | Part No. | Description | Remark | | | Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|---|--------|----|-------|----------|--------------|-------------|--------|------|-------|
| R105 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | R188 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R114 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W | R190 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R118 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R191 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R120 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | | | | | | |
| R121 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W | R195 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W |
| R123 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W | R201 | 1-216-815-11 | METAL CHIP | 330 | 5% | 1/16W |
| R124 | 1-216-065-91 | RES, CHIP | 4.7K | 5% | 1/10W | R202 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| | | (S336: AUS/S735D: AUS) | | | | R203 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R124 | 1-216-071-00 | METAL CHIP | 8.2K | 5% | 1/10W | R204 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| | | (S335: E, EA/S735D: EA) | | | | R206 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| R124 | 1-216-076-00 | METAL CHIP | 13K | 5% | 1/10W | R207 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| | | (S345/S735D: E) | | | | R208 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R124 | 1-216-089-91 | RES, CHIP | 47K | 5% | 1/10W | R209 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| | | (S335: RU/S735D: RU) | | | | R210 | 1-216-820-11 | METAL CHIP | 820 | 5% | 1/16W |
| R124 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | R211 | 1-216-811-11 | METAL CHIP | 150 | 5% | 1/16W |
| | | (S335: AEP51/S336: AEP08/S535D: AEP52/S735D: AEP50) | | | | R214 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R124 | 1-216-099-00 | METAL CHIP | 120K | 5% | 1/10W | R215 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| | | (S335: AEP50, UK/S336: AEP06, UK/S535D: AEP53, UK/S735D: AEP51, UK) | | | | R217 | 1-216-861-11 | METAL CHIP | 2.2M | 5% | 1/16W |
| R125 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W | R222 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R126 | 1-216-105-91 | RES, CHIP | 220K | 5% | 1/10W | R223 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| | | (S735D) | | | | R224 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R126 | 1-216-113-00 | METAL CHIP | 470K | 5% | 1/10W | R225 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| | | (S535D) | | | | R301 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W |
| R127 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W | R302 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R128 | 1-216-093-91 | RES, CHIP | 68K | 5% | 1/10W | R303 | 1-218-883-11 | METAL CHIP | 33K | 0.5% | 1/16W |
| | | (S335: RU/S345/S735D: RU, E) | | | | R304 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R128 | 1-216-099-00 | METAL CHIP | 120K | 5% | 1/10W | R305 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| | | (S336: AUS/S735D: AUS) | | | | R306 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R128 | 1-216-113-00 | METAL CHIP | 470K | 5% | 1/10W | R307 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W |
| | | (S335: AEP, UK, E, EA/S336: AEP, UK/S535D/S735D: AEP, UK, EA) | | | | R309 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R129 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W | R310 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R130 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R311 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R131 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R313 | 1-218-855-11 | METAL CHIP | 2.2K | 0.5% | 1/16W |
| R136 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R314 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R138 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | R315 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/16W |
| R139 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | R316 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/16W |
| R140 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | R317 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R154 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W | R318 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R158 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | R319 | 1-218-853-11 | METAL CHIP | 1.8K | 0.5% | 1/16W |
| R159 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | R320 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R161 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R321 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R164 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | R327 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R166 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R338 | 1-216-801-11 | METAL CHIP | 22 | 5% | 1/16W |
| R167 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R401 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R168 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R402 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R169 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R403 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R170 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R404 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R171 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R405 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| | | (S335/S336/S345/S735D) | | | | R406 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R172 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R407 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R173 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R408 | 1-216-311-00 | METAL CHIP | 6.8 | 5% | 1/10W |
| R174 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R409 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R175 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R411 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R176 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R412 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R183 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R415 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R184 | 1-216-801-11 | METAL CHIP | 22 | 5% | 1/16W | R416 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W |
| R186 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W | R417 | 1-216-843-11 | METAL CHIP | 68K | 5% | 1/16W |
| | | (S535D/S735D) | | | | R418 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W |
| R187 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W | R419 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| | | (S535D/S735D) | | | | R420 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| | | | | | | R421 | 1-216-836-11 | METAL CHIP | 18K | 5% | 1/16W |

MB-86

| Ref. No. | Part No. | Description | | | Remark |
|----------|--------------|-------------|------|------|--------|
| R422 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R423 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R424 | 1-216-844-11 | METAL CHIP | 82K | 5% | 1/16W |
| R425 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R426 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R427 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R428 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R429 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R436 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R443 | 1-216-844-11 | METAL CHIP | 82K | 5% | 1/16W |
| R444 | 1-216-843-11 | METAL CHIP | 68K | 5% | 1/16W |
| R445 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R446 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R447 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R448 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R449 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W |
| R450 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R451 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R452 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R454 | 1-216-311-00 | METAL CHIP | 6.8 | 5% | 1/10W |
| R458 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R459 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R460 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R463 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R464 | 1-218-899-11 | METAL CHIP | 150K | 0.5% | 1/16W |
| R465 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R466 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R467 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R468 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R469 | 1-218-889-11 | METAL CHIP | 56K | 0.5% | 1/16W |
| R470 | 1-218-850-11 | METAL CHIP | 1.3K | 0.5% | 1/16W |
| R471 | 1-218-899-11 | METAL CHIP | 150K | 0.5% | 1/16W |
| R472 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R473 | 1-218-850-11 | METAL CHIP | 1.3K | 0.5% | 1/16W |
| R474 | 1-218-889-11 | METAL CHIP | 56K | 0.5% | 1/16W |
| R475 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R476 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R477 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R478 | 1-216-836-11 | METAL CHIP | 18K | 5% | 1/16W |
| R479 | 1-216-836-11 | METAL CHIP | 18K | 5% | 1/16W |
| R480 | 1-216-824-11 | METAL CHIP | 1.8K | 5% | 1/16W |
| R481 | 1-216-824-11 | METAL CHIP | 1.8K | 5% | 1/16W |
| R482 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| R483 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R484 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R485 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R486 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R487 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R488 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R489 | 1-218-847-11 | METAL CHIP | 1K | 0.5% | 1/16W |
| R490 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R491 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R492 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R493 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R494 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R495 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R496 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R497 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R501 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R502 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |

| Ref. No. | Part No. | Description | | | Remark |
|----------|--------------|-------------|------|------|---|
| R503 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R504 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R505 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R506 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R507 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R508 | 1-218-831-11 | METAL CHIP | 220 | 0.5% | 1/16W |
| R509 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) |
| R510 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) |
| R511 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) |
| R517 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R518 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W |
| R521 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AEP, UK, RU) |
| R526 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W |
| R527 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W |
| R529 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R530 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W |
| R540 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W |
| R542 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W |
| R603 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W (S535D/S735D) |
| R605 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S535D/S735D) |
| R701 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S335/S336/S345) |
| R702 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S535D/S735D) |
| R708 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S535D/S735D) |
| R710 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S535D/S735D) |
| R711 | 1-216-864-11 | METAL CHIP | 0 | 5% | 1/16W (S535D/S735D) |
| R712 | 1-216-833-91 | RES, CHIP | 10K | 5% | 1/16W (S535D/S735D) |
| R714 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R715 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R719 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R720 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R721 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R722 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R723 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W (S535D/S735D) |
| R724 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R725 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R727 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |
| R728 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W (S535D/S735D) |

MB-86

MS-48

POWER BLOCK

| Ref. No. | Part No. | Description | Remark |
|--|--------------|-----------------------------|--------------------------------|
| R729 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W (S535D/S735D) |
| R731 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S535D/S735D) |
| R733 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W (S535D/S735D) |
| R750 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R751 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R752 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R753 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R754 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R755 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R766 | 1-414-226-21 | INDUCTOR CHIP | 0uH |
| R767 | 1-414-226-21 | INDUCTOR CHIP | 0uH |
| R771 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S535D/S735D) |
| R772 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S535D/S735D) |
| R774 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S535D/S735D) |
| R781 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S535D/S735D) |
| R785 | 1-216-864-11 | METAL CHIP | 0 5% 1/16W (S335/S336/S345) |
| R801 | 1-216-833-91 | RES, CHIP | 10K 5% 1/16W (S735D) |
| R808 | 1-216-809-11 | METAL CHIP | 100 5% 1/16W (S735D) |
| < COMPOSITION CIRCUIT BLOCK > | | | |
| * RB101 | 1-233-270-11 | NETWORK, RES (8 GANG) | 10K |
| * RB102 | 1-233-270-11 | NETWORK, RES (8 GANG) | 10K |
| < VARIABLE RESISTOR > | | | |
| RV501 | 1-223-583-11 | RES, ADJ, CARBON | 1K |
| < VIBRATOR > | | | |
| X101 | 1-781-185-21 | VIBRATOR, CERAMIC | (12.5MHz) |
| X102 | 1-781-867-21 | VIBRATOR, CRYSTAL | (27MHz) |
| * A-6066-016-A MS-48 BOARD, COMPLETE ***** (Ref.No. 2, 000 Series) | | | |
| < CONNECTOR > | | | |
| CN001 | 1-794-197-11 | CONNECTOR, FFC/FPC | 6P |
| < SWITCH > | | | |
| S001 | 1-771-562-11 | SWITCH, LEVER (TRAY SENSOR) | |
| S002 | 1-762-386-11 | SWITCH, PUSH (CHUCK SENSOR) | |

| Ref. No. | Part No. | Description | Remark |
|-------------------------|--------------|---|-------------------------|
| * | 1-468-506-31 | POWER BLOCK (HS16S9E) | ***** |
| < CAPACITOR > | | | |
| C211 | 1-107-895-11 | ELECT | 330uF 35V |
| C213 | 1-126-947-11 | ELECT | 47uF 35V |
| C301 | 1-126-960-11 | ELECT | 1uF 50V |
| C311 | 1-107-895-11 | ELECT | 330uF 35V |
| C313 | 1-126-947-11 | ELECT | 47uF 35V |
| C315 | 1-126-947-11 | ELECT | 47uF 35V |
| C511 | 1-107-911-11 | ELECT | 220uF 35V |
| C513 | 1-126-947-11 | ELECT | 47uF 50V |
| C611 | 1-107-895-11 | ELECT | 330uF 35V |
| C613 | 1-126-948-11 | ELECT | 100uF 35V |
| < DIODE > | | | |
| D101 | 9-885-000-79 | DIODE | S1WBA60 |
| D104 | 8-719-983-00 | DIODE | MTZJ-T-77-2.4B |
| D105 | 8-719-991-33 | DIODE | 1SS133T-77 |
| D211 | 8-719-027-43 | DIODE | S2L20U |
| D212 | 8-719-160-87 | DIODE | RD33FB2 |
| D311 | 8-719-018-83 | DIODE | D2S4M |
| D315 | 8-719-991-33 | DIODE | 1SS133T-77 |
| D511 | 8-719-032-12 | DIODE | D1NS6 |
| D611 | 8-719-500-50 | DIODE | D3S4M |
| D613 | 8-719-991-33 | DIODE | 1SS133T-77 |
| D615 | 8-719-064-11 | DIODE | SPR-325MVW (ON/STANDBY) |
| < IC > | | | |
| IC301 | 8-759-420-19 | IC | AN1431T |
| < PHOTO COUPLER > | | | |
| △PC101 | 8-749-923-91 | PHOTO COUPLER | PS2501 |
| < TRANSISTOR > | | | |
| Q102 | 8-729-024-00 | TRANSISTOR | 2SC3377 |
| Q312 | 8-729-901-41 | TRANSISTOR | 2SC1740S |
| Q611 | 8-729-921-42 | TRANSISTOR | 2SA1679 |
| Q615 | 8-729-029-46 | TRANSISTOR | DTA143ESA |
| Q621 | 8-729-029-68 | TRANSISTOR | DTC114TSA |
| (Ref.No. 3, 000 Series) | | | |
| MISCELLANEOUS ***** | | | |
| 7 | 1-771-913-11 | SWITCH, TACTILE (S335/S336/S345/S535D) | |
| 58 | 1-418-097-11 | ENCORE, ROTARY (S735D) | |
| 110 | 1-792-457-11 | CABLE, FLEXIBLE FLAT (FMM-33) | |
| △114 | 1-769-744-91 | CORD, POWER (EXCEPT S336: AUS/S335D: AUS) | |
| △114 | 1-790-588-11 | CORD, POWER (S336: AUS/S735D: AUS) | |
| 117 | 1-792-455-11 | CABLE, FLEXIBLE FLAT (FAE-1) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AP, UK, RU) | |
| 118 | 1-792-456-11 | CABLE, FLEXIBLE FLAT (FEA-5) (S335: AEP, UK, RU/S336: AEP, UK/ S535D/S735D: AP, UK, RU) | |

The components identified by mark
△ or dotted line with mark △ are
critical for safety.
Replace only with part number speci-
fied.

| Ref. No. | Part No. | Description | Remark |
|--|------------------------------|---|--------|
| △ 220 M001 | A-6062-397-A 1-541-632-11 | OPTICAL PICK-UP KHM-220AAA/J1RP MOTOR, DC (LOADING) | |
| ACCESSORIES & PACKING MATERIALS ***** | | | |
| | 1-418-988-21 | COMMANDER, STANDARD (RMT-D115P) (S335: AEP, UK, RU/S336: AEP, UK) | |
| | 1-418-988-31 | COMMANDER, STANDARD (RMT-D115E) (S335: E, EA/S336: AUS/S345) | |
| | 1-418-989-31 | COMMANDER, STANDARD (RMT-D120P) (S735D: AEP, UK, RU, E) | |
| | 1-418-989-41 | COMMANDER, STANDARD (RMT-D1200) (S735D: E, AUS) | |
| | 1-418-989-51 | COMMANDER, STANDARD (RMT-D120E) (S735D: EA) | |
| | 1-418-991-21 | COMMANDER, STANDARD (RMT-D116P) (S535D) | |
| △ | 1-569-008-21 | ADAPTOR, CONVERSION 2P (S335: E) | |
| | 1-575-334-11 | CORD, CONNECTION (STEREO AV CABLE 1.5m) (S335/S336/S345/S535D) | |
| | 1-575-334-41 | CORD, CONNECTION (STEREO AV CABLE 1.5m) (S735D) | |
| | 1-575-335-21 | CORD, CONNECTION (S-VIDEO CABLE 1.5m) (S535D) | |
| △ | 1-770-019-11 | ADAPTOR, CONVERSION PLUG 3P (S335: UK/S336: UK/S535D: UK/S735D: UK) | |
| | 1-776-078-31 | CORD, CONNECTION (S-VIDEO CABLE 1.5m) (S735D) | |
| | 3-053-633-01 | COVER, BATTERY (for RMT-D115E/D115P/D116P) (S335/S336/S345/S535D) | |
| | 3-055-539-01 | COVER, BATTERY (for RMT-D120E/D1200/D120P) (S735D) | |
| | 3-059-581-11 | MANUAL, INSTRUCTION (ENGLISH) (S335: AEP, UK, RU) | |
| | 3-059-581-71 | MANUAL, INSTRUCTION (RUSSIAN) (S335: RU) | |
| | 3-060-986-11 | MANUAL, INSTRUCTION (ENGLISH) (S335: AEP, UK, RU/S336: AEP, UK) | |
| | 3-060-986-21 | MANUAL, INSTRUCTION (FRENCH, GERMAN) (S335: AEP/S336: AEP06) | |
| | 3-060-986-31 | MANUAL, INSTRUCTION (ITALIAN, DUTCH) (S335: AEP/S336: AEP06) | |
| | 3-060-986-41 | MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (S335: AEP51/S336: AEP08) | |
| | 3-060-986-51 | MANUAL, INSTRUCTION (DANISH, FINISH) (S335: AEP51/S336: AEP08) | |
| | 3-060-986-61 | MANUAL, INSTRUCTION (SWEDISH, NORWEGIAN) (S335: AEP51/S336: AEP08) | |
| | 3-060-986-71 | MANUAL, INSTRUCTION (RUSSIAN) (S335: RU) | |
| | 3-060-987-11 | MANUAL, INSTRUCTION (ENGLISH) (S335: E, EA/S336: AUS/S345) | |
| | 3-060-987-41 | MANUAL, INSTRUCTION (FRENCH) (S345) | |
| | 3-060-987-61 | MANUAL, INSTRUCTION (ARABIC) (S335: E, EA) | |
| | 3-061-301-41 | MANUAL, INSTRUCTION (ENGLISH) (S535D) | |
| | 3-061-301-51 | MANUAL, INSTRUCTION (FRENCH, GERMAN) (S535D: AEP53) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| | 3-061-301-61 | MANUAL, INSTRUCTION (ITALIAN, DUTCH) (S535D: AEP53) | |
| | 3-061-301-71 | MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (S535D: AEP52) | |
| | 3-061-301-81 | MANUAL, INSTRUCTION (DANISH, FINNISH) (S535D: AEP52) | |
| | 3-061-301-91 | MANUAL, INSTRUCTION (SWEDISH, NORWEGIAN) (S535D: AEP52) | |
| | 3-061-775-31 | MANUAL, INSTRUCTION (ENGLISH) (S735D: AEP, UK, RU) | |
| | 3-061-775-41 | MANUAL, INSTRUCTION (FRENCH, GERMAN) (S735D: AEP50) | |
| | 3-061-775-51 | MANUAL, INSTRUCTION (ITALIAN, DUTCH) (S735D: AEP50) | |
| | 3-061-775-61 | MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (S735D: AEP51) | |
| | 3-061-775-71 | MANUAL, INSTRUCTION (DANISH, FINNISH) (S735D: AEP51) | |
| | 3-061-775-81 | MANUAL, INSTRUCTION (SWEDISH, NORWEGIAN) (S735D: AEP51) | |
| | 3-061-775-91 | MANUAL, INSTRUCTION (RUSSIAN) (S735D: RU) | |
| | 3-061-776-11 | MANUAL, INSTRUCTION (ENGLISH) (S735D: E, EA, AUS) | |
| | 3-061-776-51 | MANUAL, INSTRUCTION (FRENCH) (S735D: E, EA) | |

The components identified by mark
△ or dotted line with mark △ are
critical for safety.
Replace only with part number speci-
fied.